


Operating Instructions

A quick look at your device

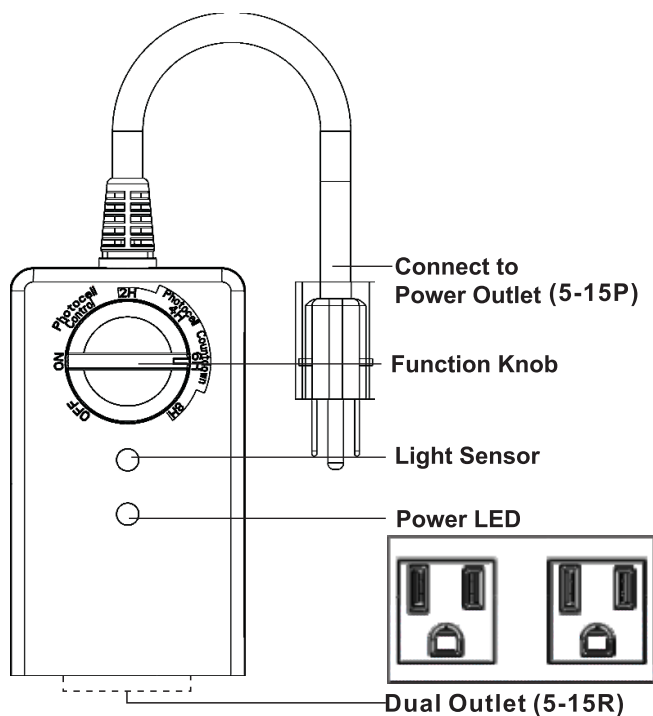

SAFETY WARNING

No Serviceable parts inside.

Do not open or tamper with unit.

- Plug directly into an electric outlet
- Connect to grounded 3-prong outlet only
- Do not use a 3- to 2-prong adaptor to defeat the grounding pin.
- Remove timer from outlet before cleaning
- Keep children away from timer & outlet

Risk of fire

- For only 125 volt usage
- Do not use to control irons and cooking appliances, etc.
- Do not exceed the recommended electrical ratings

Instructions Light sensor must be in sunlight to function.

- Automatically turns on at dusk for 2, 4, 6 or 8 hours or turns off at dawn
- Dual outlets controlled by timer
- Extra untimed outlet for use with untimed products
- "Power on" indicator light
- Durable, reliable, all-weather construction
- 1,000 Watts of outdoor use
- Operating temperature range: 14°F–104°F (-10°C–40°C)
- Keep the timer upright when in use.

1. Turn dial selector to the "off" position and plug timer into three conductor power outlet.
2. Turn dial selector to timing interval desired (i.e., 2 Hrs, 4 Hrs, 6 Hrs, 8 Hrs, dusk to dawn, etc.).
(For manual power operation, turn selector to "on" position, and to "off" as desired).
3. Plug outdoor lights into the timer outlet-lights will turn on automatically at dusk.

Caution

This timer must be mounted in a vertical position in sunlight with the receptacles facing downward and above the ground level.

Customer Service Assistance: 1-909-592-1881
Email: Support@centurytimer.com
Business Hours of Operation: 9AM to 5PM Pacific time, Monday to Friday
Manufactured and Distributed by: Century Products Inc.
www.centurytimer.com