

OPERATING INSTRUCTIONS

WIRELESS REMOTE CONTROL ELECTRICAL OUTLET

BNR-U116

PRODUCT



FEATURES

- Easily controlled by the remote control from up to 100 feet in line-of-sight.
- Separate on and off buttons on the remote control.
- Outlets will remain powered off after a power outage to save energy.
- Power output up to 1250W at 125V(60Hz)
- Low power consumption, reduces energy use and extends product life by up to 15%.
- Manual pairing and unpairing.

SET UP

- Install one 12V/23A battery in the remote control's battery compartment, making sure the polarity of the battery is correct.
- Plug each outlet switch into a socket and plug a device or appliance into each outlet.
- Press the on/off buttons for the respective channel on the remote control to operate the outlet switch.

RESETTING AN OUTLET

Should you wish to unpair an outlet receiver from the remote, or if your outlets are unresponsive to the remote, the outlets can be reset following below steps.

1. Remove the outlet receiver from the power socket.
2. Press and hold "Learning & ON/OFF" button on the outlet receiver.
3. While still holding the button, plug the outlet receiver to a power socket and wait to see the indicator to flash.
4. When the indicator stops flashing, you may release the button, and the reset process is now complete.

NOTES

1. Regularly change the battery in the remote control for best performance. If you find the outlet switches are not responding or the LED indicator on the remote control becomes dim, the battery should be replaced. Always dispose of old batteries properly with consideration for the environment.
2. Make sure the battery and outlets are installed firmly and correctly for safe operation.
3. These outlet switches are for indoor use only. Avoid exposure to high temperature sources, strong sunlight and moisture. The outlets are best used in air as with good air circulation.
4. Do not exceed the maximum load current of 10A.
(Approximately 1200W)

TROUBLESHOOTING

In the case that one or more of the outlet receivers do not respond to the remote control, please follow the steps given below to resolve the issue:

1. Check to see if the battery of the remote is low and needs replacement.
2. Make sure that the outlet receiver correctly placed in the power socket.
3. Make sure that the outlet receiver is used in an area with proper air circulation to avoid overheating.
4. Remove the outlet receiver from the power socket, then plug the outlet receiver back into the power socket. Press and hold the "Learning & ON/OFF" button till the indicator start to flash. While holding the "Learning & ON/OFF" button, press and hold the corresponding "ON" button on the remote until you hear a "click". The indicator will stop flashing indicating that pairing is successful.

TECHNICAL DATA

Voltage: 125V~60Hz
Max. power: 10A 1250W
Transmission frequency: 433.92MHz
Remote battery: 12V (23A)

Customer Service Assistance: 1-909-592-1881
Email: Support@centurytimer.com
Business Hours of Operation: 9AM to 5PM Pacific time, Monday to Friday
Manufactured and Distributed by: Century Products Inc.
www.centurytimer.com