 


# TWO CHANNEL DUAL OUTLET DIGITAL TIMER MANUAL

Ref.BND-60/SU105

## BRIEF INTRODUCTION

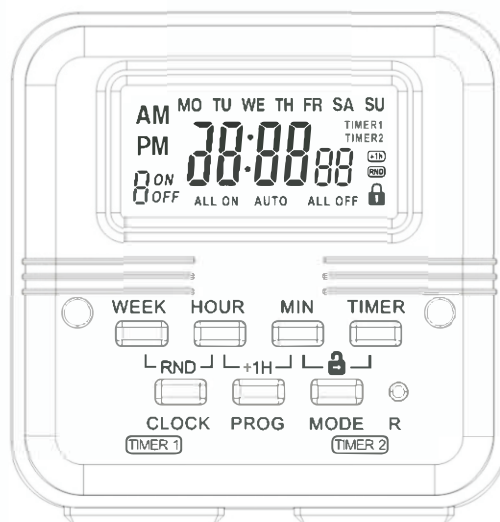

### Note:

#### Charge the internal battery

If the screen is blank, plug the timer into any outlet for 30 minutes to charge the internal battery.

#### Reset the timer

Press the "RESET" button with the tip of a small non-metallic insulated tool, such as a pencil or toothpick.

## ILLUSTRATION OF THE LCD DISPLAY

**ALL ON:** Both outlets are constantly ON.

**AUTO:** The timer is working as programmed.

**ALL OFF:** Both outlets are constantly OFF.

**MO, TU, WE, TH, FR, SA, SA:** Days of the week.

**AM/PM:** forenoon and afternoon

**TIMER1:** Timer #1 to control the outlet on the left.

**TIMER2:** Timer #2 to control the outlet on the right.

**+1H:** Daylight Saving Time

**RND:** Random Security Function

**🔒 :** LOCKED

## ILLUSTRATION OF THE BUTTONS

**WEEK+HOUR:** Activate/deactivate Random function

**HOUR+ MIN:** Activate/deactivate daylight saving time

**MIN+TIMER:** Unlock

**WEEK:** Select day(s) of the week

**HOUR:** Select hour

**MIN:** Select minute

**TIMER:** Select timer

**CLOCK:** Display or set time

**PROG:** Switch between programs

**MODE:** Switch between all 3 modes

**R:** Reset

# OPERATING INSTRUCTIONS

## SET THE CLOCK

Press **R** using a pin to reset and initialize the timer. The clock will be shown a few seconds after the initialization is complete. You can now set the current time and day of the week.



### 1. Set the day of the week

Hold **CLOCK** and press **WEEK** till the current day of the week is shown, release **CLOCK** to confirm.

### 2. Set the hour

Hold **CLOCK** and press **HOUR** till the current hour is shown, release **CLOCK** to confirm.

### 3. Set the minute

Hold **CLOCK** and press **MIN** till the current minute is shown, release **CLOCK** to confirm.

The clock is now correctly set.

 
## OPERATION MODE SELECTION

Use **MODE** button to switch between a modes: ALL ON, AUTO and ALL OFF.

## PROGRAM THE TIMER

1. Switch the operation mode to **AUTO**.

2. Press **PROG** to start setting the first program. The display will show 1<sup>ON</sup>.

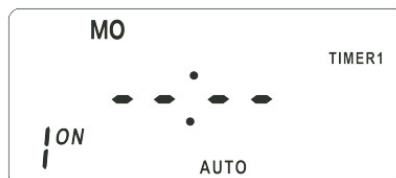

3. Use **WEEK** to select the day(s) of the week for programming to be ON.

 
The options would cycle in the following sequence: (**MO TU WE TH FR SA SU**), (**MO**), (**TU**), (**WE**), (**TH**), (**FR**), (**SA**), (**SU**), (**MO TU WE TH FR**), (**SA SU**), (**MO TU WE TH FR SA**), (**MO WE FR**), (**TU TH SA**), (**MO TU WE**), (**TH FR SA**).

Use **HOUR** and **MIN** buttons to set the desired ON time for the program.

4. Press **TIMER** to select the desired outlet(s) to be controlled by the program.

The display would show **TIMER1**, **TIMER2** or **TIMER1** <sup>TIMER1</sup> <sub>TIMER2</sub>.


5. Press **PROG** to input the OFF time for this program. The display now shows 1<sup>OFF</sup>.

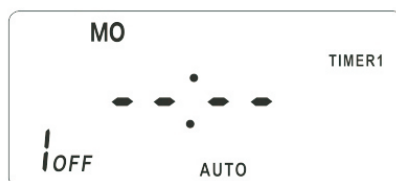

6. Repeat **STEPS 3** and **4** to complete the programming.

7. When setting a program, you can press **MODE** button to delete the current input and press **MODE** again to resume.

 8. When the first program is correctly set, press **PROG** to start setting the second program. The display now shows 2<sup>ON</sup>.

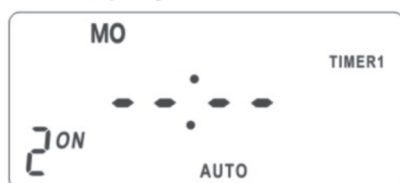

9. Repeat **STEPS 3-6** to complete the second program.  
10. Up to 8 programs can be set. When the 8th program is set, the screen returns to the first program.  
11. A program showing “-:-:-” is invalid.  
12. You can press **CLOCK** to quit programing and return to clock display at any time. In case no input is made with 15 seconds during programing, the display will return to clock with **LOCKED** icon.

## SPECIAL FEATURES

### 1. Daylight Saving Time

Press **HOUR** and **MIN** at the same time to activate the daylight saving time. The timer will add one hour to the current time. The +1h icon will show on the screen. Press **HOUR** and **MIN** at the same time again to resume, and the +1h icon will disappear.

### 2. Random Security

Press **WEEK** and **HOUR** simultaneously to activate the Random Security function and the **RND** icon will show on the screen. In this mode, the timer will randomly extend the program ON duration by 2-32 minutes to create a lived-in look.

The **RND** icon will keep flashing during the running of a program and will stop flashing when the program is over.

To exit the random security setting, press **WEEK** and **HOUR** at the same time.

3. Whenever there is no input within 15 seconds, the timer will automatically be locked and the **LOCKED** icon will appear on the bottom right corner of the screen. To unlock, press **MIN** and **TIMER** at the same time.

4. Press **R**, you can reset the timer. Display will show 12:00 AM.



## TECHNICAL SPECIFICATIONS

Supply Voltage: 125V~, 60Hz

Contact Rating: 15A resistive

8A Tungsten, 1/2 HP, TV-5

8A 1000W Electronic Ballast

Operating Temperature: 0 °C-50 °C

Storage Temperature: -20 °C-60 °C

Insulation Class: II

Protection Class: IP 20

Min.setting time: 1 minute

Max.setting time: 7 days

Customer Service Assistance: 1-909-592-1881

E-mail: support@bn-link.com

Business Hours of Operation: 9AM to 5PM Pacific time, Monday to Friday

Manufactured and Distributed by: Century Products Inc. www.bn-link.com

DESIGNED IN CALIFORNIA, MADE IN CHINA