

TECHNICAL DATA

Voltage.....	125V~60Hz
Resistive	15A 1875W
Tungsten	10A 1250W
Transmission frequency.....	433.92MHz
Remote battery	12V/23A

BN-LINK®

OUTDOOR REMOTE CONTROL OUTLET



ENERGY
SAVING

FEATURES

- Easily controlled by the remote control from up to 100 feet in line-of-sight.
- Separate on and off buttons on the remote control.
- Outlets will remain powered off after a power outage to save energy.
- Power output up to 1875W at 125V(60Hz).
- Low power consumption, reduces energy use and extends product life by up to 15%.
- Manual pairing and unpairing.

SETUP

- Install one 12V/23A battery in the remote control's battery compartment, making sure the polarity of the battery is correct.
- Plug the receiver into a outlet and plug a device or appliance into an outlet of the receiver.
- Press the ON or OFF button on the remote control to operate the receiver outlet.

NOTES

- Regularly change the battery in the remote control for best performance. If you find the outlet switch is not responding or the LED indicator on the remote control becomes dim, the battery should be replaced. Always dispose of old batteries properly with consideration for the environment.
- Make sure the battery and outlets are installed firmly and correctly for safe operation.
- The outlet switch is for indoor and outdoor use

BN-LINK INC.

12991 Leffingwell Avenue, Santa Fe Springs
Customer Service Assistance: 1.909.592.1881
E-mail: support@bn-link.com
Http://www.bn-link.com
Hours: 9AM - 5PM PST, Mon - Fri
Designed in California Made in China

Please keep this manual
www.bn-link.com

- Use only in well-ventilated areas.
- Do not exceed the maximum load current of 15A(Approximately 1875W).

PROGRAMMING THE OUTLETS

Notes: The outlet is pre-programmed for immediate use, but the configuration can be customized to meet your needs.

To pair receiver to transmitter

- 1.Plug the receiver outlet to a power outlet.
- 2.Press and hold the ON/OFF button on the receiver outlet for 3 seconds and the LED indicator will start flashing slowly.
- 3.Release the ON/OFF button on the receiver and press ON or OFF button on the transmitter to pair the transmitter to the receiver.
To quit the paring mode, press and hold the ON/OFF button on the receiver for 3 seconds until the LED indicator goes off.

RESETTING AN OUTLET

Should you wish to unpair an outlet receiver from the remote, or if your outlet is unresponsive to the remote, the outlet can be reset following below steps.

To unpair receiver from transmitter

- 1.Plug the receiver outlet to a power outlet.
- 2.Press and hold the ON/OFF button on the receiver outlet for 3 seconds, the LED indicator will start flashing slowly. Keep holding the button until the LED indicator flashes fast and then goes off.
- 3.The receiver is now unpaired from the transmitter.

TROUBLESHOOTING

In the case that the outlet receiver does not respond to the remote control, please follow the steps given below to resolve the issue:

1. Check to see if the battery of the remote is low and needs replacement.
2. Make sure that the outlet receiver is correctly placed in the power socket.
3. Make sure that the outlet receiver is used in an area with proper air circulation to avoid overheating.
4. Reset and program the outlet