#### **TECHNICAL DATA**

Voltage	125V~60H
Resistive	10A 1250V
Tungsten	5A 625W
Transmission frequency	433.92MHz
Remote battery	12V 23A





# INDOOR REMOTE CONTROL OUTLET



#### BN-LINK INC.

12991 Leffingwell Avenue, Santa Fe Springs Customer Service Assistance: 1.909.592.1881 E-mail: support@bn-link.com Http://www.bn-link.com Hours: 9AM - 5PM PST, Mon - Fri Designed in California Made in China



Please keep this manual

www.bn-link.com

#### **FEATURES**

- Easily controlled by the remote control from up to 100 feet in line-of-sight.
- Rocker switches on the remote control.
- Outlets will remain powered off after a power outage to save energy.
- Power output up to 1875W at 125V(60Hz).
- Low power consumption, reduces energy use and extends product life by up to 15%.
- Manual pairing and unpairing.
- Wall mounting plate included.

#### SETUP

- Slide downward and remove the back panel of the remote control.
- Install one 12V 23A battery in the remote control's battery compartment, making sure the polarity of the battery is conrect.
- Plug the receiver into an outlet and plug a device or appliance into an outlet of the receiver.
- Press the ON/OFF switch on the remote control to operate the receiver outlet.

#### **NOTES**

- Regularly change the battery in the remote control for best performance. If you find the outlet switch is not responding or the LED indicator on the remote control becomes dim, the battery should be replaced. Always dispose of old batteries properly with consideration for the environment.
- Make sure the battery and outlets are installed firmly and correctly for safe operation.
- · The outlet switch is for indoor use.

- Use only in well-ventilated areas.
- Do not exceed the maximum load current of 15A(Approximately 1875W).

## PROGRAMMING THE OUTLETS

Notes: The outlet is pre-programmed for immediate use, but the configuration can be customized to meet your needs. To pair receiver to transmitter

- Plug the receiver outlet to a power outlet.
   Press and hold the ON/OFF button on the
   receiver outlet for 3 seconds and the LED.
- indicator will start flashing slowly.2. Release the ON/OFF button on the receiver and press any ON/OFF switch on the transmitter to pair the transmitter to the
- 3. To quit the paring mode, press and hold the ON/OFF button on the receiver for 3 seconds until the LED indicator goes off.

receiver.

### **RESETTING AN OUTLET**

Should you wish to unpair an outlet receiver from the remote, or if your outlets are unresponsive to the remote, the outlets can be reset following below steps.

- Remove the outlet receiver from the power socket.
   Press and hold "Learning & ON/OFF"
- button on the outlet receiver.

  2. While still holding the button, plug the outlet receiver to a power socket and
- outlet receiver to a power socket and wait to see the indicator to flash.
- When the indicator stops flashing, you may release the button, and the reset process is now complete. You may program the outlet after resetting.

#### TROUBLESHOOTING

In the case that the outlet receiver does not respond to the remote control, please follow the steps given below to resolve the issue:

- 1. Check to see if the battery of the remote is low and needs replacement.
- 2. Make sure that the outlet receiver is correctly placed in the power socket.
- 3. Make sure that the outlet receiver is used in an area with proper air circulation to avoid overheating.
- 4. Reset and program the outlet