


## Wireless Push Button Instruction

### 1. Turn On Switch

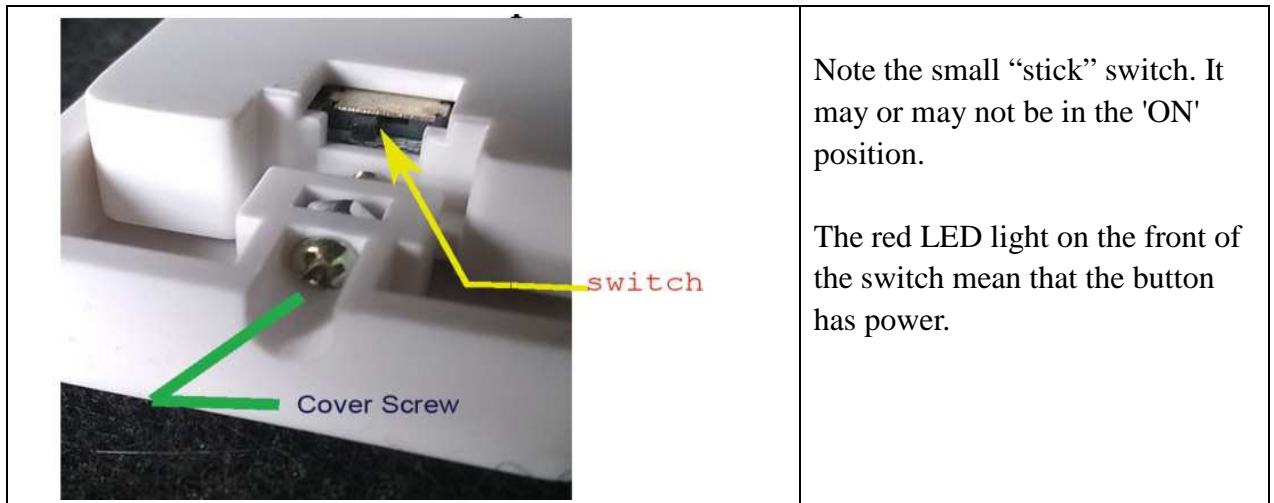

### 2. Encode

The wireless push buttons are encoded with the opener component assembly.

2.1 Delete: Press the "encode" button until the buzzer sound ceases, then release the "encode" button.

2.2 Code: Press the "encode" button once - the buzzer will sound. Now press the "PRESS" button – the buzzer sound will cease, indicating the code has successfully been learned. When using the remote control, the buzzer will sound for 2 seconds.

2.3 Note: If when you press the "PRESS" button the buzzer beeps twice, this indicates the learning has failed - please repeat step 2 again.

### 3. Battery Replacement

Remove the cover screw

Remove assembly screws and remove tape from the battery

Positive side up. Do not lose the small springs.

