


- To enter Settings, press the Arrow and Rocket buttons at the same time. The Critter will show white, red, green, then blue and the buttons will start blinking to let you know that the Settings are active.
- Each Setting is represented by a different LED color that will show before each Setting loads (see graphic below). The first Setting is Brightness Control. Press the Arrow button to go to the next Setting.

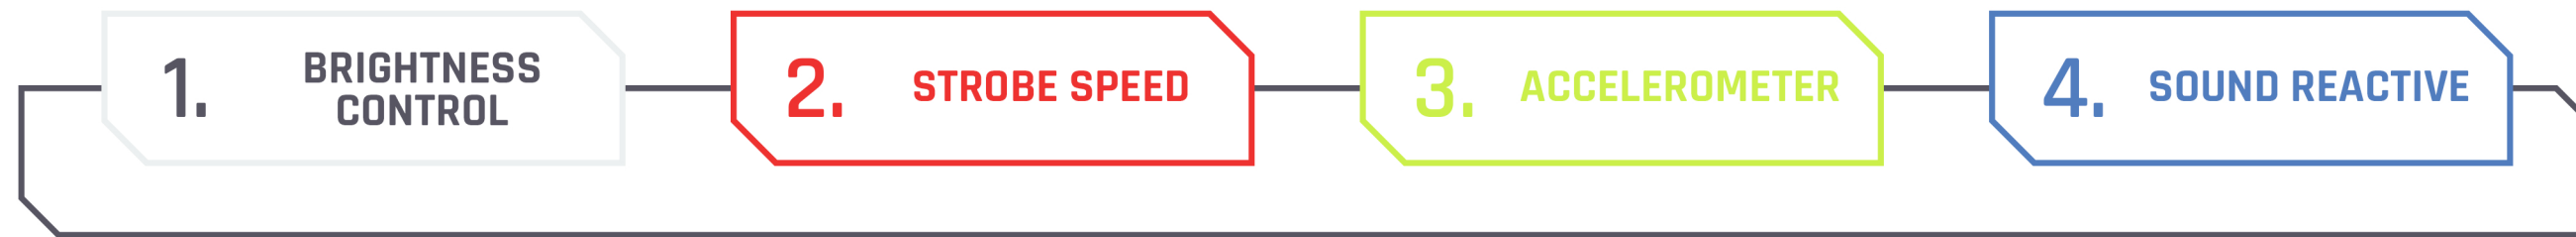

- Brightness Control and Strobe Speed are adjustable Settings. Adjust the levels of these Settings by pressing the Rocket button. There is no option to adjust the Accelerometer or Sound Reactive Settings.
- To save a Setting, hold the Rocket button until the LED pulses white 3x and turns off (next Setting loads).
- To exit Settings, hold the Power button and release once the LED pulses red. To deactivate any Setting, press the Arrow and Rocket buttons at the same time, or do a Soft Reset (turn the Critter off and hold the Power button until it turns on in m1).

**SETTINGS FUNCTIONALITY**

settings function	current state	buttons	hold/press	LED function
1. enter Settings	on		press	white, red, green, then blue button LEDs start continuously blinking
2. navigate			press	each time you navigate to the next Setting, the LED will show one of the following colors for 1 sec.: white: Brightness Control   red: Strobe Speed green: Accelerometer   blue: Sound Reactive
3. adjust Setting	Strobe Speed or Brightness Control		press	
4. activate Setting	viewing selected Settings		short hold (1.5 sec.)	LED pulses white 3x, then turns off for 1 sec., next Setting loads
5. exit Settings (activates any saved Settings)	at any point within Settings		short hold (any duration)	release when the LED starts pulsing red
6. deactivate all saved Settings	Setting(s) activated			white, red, green, then blue