


MAIN MENU (m1–m9)

- The Main Menu has 9 modes that you can explore using the Arrow and Rocket buttons.
- Each mode has its own playlist. To enter the playlist of a mode, hold the Arrow button and release once the LED pulses white.
- To exit a playlist and return to the Main Menu, hold the Power button and release once the LED pulses red.
- To adjust the speed of a mode, hold the Rocket button.
- Soft Reset (If you're lost, do this): Turn off your Critter and hold the Power button until it turns on in m1 (see white mode below).

- Navigate Up / Enter Playlist
- Navigate Down / Adjust Mode Speed
- On/Off / Exit Playlist

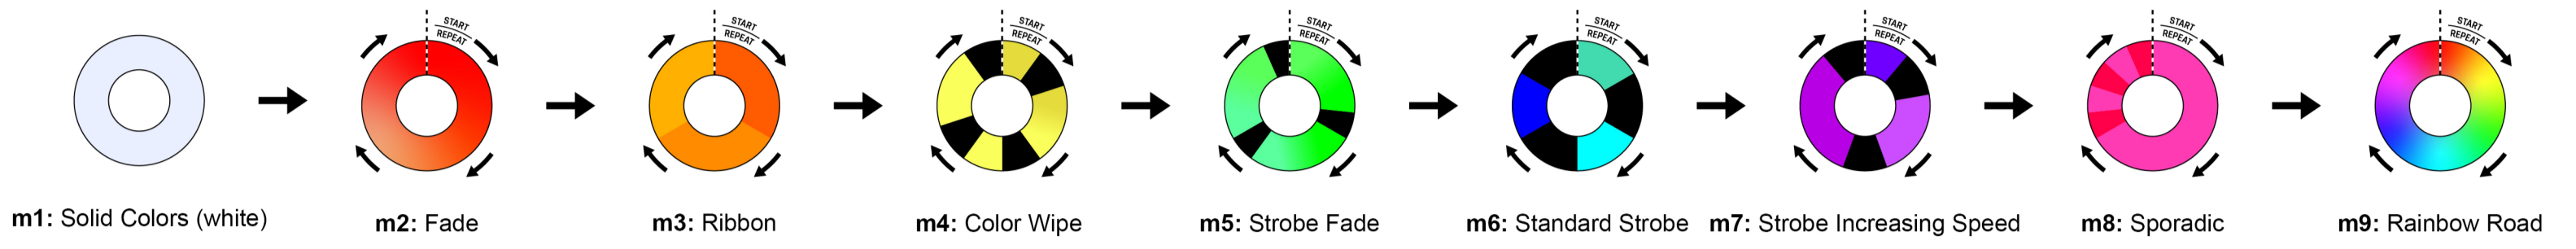

SOLID COLORS (m1)

- m1's playlist contains 39 solid color options. To enter this playlist, find m1 (see white mode above) and use the instructions for entering a mode (see above).

1 White	6 Gabardine	11 Blimey	16 Swan Dive	21 Stellar	26 Candyland	31 Pterodactyl	36 Stardust Red
2 Red	7 Waffle	12 Soufly	17 Algae	22 Blue	27 Reece Davis	32 Mystery Meat	37 Stardust Green
3 Cashmere	8 Obzen	13 Green	18 In Bloom	23 Sentinel	28 Maneater	33 Natural White	38 Stardust Blue
4 Tardigrade	9 Bumblebee	14 No Leaf Clover	19 Puffin	24 Grape Juice	29 Low-Key	34 Warm White	39 Black
5 Peaches 'n Cream	10 Lemon Drop	15 Jungle	20 Tricky Fish	25 UV	30 Nebula	35 Cool White	

PLAYLISTS

- m2–m8 have playlists that store 8 presets. All of the presets within a playlist have the same pattern. For example, m2 (see red/orange mode above) is the Fade Mode and its playlist has 8 Fade Mode options.
- The Rainbow Road's (m9) playlist stores 30 presets (see rainbow mode above).

EXTRA

- The Critter will always turn on in the last mode used when it was turned off.

For more instructions, go to: www.antsonamelon.com/pages/user-guides

BASIC FUNCTIONALITY

basic function	current state	buttons	hold/press	LED function
lock / unlock	on / off		press same time + release	lock: red 3x unlock: green 3x
turn on / off	on / off		press	
navigate up / navigate down	on		press	
enter playlist m1–m9 m1 contains 39 solid colors m2–m8 each contain 8 presets m9 contains 30 presets	m1–m9 (Main Menu)		hold until LED pulses white (release before 3 sec.)	m1: loads color option playlist m2–m9: load preset playlist
exit playlist, return to Main Menu (m1–m9)	on		hold until LED pulses red (release before 5 sec.)	m1–m9
check battery level (LED indicator will also show when unplugging from power source)	off		short hold (1.5s)	
battery charging indicator	off, plugged into charging source			button LEDs pulse
fully charged battery indicator	off, plugged into charging source			button LEDs blink every 10 sec.

For more instructions, go to: www.antsonamelon.com/pages/user-guides

EXTRA FUNCTIONALITY

extra functionality	current state	buttons	hold / press	LED function
LED function: PWM (default setting) or Analog *patent pending* PWM: beautiful "tracers" in fiber optics, ideal for light whippers Analog: vivid and rich colors, ideal for light painters	on		press	PWM: white 1 sec. Analog: red 1 sec.
increase preset pattern speed (permanently adjust the speed of any preset)	default mode or preset m2–m9		1 sec. hold = 10% speed increase	
activate Autoplay (each preset in m9 will automatically play for a specific amount of time)	m9		press 2x fast repeat to activate the following autoplay speeds: .25, 1, 15, 30 sec.	
deactivate Autoplay	Autoplay in m9		hold and release when LED pulses red	return to default of m9
turn off button LEDs (repeat to reverse)	off		short hold (1.5 sec.)	Critter turns on
Momentary Press activate/deactivate (disables all other functionality for power button)	on		press 3x	yellow
Momentary Press (this feature allows you to temporarily turn the LED on by holding the power button)	when activated		hold	LED on
soft reset (go to default of m1 (color white))	off		short hold (1.5 sec.)	m1 (color white)
factory reset	off		long hold (5 sec.)	rainbow burst

For more instructions, go to: www.antsonamelon.com/pages/user-guides