
■ The RGB Critter's Main Menu consists of 9 different modes (m1–m9) that you can explore using the Arrow button (see Main Menu graphic below). Each mode is either a solid color (m1) or a repeating pattern of fades and/or strobes (m2–m8). The Rainbow Road (m9) contains 20 presets (m9 preset 1–m9 preset 20).

If at any point you want to return to the Main Menu (m1–m9), simply use a short hold of the Power button.

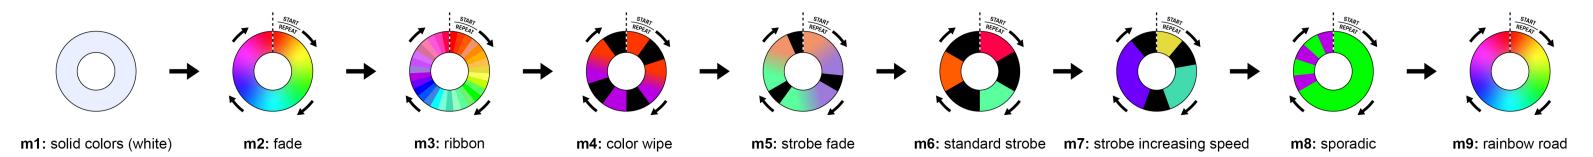


## SOLID COLORS (m1)


■ m1 contains 39 solid color options. To view these solid color options, find m1 (color: white) and press the Rocket button 1x. You are now able to explore the 39 colors using the Arrow and Rocket buttons.





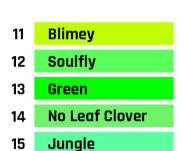



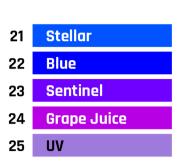







#### **ACCESSING PRESETS**

- Each mode m1–m8 contains 4 presets. The presets use the same pattern as the selected mode (m1–m8). For example, m2 is the "fade mode" (1 color fading into the next, then repeat). If you want to view more "fade mode" presets, you will access them within the presets of m2 (m2 preset 1–m2 preset 4).
- To view presets of m1–m8, navigate to the desired mode and use a long hold of the Arrow button until the first preset loads. Explore the presets using the Arrow and Rocket buttons. Note: While holding the Arrow button, the LED will turn white. You need continue holding the Arrow button until the first preset loads.
- The Rainbow Road (m9) contains up to 20 presets. The Rainbow Road's presets are a combination of presets sourced from m1–m8.

For more instructions, go to: www.antsonamelon.com/pages/user-guides

### **EXTRA INFORMATION**

- When turning on the Critter for the first time, or after a factory reset, you will be viewing m1 (solid color: white). The Critter will always turn on in the last mode or preset used when it was turned off.
- Hold Durations:
  - Short: 1.5 secondsMedium: 3 secondsLong: 5 seconds

### BASIC FUNCTIONALITY

**CRITWARE 1.0** 

basic function	current state	buttons	hold/press	LED function
lock / unlock  Due to battery loss issues, do not lock when the Critter is turned off.	on / off		medium hold	red 3x
turn on	off		press	LED on
turn off	on		press 3x	LED off
navigate up / navigate down downward navigation not available in main menu (m1–m9)	on		press	
activate the following in m1 and m9: -m1 (39 solid colors) -m9 (rainbow road)	m1 and m9		press	
activate presets (m1–m8 each contain 4 presets)	m1–m8		long hold (wait until preset loads)	LED will turn white (keep holding), then loads preset 1 of 4 of m1-m9
exit to main menu (m1–m9)	preset of m1–m9		short hold	load default m1–m9
check battery level	off		medium hold	0-10% 10-25% 25-50% 50-75% 75-90% 90-100%  RED
battery charging indicator	off, plugged into charging source			button LEDs pulse

For more instructions, go to: www.antsonamelon.com/pages/user-guides

# **EXTRA FUNCTIONALITY**

**CRITWARE 1.0** 

extra functionality	current state	buttons	hold/press	LED function
speed control	m2–m8		press or hold	increase speed
LED mode: analog (default setting) or PWM analog: vivid and rich colors, ideal for light painting PWM: beautiful "tracers" in fiber optics, ideal for light whippers	on		short hold	LED off 1 sec
turn on with buttons LEDs turned off (repeat to reverse)	off		short hold	
momentary press activate / deactivate	on		short hold	yellow
momentary press	when activated		short hold	LED off
factory reset	off		long hold	rainbow burst