

 
RGB Critter® 2.0 Playlists

The RGB Critter is always showing either a color or color pattern that's located in the Main Menu or a Playlist.

Enter Playlist: Hold the Arrow button and release once the Critter pulses white.



Return To Main Menu: Hold the Power button and release once the Critter pulses red.



Pattern Speed: To adjust the speed of any color pattern, hold the Rocket button.
*The speeds of some of the patterns in this graphic have been increased so that the full color pattern can be seen.

Main Menu Playlist Main Menu Playlist

M1 Solid Color Playlist

M6 Strobe Playlist

M7 Strobe Increasing Speed Playlist

M2 Fade Playlist

M8 Sporadic

M3 Ribbon Playlist

M9 Rainbow Road Playlist

M4 Color Wipe Playlist

M5 Strobe Fade Playlist