



XP9R PURE BEAM FLASHLIGHT

INSTRUCTIONS: XP9R PURE BEAM FLASHLIGHT

USING THE FLASHLIGHT

The COAST XP9R weatherproof flashlight delivers brightest-in-class light with three light modes. To turn on the flashlight, press the power button located on the tail cap. The flashlight will start in medium brightness mode. To set the flashlight on high brightness, press the power button twice. To set the flashlight on low brightness, press the power button three times. Pressing the power button a fourth time will turn off the flashlight.

Note: The XP9R was designed with COAST's Easy Off functionality. After the flashlight has been on for five seconds or longer, pressing the power button once will turn it off.

ADJUSTING THE BEAM

Designed with COAST's PURE BEAM® Slide Focus and Beam Lock technologies, the flashlight can be continuously adjusted between an Ultra-View Flood Beam and a Bulls-Eye Spot Beam. To pinpoint the beam on a precise area, grasp the base of the bezel and slide forward. To expand the beam and maximize the lighting area, slide the bezel backward. To lock the Slide Focus system, pointing the light outward, twist the bezel to the left. To unlock, twist the bezel to the right.

CHARGING THE BATTERY

The XP9R can be powered by either a COAST ZITHION-X™ rechargeable battery, or two CR123 Lithium batteries.

To charge the battery directly, unscrew the tail cap from the flashlight to access the battery compartment and remove the battery. Insert the provided USB Type-C charging cable into the battery charging port, then plug the cable into an available power supply.

To power the XP9R with CR123 Lithium batteries, place two CR123 Lithium batteries in the battery compartment in the correct orientation.

Caution: The XP9R was designed for use with a COAST ZITHION-X™ rechargeable battery. Do not use aftermarket rechargeable batteries.

MAINTENANCE

To clean your XP9R, wipe the external body of the flashlight with a damp cloth.

Note: Do not submerge the XP9R.

WARRANTY

COAST's Lifetime Warranty stands firm behind your product, providing you the assurance that COAST knives, tools, flashlights and headlamps, are warranted against defects in workmanship for the life of the product as long as the original purchaser owns the product for a maximum of 100 years. Any problem at all? Just let us know—we'll repair or replace your product. Proof of purchase is required to claim this warranty. Please understand this warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. The warranty also does not cover batteries and charging accessories (or damage caused by either). Batteries or damage caused by batteries (i.e. leakage) are also not included in the Warranty. Warranty ex-changes do not cover the cost of shipping and handling.

