

# INSTRUCTIONS: COAST FL11 HEADLAMP



### USING THE HEADLAMP

The FL11 features the COAST Utility Beam which creates a broad beam with a bright center. Use the Power Button to turn on the headlamp and cycle through low, high, red, and flashing red modes, in that order.

### AIMING THE BEAM

Mounted to the headstrap on a hinged beam adjustable base for precision lighting, the FL11 can be aimed straight ahead, at the ground, or anywhere in between. To adjust the angle of the beam, grasp the body of the headlamp and tilt downward until the beam is aimed in the desired direction.

### POWERING THE HEADLAMP

The FL11 is powered by three Coast Extreme Performance AAA alkaline batteries (included). To change the batteries, lift the clasp on the top of the headlamp and open the battery compartment. Remove both batteries, discard, and install three new AAA alkaline batteries. Be sure the batteries are correctly oriented before closing the battery compartment.

### GO RECHARGEABLE!

Designed with COAST's Dual Power Technology, the FL11 can also be powered by a COAST ZITHION-X™ Rechargeable Battery (sold separately). To go rechargeable, replace all three AAA alkaline batteries with one COAST ZITHION-X™ Rechargeable Battery.

### WARRANTY


The FL11 is protected by COAST's Lifetime Warranty. For expedited warranty service, visit; coastportland.com.

### CAUTION

Never submerge the FL11 Headlamp in any liquid.

The FL11 was designed to be powered by one COAST ZITHION-X™ Rechargeable Battery. Do not use aftermarket rechargeable batteries to power the FL11.

### UTILITY BEAM

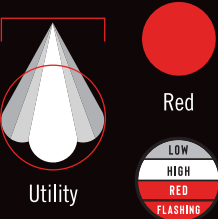

- 1 WHITE AND RED L.E.D.'S
- 2 POWER BUTTON
- 3 HINGED BEAM ADJUSTMENT
- 4 BATTERY COMPARTMENT

3xAAA

COAST®