INSTRUCTIONS

ASTRAL SOLAR BOLLARD



ASTRAL SOLAR BOLLARD

4553.3030

Please read the instructions before commencing installation and retain for future reference.

SPECIFICATIONS:

- Fitting: Body made in aluminium with clear polycarbonate diffuser.
- Lamp types: 2.2W / DC3.7V/ LED 3000K
- Protection against electric shock: CLASS III.
 - Does not require earth connection.
- **Ingress Protection:** IP54. Protection against the entry of dust and water splashes.
- **Driver:** not required.
- Quality/Corrosive rating: Suitable for outdoor / indoor domestic and commercial use.
- Ambient temperature range: 0°C to +60°C.
- Battery type: lithium
- Charge time: 6-8hrs
- Working time: Full light (up to 3hrs), Micro-light (up to 25hrs).

INSTALLATION INSTRUCTIONS:

- Check the screws and other accessories. (Fig. 1)
- Remove the mounting plate. Drill two holes in the wall and insert the expansion anchors.
 Install this plate to the wall with the two screws provided. (Fig. 2-3)
- Secure the body to the mounting plate with the screws provided. Press the switch for 3 sec/s after installing.
 Switch button changes to blue. (Fig. 4)

When the blue light is on the fitting is lit up completely and lasts for 50s (Fig. 1-2) thereafter normal use continues.

WARNING:

Ensure all items and screws are secure and fitted correctly.

