



GSX-L515BTB USER MANUAL

Introduction

Thank you for purchasing our GSX-L515BTB. We are confident that the Gemini Sound family of products will make your life easier by using the latest technological advancements in sound reproduction and will raise the bar for pro audio products.

Support

At Gemini Sound, our highest priority is making your experience unforgettable. Need help with setting up, troubleshooting, or looking for some tips? We're here for you, Monday through Friday 9AM to 5PM EST.



1-732-346-0061

geminisound.com

| | |
|---------------------------------|---|
| Index | 2 |
| What's Included | 2 |
| Features English | 4 |
| Features Spanish | 5 |
| FCC Compliance Statement | 5 |
| Caution | 6 |
| Precautions | 6 |
| Warranty and Repair | 6 |
| Limited Warranty | 6 |
| Return/Repair | 7 |
| Support | 8 |

What's Included

Please ensure that you find these accessories included with your GSX-L515BTB speaker:

- (1) GSX-L515BTB
- (1) Wired Microphone
- (1) USB Charging Cable





1. **Power Switch:** Press to turn on or off.
2. **Party Light:** Use this to turn on or off the party lights.
3. **Master Volume:** Turn to set the volume of the speaker.
4. **Aux Input/USB/TF Card Input:** Connect any external audio device to the AUX or use a USB or TF Card.
5. **Treble:** Turn to adjust the Treble of the output.
6. **Bass:** Turn to adjust the Bass of the output.
7. **Microphone Echo:** Turn to set the amount of echo on the microphone.
8. **Microphone Volume:** Turn to set the volume of the wired microphone.
9. **DC Input:** Plug in the included DC Power adapter.
10. **Microphone Input:** Connect the included wired microphone here.
11. **Guitar Input:** Connect a Guitar to this input.
12. **Media Player:** Use this set of buttons to control USB or TF Card and to switch to Bluetooth.

1. **Interruptor de encendido:** presione para encender o apagar.
2. **Luz de fiesta:** use esto para encender o apagar las luces de fiesta.
3. **Volumen maestro:** gírelo para configurar el volumen del altavoz.
4. **Entrada auxiliar / Entrada de tarjeta USB / TF:** conecte cualquier dispositivo de audio externo al AUX o use una tarjeta USB o TF.
5. **Treble:** Gírelo para ajustar los agudos de la salida.
6. **Graves:** gírelo para ajustar los graves de la salida.
7. **Eco del micrófono:** gírelo para establecer la cantidad de eco en el micrófono.
8. **Volumen del micrófono:** gírelo para configurar el volumen del micrófono con cable.
9. **Entrada de CC:** conecte el adaptador de corriente CC incluido.
10. **Entrada de micrófono:** conecte aquí el micrófono con cable incluido.
11. **Entrada de guitarra:** conecte una guitarra a esta entrada.
12. **Reproductor de medios:** use este conjunto de botones para controlar la tarjeta USB o TF y para cambiar a Bluetooth.

Responsible Party Name:

Innovative Concepts & Designs

Company address:

458 Florida Grove Road
Perth Amboy, NJ, 08861 USA

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AE6GALP-L208BTB

Caution

- All operating instructions should be read before using this equipment.
- To reduce the risk of electrical shock, do not open the unit. There are **no user replaceable parts inside**. Please refer servicing to a qualified Gemini Sound service technician. Do not attempt to return this equipment to your dealer.
- Do not expose this unit to direct sunlight or to a heat source such as a radiator or stove.
- This unit should be cleaned only with a damp cloth. Avoid solvents or other cleaning detergents.
- When moving this equipment, it should be placed in its original carton and packaging. This will reduce the risk of damage during transit.
- **Do not place objects on top of the device, as objects may scratch the device.**
- **Do not expose the device to dirty or dusty environments.**
- **Do not insert any foreign objects into the device.**
- **Do not expose the device to strong magnetic or electrical field.**
- **Do not use the device in the rain.**
- Please check with your Local Authority or retailer for proper disposal of electronic products.
- Do not disassemble the device. Only a certified service technician should perform repair.
- The device has apertures to disperse heat. Do not block the device may become hot and malfunction as a result.

Precautions

Please read carefully before proceeding:

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire, or other hazards.

- Please read, follow, and keep all instructions before using this product.
- **Cleaning:** The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, or other volatile liquids since they may corrode the cabinet.
- **Water and Moisture:** Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- **Do Not Open:** Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Gemini Sound service personnel.
 - Before moving the unit, remove all plugged cables.
 - Do not use the speaker's handles for suspended installation. Doing so can result in damage or injury.
 - Do not expose the device to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater) to prevent the possibility of panel disfiguration or damage to the internal components.
 - Do not place the device in an unstable position where it may accidentally fall over.
- **Connections:** Before connecting the device to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.

Warranty and Repair

All Gemini Sound products are designed and manufactured to the highest standards in the industry. With proper care and maintenance, your product will provide years of reliable service.

Limited Warranty

- A.** Gemini Sound guarantees its products to be free from defects in materials and workmanship for one (1) year from the original purchase date.
- B.** This limited warranty does not cover damage or failure caused by abuse, misuse, abnormal use,

faulty installation, improper maintenance or any repairs other than those provided by Gemini Sound.

C. There are no obligations of liability on the part of Gemini Sound for consequential damages arising out of or in connection with the use or performance of the product or other indirect damages with respect to loss of property, revenues, of profit, or costs of removal, installation, or reinstallation. All implied warranties for Gemini Sound, including implied warranties for fitness, are limited in duration to one (1) year from the original date of purchase, unless otherwise mandated by local statutes.

Return/Repair

A. In the U.S.A., please call our helpful Customer Service Representatives at (732) 346-0061, and they will be happy to give you a Return Authorization Number (RA#) and the address of an authorized service center closest to you.

B. After receiving an RA#, include a copy of the original sales receipt, with defective product and a description of the defect. Send by insured freight to: Gemini Sound and use the address provided by your customer service representative. Your RA# must be written on the outside of the package, or processing will be delayed indefinitely!

C. Service covered under warranty will be paid for by Gemini Sound and returned to you. For non-warranted products, Gemini Sound will repair your unit after payment is received. Repair charges do not include return freight. Freight charges will be added to the repair charges.

D. On warranty service, you pay for shipping to Gemini Sound, we pay for return shipping within the continental United States. Alaska, Hawaii, Puerto Rico, Canada, Bahamas, and the Virgin Islands will be charged for freight.

E. Please allow 2-3 weeks for return of your product. Under normal circumstances your product will spend no more than 10 working days at Gemini Sound. We are not responsible for shipping times.

Parts of the design of this product may be protected by worldwide patents. Information in this manual is subject to change without notice and does not represent a commitment on the part of the vendor. Gemini Sound shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual. No part of this manual may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, electrical, mechanical, optical, chemical, including photocopying and recording, for any purpose without the express written permission of Gemini Sound. It is recommended that all maintenance and service on this product is performed by Gemini Sound or its authorized agents. Gemini Sound will not accept liability for loss or damage caused by maintenance or repair performed by unauthorized personnel.



Support

At Gemini Sound, our highest priority is making your experience unforgettable. Need help with setting up, troubleshooting, or looking for some tips? We're here for you, Monday through Friday 9AM to 5PM EST.



1-732-346-0061

geminisound.com