


■ MMS Current Dial setting method by ambient temperature changes

● Trip characteristic curve

● How to set dial

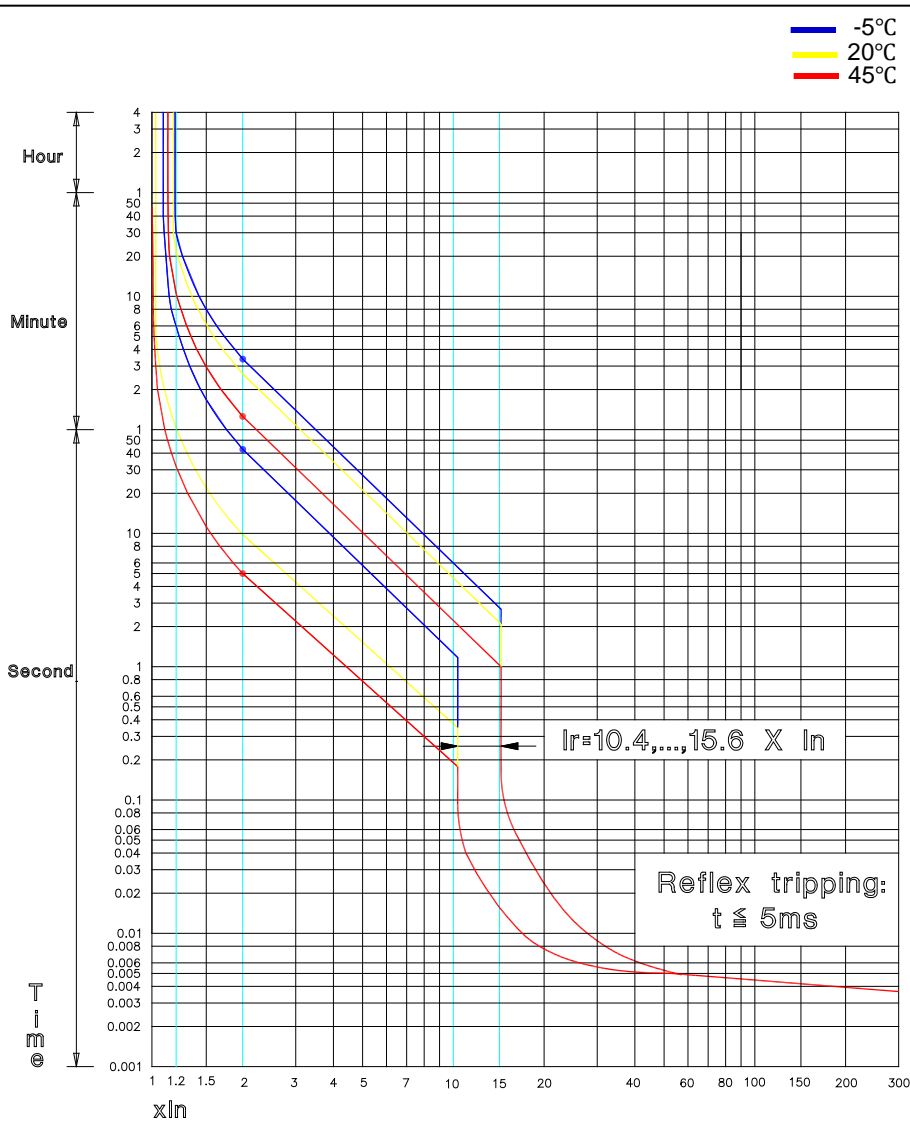

1. At ambient temperature above 40°C
- Dial 1 scale clockwise
2. At ambient temperature below -5°C
- Dial 1 scale counterclockwise
3. For group installation
- No need to rearrange dial setting.

