



User Guide

LUMOS LANTERN RECHARGEABLE 600L



IMPORTANT INFORMATION

1. Operating time for your Oz Trail 600L Rechargeable Lumos Lantern depends on continuous or intermittent use. Intermittent operation extends the run time of the battery.
2. The LEDs are a lifetime light source. They will never need to be replaced.



WARNING! Do not disassemble product. Do not charge the battery if the product / battery is cracked or damaged. Do not short terminals, crush, heat above 140 Degrees F. (60 Degrees C.), throw into a fire, or incinerate. Please recycle.



Carefully read all instructions before use and save for future reference.

CHARGING THE BATTERY

Your Oz Trail 600L Rechargeable Lumos Lantern contains a 3.7V lithium-ion battery and comes with a USB cord for recharging.

1. Push in locking tab on lid located on bottom of lantern; then lift to remove lid and access USB cord. (Fig. 1)

2. Locate charging port on back of lantern. Lift cover tab and rotate to access input port. (Fig. 2)

(Fig. 2)

3. Insert mini-USB plug into input port on lantern. (Fig. 3)

4. Plug USB cord into any USB outlet on computer, wall adaptor, etc.. (Fig. 4 & 5)

NOTE: Charging while using a USB wall adaptor (not included) will be faster than a computer USB port.

5. When properly charged, the indicator light next to the input port will change from red to green.

NOTE: Recharge the battery immediately when light output is low.

6. When charging is completed, place USB cord in lantern storage compartment.

7. Place tabs on lid into slots at back of edge of storage compartment, rotate lid down.

8. Press down on lid so locking tab is latched. (Fig. 1)

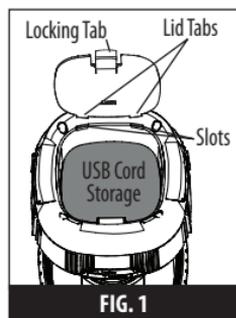


FIG. 1

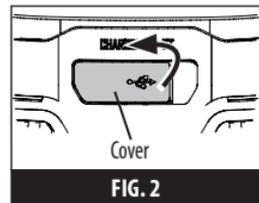


FIG. 2

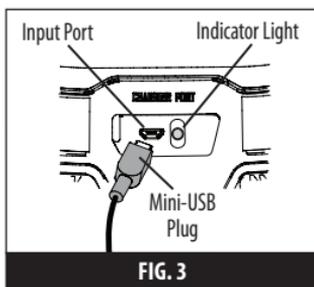


FIG. 3

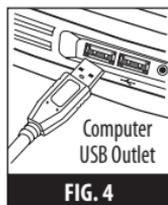


FIG. 4

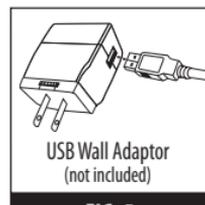


FIG. 5

Your Oz Trail 600L Rechargeable Lumos Lantern provides 3 lighting modes (high, medium and low) using the button switch located on the front of the lantern.

OPERATION

To access Lighting Modes:

1. Depress Button Switch once for High, twice for Medium, third time for Low and a fourth to turn off. (Fig. 6)

To access Bail Handle:

1. Rotate the bail handle located on the top of the lantern to the upright position. (Fig. 7)

NOTE: This will allow easy transport from one location to another. Lantern may also be hung using the bail handle.

2. Return bail handle down position for storage. (Fig. 7)

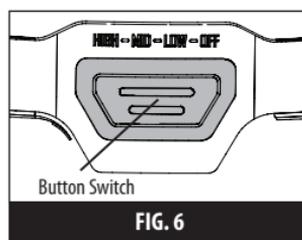


FIG. 6

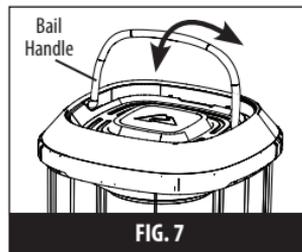


FIG. 7

(continued on back panel)