



LEISURE PRODUCTS

# Portable Gas Stove

*Instruction Manual*




AGA APPROVED No: 8221

Model No: OZ2220

**IMPORTANT:** Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

[www.oztrail.com.au](http://www.oztrail.com.au)

# NAME OF PARTS

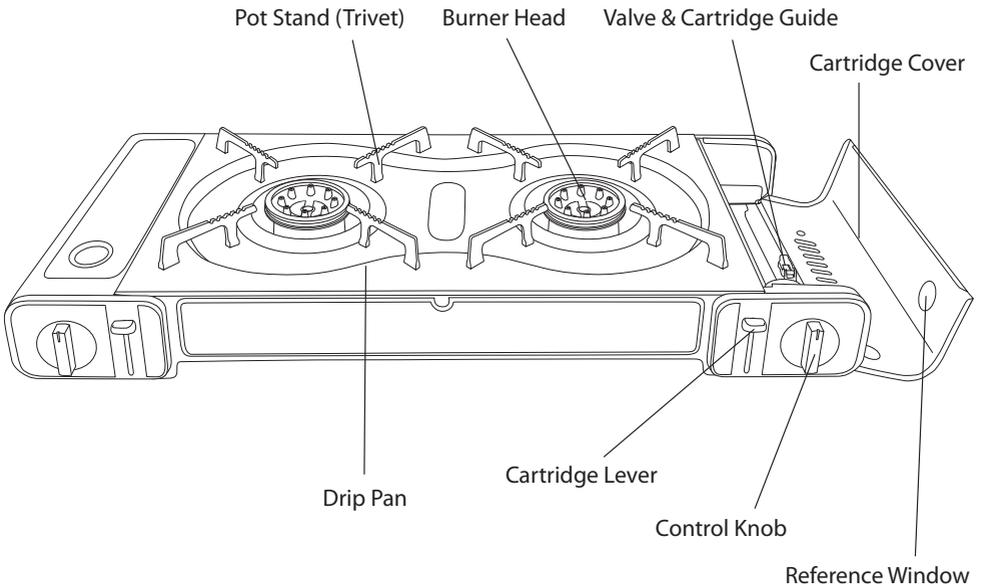


## OPERATING INSTRUCTIONS

Each burner requires an individual cartridge to operate. The left hand burner operates from a cartridge situated in the left hand cartridge bay and the right hand burner operates from a cartridge situated in the right hand cartridge bay. The following instructions are written for an individual side as this can be used independently.

The operator is to ensure that the instructions are correctly applied to each side of the appliance.


## FITTING GAS CARTRIDGE:

1. Turn the control knob to the OFF position. Make sure that the cartridge lever is in the UNLOCK position. If the gas knob is in the ON position the cartridge cannot be put into position.

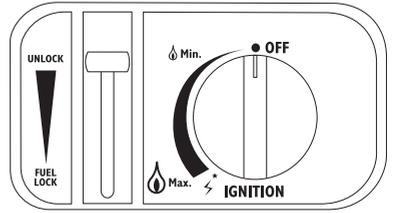


2. Open the cartridge cover and insert the gas cartridge. Make sure that the cartridge slot fits into the cartridge lever guide on the valve inside the stove.

**(Caution: Use only approved butane gas cartridge UL147B or EN417)**

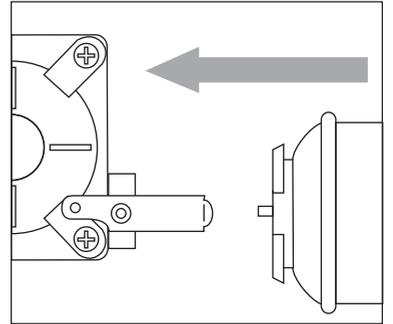


3. When you are ready to use the stove, push the cartridge lever down to the FUEL-LOCK position. If a hissing sound or gas smell is evident, check that cartridge is fitted correctly. Repeat step 2 to stop the gas leakage. **If lever is hard to push down, do not force it. Check that the cartridge is fitted correctly and the control is in the OFF position.**

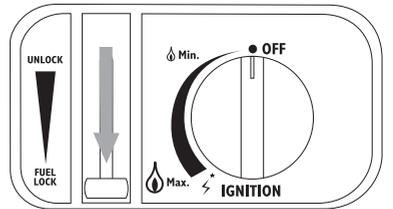


## IGNITION:

1. Turn the control knob towards the IGNITION position until a click is heard from the piezo ignitor.
2. If ignition fails, turn the control knob back to the OFF position and repeat.

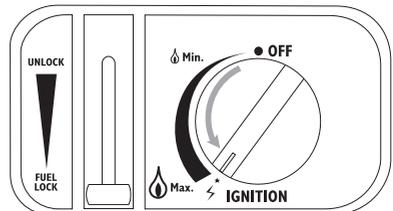


## HEAT CONTROL:

1. The control knob can be positioned on 'Maximum', 'Minimum', etc. Adjust it to the suitable position for cooking.
2. When turning the control knob from 'Maximum' to 'Minimum', turn slowly toward 'Minimum'

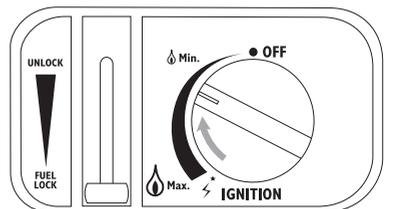

## EXTINGUISHING:

1. Turn the control knob to the OFF position. Confirm that the flame is completely extinguished.
2. Raise the cartridge lever to the UNLOCK position, and take out the gas cartridge.

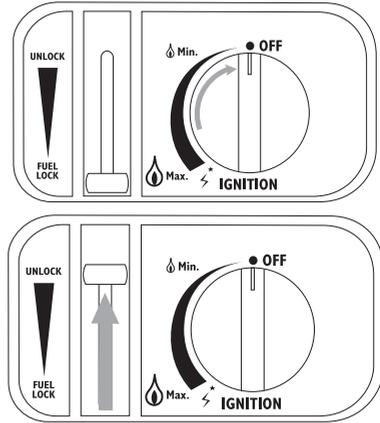

## WARNING!!

- Switch cartridge lever to UNLOCK position when appliance is not in use.
- Do not store cartridge in stove during transportation or storage.
- Replace the nozzle cap back onto the cartridge to protect nozzle and avoid accidental gas leakage if nozzle is bumped or depressed.
- Avoid boil overs and spillage.
- During use parts may become very hot. Keep young children away.
- When hot only handle the appliance by the control surfaces intended to be touched.
- Allow to cool before moving or handling.
- Do not use as a space heater.
- Do not use for any purpose other than cooking.
- Remove all packaging before use.
- Do not operate stove in the carry case.
- Caution: Never obstruct the air openings or vents on this appliance.

## PRESSURE SENSITIVE SAFETY DEVICE

If the stove is used in a hot area such as outdoors in direct sunlight or incorrectly (not in accordance with these instructions), the internal pressure of the cartridge will increase. If the pressure reaches a dangerous level the in-built safety device will activate stopping the flow of gas and extinguishing the flame. If the in-built safety device activates, determine and correct the cause before reusing the stove.

### **Re-igniting the stove after the pressure sensitive safety device has been activated:**

1. Remove the gas cartridge from the stove. Push in the nozzle of the cartridge for a second to release pressure from the cartridge. Place the cartridge in a cool area for a while to lower the pressure to normal.
2. Turn the control knob to the ON position to remove excess gas from the valve.
3. Repeat instructions as set out in this manual (Operating Instructions).

## **PRECAUTIONS**

### **GAS CARTRIDGE:**



1. This appliance shall only be used with a butane cartridge certified to UL147B or EN417  
IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CARTRIDGES.
2. The cartridge should be placed away from flammable products or direct sunlight.  
Never keep cartridge in places where the temperature is over 50°C.
3. Do not subject the cartridge to impact or rough handling.
4. Cartridges must be stored outdoors in a well ventilated location out of reach of children.
5. Do not puncture or incinerate empty cartridge.
6. Avoid carrying cartridge in the boot of a car or any unventilated enclosure.
7. Gas cartridges shall be changed in a well ventilated location, preferably outside, away from people and any sources of ignition such as naked flames, electric heaters/equipment.
8. To check if gas cartridge contains gas, disconnect from the stove, then hold upright and shake from side to side. If you can feel or hear liquid movement, it contains gas

### **STOVE:**

1. Check the seals between the appliance and the gas cartridge are in place and in good condition before connecting the gas cartridge.
2. Do not use this appliance if it has damaged or worn seals
3. Do not use this appliance if it is leaking, damaged or does not operate properly.
4. If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using a soapy water solution. Do not try to detect leaks using a flame.
5. This appliance must only be serviced by an authorised person.
6. Do not modify this appliance






**USE:**

1. Do not use for any purpose other than cooking. Incorrect use may result in overheating, incomplete combustion and/or a risk of fire or explosion.
2. Do not put items such as briquettes or heat beads on the stove.
3. In the event of a gas leak (smell of gas) immediately turn the control to the off position and move the cartridge lever to the unlock position to isolate the gas supply.
4. Do not move the appliance during operation.
5. The maximum sized vessel (pot or pan) to be used on this stove is 21cm diameter.


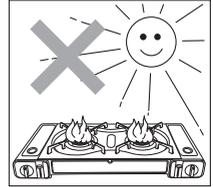
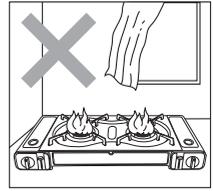


**PLACEMENT:**

1. Do not use the stove in very windy conditions.
2. Do not place or use this appliance on any hot surface.
3. Do not use the stove under overhanging shelves etc.
4. Do not use close to combustible materials such as curtains. No combustible materials should be within 400mm from any side of the stove and 1200mm above.
5. Use stove in the shade or in cool places. Avoid using in direct sunlight.
6. Only operate this appliance on a flat horizontal surface and ensure the aeration opening below the stove is clear and unobstructed.
7. **CARBON MONOXIDE HAZARD** - USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.

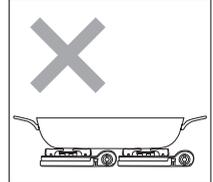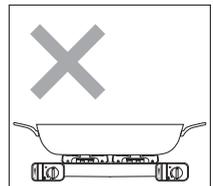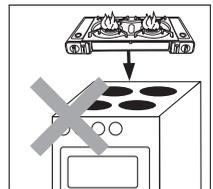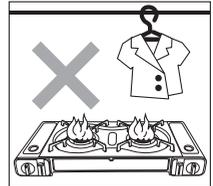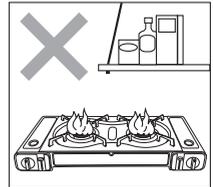

Minimum Enclosed Area Ventilation

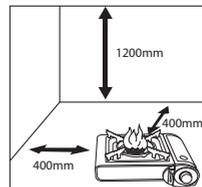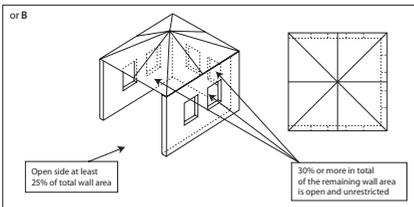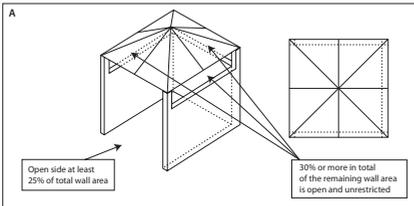

## ABNORMAL OPERATION

Abnormal operation can be identified by:

- Frequent activation of pressure safety device
- Jamming of cartridge lock lever
- Irregular burner flame which is yellow or unstable
- Black sooting of cooking utensils

Refer to the trouble shooting section of this manual for possible solutions.

If the stove does not operate properly DO NOT use the appliance.


## MAINTENANCE

### PRECAUTIONS:

1. Make sure that the gas cartridge is released before cleaning.
2. Never remove safety devices or gas components.

### CLEANING:

1. Body: Wipe off with a clean cloth. When necessary, use a kitchen cleanser and then finish with a dry cloth.
2. Pan support and drip pan: After washing, wipe with a dry cloth.
3. Burner: Clean the burner top and the burner ports with a hard brush making sure that all food particles are removed from the burner ports.

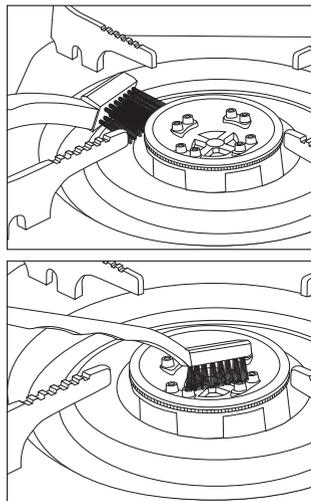

# TROUBLE SHOOTING

PROBLEM / CAUSE	No ignition	No burning	Unstable flame	Uneven flame	Slow burning	Gas smell	Flame extinguishes during use	SOLUTION
Lack of fuel	●	●			●		●	Renew cartridge
Spark point dirty	●							Carefully remove dirt
Dirty burner	●	●	●	●	●			Clean the burner
Imperfect cartridge alignment	●	●	●		●	●		Realign cartridge
Use of unsuitable fuel	●	●	●	●	●			Replace with cartridge containing correct fuel
Internal gas pressure too high							●	Cool down gas cartridge
Functioning of safety stop mechanism	●						●	Check and reset mechanism
Improper setting of spark point	●							Set spark point to 2mm away from burner

If you are still experiencing difficulty with the appliance after trying the above solutions, the appliance should not be used until it has been inspected and repaired by a suitable qualified person.

# SPECIFICATIONS

Model No.	OZ2220
Ignition Method	Piezo-Electric
Dimensions	640mm (W) x 280mm (D) x 113mm (H)
Weight	2.9kg
Safety Device	Safety Governor System/Pressure Sensitivity Device
Fuel Consumption	160g/h (nominal per burner)
Gas Type	Butane (2 Cartridges)
Injector Size	0.6mm
AGA Approved No.	8221

# ONE YEAR WARRANTY

OZtrail warrants this product against defects for a period of one year from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase.

You may also contact OZtrail Leisure Products, by phone: +64 7 3193 1110, or in writing: PO Box 1110, Eagle Farm BC, 4009, QLD, AUSTRALIA, by email: warranty@oztrail.com.au. The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see [www.oztrail.com.au/warranty](http://www.oztrail.com.au/warranty)

## OZTrail Leisure Products

71 Charles Ulm Place  
 EAGLE FARM, QLD, 4009, AUSTRALIA  
 TEL: 07 3193 1110  
 Made in China