



WARNING-PLEASE READ

Thank you for purchasing a quality OZtrail product. We recommend that you set up this Gazebo inner after purchase. Check that all parts are present and you familiarise yourself with the assembly and disassembly of the product. If you have any questions, your OZtrail dealer will be happy to help you.

- ⇒ Gazebo and their accessories are designed as a portable and temporary structure, they are not designed to be a permanent structure.
- ⇒ Do not leave Gazebos and their accessories unattended in heavy rain or wind. In rain make sure water does not pond on the canopy. The weight of the water could cause damage.
- ⇒ Always secure Gazebos and their accessories firmly to the ground ensuring all peg points and guy ropes are utilised and remain firm. In heavy rain or winds remove the canopy and all accessories to avoid damage.
- ⇒ Do not fold up the Gazebo with the canopy or accessories still attached as this could cause damage.

INNER KIT ATTACHMENT INSTRUCTIONS

Step 1 Clearing the Site

Under the Gazebo clear a level area of all stones, twigs, etc.

Step 2 Laying out the Gazebo inner kit

Unpack the contents of your Gazebo inner kit. Unfold the fabric and layout with the floor against the ground and the wall and roof fabric facing up.

Step 3 Pegging out the floor

On each corner of the floor there is an elasticised hook attached to the floor. Connect this hook to the base of the frame upright poles. Located mid way along the side of the floor there are peg out webbing loops. With the pegs provided peg out these webbing loops firm but not tight.

Step 4 Standing up the Gazebo inner kit

On each corner of the roof there is an elasticised hook attached to the roof. Connect this hook to the top of the frame upright poles. Located mid way along the edge of the roof there are "J" hooks on webbing loops. Connect these "J" hooks to the scissor action struts of the Gazebo frame. Mid way up the wall corners there are ties. Wrap these ties around the frame upright poles and tie together, firm but not tight.

INNER KIT PACK UP INSTRUCTIONS

Simply reverse the above attachment instructions.

WARRANTY

OZtrail warrants this product against defects for a period of one year from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase. You may also contact OZtrail Leisure Products, by phone: 07 3193 1110, or in writing: PO Box 1110, Eagle Farm QLD 4009, by email: warranty@oztrail.com.au. The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see www.oztrail.com.au/warranty

Care Instructions: Wipe down all surfaces with fresh water after use. To remove marks, use a soft brush or sponge with fresh water and mild detergent only and rinse with fresh clean water. Allow to dry thoroughly. Never pack away damp, dirty or wet. After beach use or wet conditions treat all zips and metal components with silicon spray.

Materials: 100% Polyester