

## WARRANTY

OZtrail warrants this product against defects for a period of one year from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance.

Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase. You may also contact OZtrail Leisure Products, by phone: 07 3193 1110, or in writing: PO Box 1110, Eagle Farm QLD 4009, by email: warranty@oztrail.com.au. The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For more detailed information and an explanation of these terms see [www.oztrail.com.au/warranty](http://www.oztrail.com.au/warranty)

**CARE INSTRUCTIONS:** Wipe down all surfaces with fresh water after use. To remove marks, use a soft brush or sponge with fresh water and mild detergent only and rinse with fresh clean water. Allow to dry thoroughly. Never pack away damp, dirty or wet. After beach use or wet conditions treat all metal components with silicon spray.

**MATERIALS:** Pole – Fibreglass    Tent – PE floor with polyester walls

## Multi Shade 4 MPS-MS4-A



Designed & Imported by:  
**OZtrail Leisure Products**

71 Charles Ulm Place Eagle Farm QLD 4009 Australia  
[www.oztrail.com.au](http://www.oztrail.com.au)  
Made in Bangladesh

## ASSEMBLY INSTRUCTIONS

OZtrail advises to assemble your Shelter before use to ensure all parts are present and to become familiar with the assembly of your shelter.

1. Choose a flat level area with no objects that could damage the floor. Layout out the shelter facing the desired direction.
2. Peg out the four corners of the shelter floor. Anchor the shelter to the ground by inserting the pegs through the ring loops at each corner of the floor at an angle of 45 degrees. Firm but not tight. As you work from one peg point to the other around the shelter base pull the floor firmly, but not tight. Assemble the poles ensuring each pole section is firmly secured into the next.
3. Select the long pole and slide it through the pole sleeve that run across the top of the front opening from side to side. With the remaining pole slide through the pole sleeve that runs across the rear wall from side to side. Connect the pole ends onto the corresponding pin and ring assemblies at the base of the shelter (see photo of shelter), the poles will arch and the shelter will stand up during this step.
4. Connect the J-Hooks attached to the shelter onto the poles. Ensure the shelter remains securely anchored at all times.

NOTE: In severe conditions the shelter should be dismantled.

## DISASSEMBLY INSTRUCTIONS

To pack away, simple reverse the above.