

Installation instructions for the RV Mesh Room

1. Select a reasonably flat and level location to set up your RV Shade Awning and RV Mesh Room. Ensure the ground that you are setting up on is about the same height to the ground your vehicle is parked.
2. Ensure your vehicle is parked with the hand brake engaged.
3. Set up your RV Awning as per its instructions. Ensure there is approximately a 5 degree angle of fall on the awning roof. (See the RV Mesh Tent packaging photo for an example of this angle).
4. Select the two fabric strips with sewn-in rope and female ends of side release buckles attached. These are to be inserted into the appropriate sail tracks on the RV Shade Awning. Attach one on the alloy extrusion closest to the vehicle and attach the second on the alloy extrusion furthest from the vehicle.
Please note: The strips are identical and fit both positions. If you are using the RV Awning Extender, the RV Awning Extender already has side release buckles attached, therefore you will only require a strip to be attached to the extrusion closest the vehicle. The RV Awning Extender should be set up prior to fitting the RV Mesh Room.
5. Lay out the RV Mesh Room under the RV Shade Awning. The OZtrail logo is located on the front of the room and should be positioned furthest away from the vehicle.
6. Starting at the rear of the Mesh Room, attach the male side release buckle into the female side release buckle located on the strip placed into the alloy sail track. Once the rear buckles are all connected, repeat the process for the side release buckles along the front of the RV Awning and Mesh Room. The Mesh Room should now be hanging loosely from your RV Shade Awning.
7. Attach all remaining Quick-clips to the RV Shade Awning front vertical support poles and the horizontal side roof poles.
8. Now check the angle of fall on your RV Shade Awning. If the floor is still not resting on the ground, adjust the webbing straps that connect to the side release buckles. Once the floor is resting on the ground, peg out the corners of the Mesh Room. Anchor the Mesh Room to the ground by inserting the pegs through the loops at an angle of 45 degrees. Firm but not tight.

Pack up instructions for the RV Mesh Room

1. Remove pegs with a claw hammer or peg puller. Do not remove pegs from the ground by pulling on Mesh Room base as this may cause damage.
2. Reverse steps 8 to 5.
3. You can leave the attachment strips in the sail track for future use, however OZtrail recommends taking them out and keeping all in a safe place.

IMPORTANT In light rain conditions, angle the awning to allow the water to run off. In severe conditions the awning should be dismantled.