

Pager Genius Paging System

USER MANUAL



Pager P2000



Transmitter T9005

Thank you for purchasing the Pager Genius System

We provide a great paging product, and **24-7 customer service**. Please familiarize yourself and staff with the contents of this instruction in order to properly operate and maintain your system. If you have any question or service problems, please call.

 1-800-289-3823

 9852 W Katella Ave, Suite #500,
Anaheim, CA 92804



Please keep this manual in a safe place for the staff and managers to view in the future.

TABLE OF CONTENTS

TRANSMITTER KEYPAD OPERATION	4
PAGING YOUR PAGER	4
CANCELLING A PAGE	4
RESETTING A PAGER TO THE TRANSMITTER	5
GROUP PAGING	6
CHARGING THE PAGERS	6
SETTING THE PAGER ALERTS	7
SETTING THE TIME ON THE PAGER	8
SETTING THE DURATION OF THE PAGE	8
CLEANING THE PAGERS AND TRANSMITTERS	9
TROUBLE SHOOTING	9
WARRANTY	10

PAGER GENIUS PAGING SYSTEM

If you are a new customer to Pager Genius, your paging system has already been set-up, and are ready to use right away. If your pagers have completely died, plug them in, and the pagers will read LOBT, which means low battery. LOBT will display on the pager for 10 to 20 minutes, and then the pager numbers will start showing up.

Test the range of the paging system by doing test paging around the property. If range is a issue for some reason, we do sell range extenders that more than triple the range, and you can use as many range extenders as needed to cover whatever kind of area you are looking to cover.

TRANSMITTER KEYPAD OPERATION

Number Keys (1-99)

Press the number of the pager you wish to notify

Cancel

To cancel a page, press the number of the pager followed by the cancel button

Enter

To send the numeric page



The other buttons should not be pressed, and are used for programming. The only buttons that should be pressed is the **Numbers**, **Enter**, and **Cancel**.

PAGING YOUR PAGER

The Pager Genius Transmitter can page single pages numbered 1-999. To page a pager, simply press the number of the pager you would like to page followed by the enter key.

Example: To page pager #15, press 15 on the keypad followed by enter.

CANCELLING A PAGE

There are two ways to cancel a page:

1. You can cancel the page by pressing the number of the pager you want canceled followed by cancel.

2. You can place the pager back on its charging stack, and the page will cancel automatically.

RESETTING A PAGER TO THE TRANSMITTER

When you order more pagers, our we send you out a replacement pager, you will need to add the pagers to the transmitter. Below are the following steps to add a pager to your system:

Step 1: Turn the pager around, and press the **Learn button**, the middle button on the rear of the pager. The digital display of the pager will read [----].



Step 1:
Press the **Learn button**
to reset the Pager



Step 2:
Use **Number Keys** to
input a number for
the selected Pager

Step 3:
Press the **Enter**
button to confirm
and save the number

Step 2: Press the number you would like the pager to display, followed by the enter button. The pager will start alerting, and the pager number will have changed to the number entered.

The pager will always display this number, unless the settings are changed manually by the end user.

GROUP PAGING

With your Pager Genius System group paging is an option.

For example, you can group numbers together, you can have ten #1 pagers and ten #2 pagers, when #1 is paged all ten #1 pagers go off all at the same time.


You can go from group paging back to individual paging in a matter of minutes. All end users can make changes on the fly, and have complete control of how the pagers are grouped.

CHARGING THE PAGERS

The pagers sit on top of a charging base that is plugged into a power outlet. One charging base can support up to 15 pagers.

Pager Genius provides a charging base for every 10 pagers ordered.

There is a charging light at the rear of the pager, and when the pagers are charging properly, you can see the charging light illuminate on the rear pager.

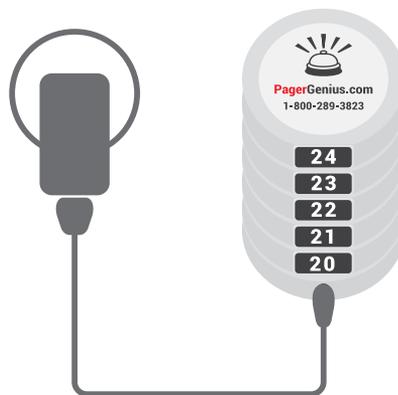

Encourage staff to always look for the charging light illumination when closing at night.



It is important that the pagers always be charging, even when they are not being used for long periods of time.

Once the pagers are fully charged, they take up very little electricity. Once fully charged, the pagers can operate up to five days without charging.



The pagers fully charge in just 90 minutes time.

SETTING THE PAGER ALERTS

You have the option to have the pager do one, two, or all three of the following alerts; **Vibrate**, **Light-Up**, and **Beep**.

Also the pager has a clock option, where the pager can display the time of day on it's digital display.

Below are directions on how to change alerts for individual pagers:




Step 1:

Press the **Mode button** to set up the Pager



Step 2:

Press the **Learn button** several times to find the setting you are looking for

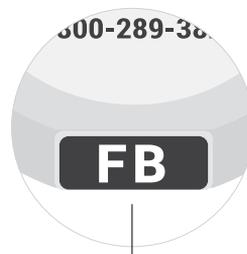

Step 3:

The pager digital screen will display the setting

Step 1: Turn the pager around and press the **Mode button**.

Step 2: Press the **Learn button** several times until you find the setting you are looking for: **F** (Flash), **B** (Beep), **S** (Vibrate), **C** (Clock).

If the pager digital screen is displaying FB, the pager will only Flash and beep. If the pager is displaying FBS, the pager will flash, beep, and vibrate.

After you are done choosing your setting press the **Stop button**.


SETTING THE TIME ON THE PAGER

Pager Genius pagers keep military time, and is an option if you would like you pagers to display time.

How to set-up the time display on a pager:

Step 1: Make sure the pager has the **C** (Clock) setting option selected.

Step 2: Press the **Mode button** several times until you get the correct hour, and then press the **Stop button** to move the time to the minutes area. You use the **Stop button** to toggle between the hours and minutes.

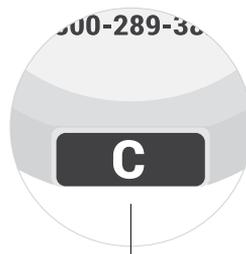

The pager digital screen will display **C** (Clock)

SETTING THE DURATION OF THE PAGE

You can have the pagers alerted 15, 30, 45, 60, and 90 seconds time. Usually 15 seconds is a good amount of time to alert the person you are looking to page.

If the person does not respond to the first page, you can keep alerting the person over and over again.

You can change the paging time by turning a pager over and locating the time switches.

Move the switches back and forth, each time you do the time will move on the digital display. Set the time that is right for your environment

CLEANING THE PAGERS AND TRANSMITTERS

We recommend using isopropyl alcohol based cleaners to clean the pagers and transmitter. This is the only approved cleaner that we recommend at this time. It is recommended the paging system be wiped down once a week.

TROUBLE SHOOTING

Pagers do not vibrate, beep or light-up anymore

Make sure that the feature alert mode is set in the correct setting (See page 6).

The range of the transmitter is covering most of the building and parking lot, but I need the signal to cover the entire area. (BOLD Print)



If you need to increase the range of your current paging system, Pager Genius has the tools to do this. We sell a Pager Genius Range Extenders (Model RE8000) on our website www.pagergenius.com.

One of our pagers is dead

Make sure there are no obstructions on the bottom two metal charging docks on the rear of the pager.



If a pager is displaying LOBT, this means that the pager battery is low, and in 20 minutes time the pager number will appear.



Tighten up the pager with a small phillips screwdriver, place it directly on top of the charging dock, look for the charging light at the rear of the pager, and the LOBT display. In less than 20 minutes time the pager will be operational again.

WARRANTY

Pager Genius warrants this product against any defects that are due to faulty material or workmanship for a standard two-year period after the original date of consumer purchase. The warranty does not include damage to the product resulting from accident, misuse, improper electrical connection, or failure to charge the product within 35 days of receipt. Rechargeable pagers are required to stay on charge while not in use. Rechargeable pagers that are left off of charge for longer than 35 days will have a negative impact on the life of the batteries requiring them to be replaced thus voiding the warranty. If this product should become defective within the warranty period, we will repair or replace it with a replacement product, free of charge. Pager Genius will pay for shipping to and from if there is a problem under the warranty.

Pager Genius Customer Support

 1-800-289-3823

 9852 W Katella Ave, Suite
#500, Anaheim, CA 92804

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.