

## Installation Guide

# TL-IR-CC

The TechLogix TL-IR-CC allows direct IR to IR connections between devices. The IR IN (TRS) connector is compatible with an IR input which provides +5V DC to the tip of the connector. The TL-IR-CC allows direct connection between the IR output of a third-party control system and a TechLogix extender. The TL-IR-CC will also allow daisy-chaining IR signals between TechLogix extenders.



### Instructions

1. Power off all devices which will be connected with the TL-IR-CC.
2. Insert the end labeled IR IN (TRS connector aka stereo connector [two stripes]) into the IR input of the IR receiving device which provides +5V DC to the tip of the IR receiver.
3. Insert the end labeled IR OUT (TS connector aka mono connector [one stripe]) into the IR output of the IR transmitting device.
4. Power on all devices.

### Basic Application Drawing

