



12000 MODULE

INSTALLATION GUIDE

2004-2013

5.9L & 6.7L CUMMINS

NON-DEF ENGINES

2006-2009

8.3L & 9.0L CUMMINS


UP TO 30% HP GAIN
10-20% FUEL SAVINGS



AGDIESELSOLUTIONS.COM



- 1) Locate Fuel System on Driver's side of Engine
- 2) Locate Fuel Pressure sensor according to the application as shown in Picture **NOTE: To avoid confusion please refer only to the picture provided for the desired application.**

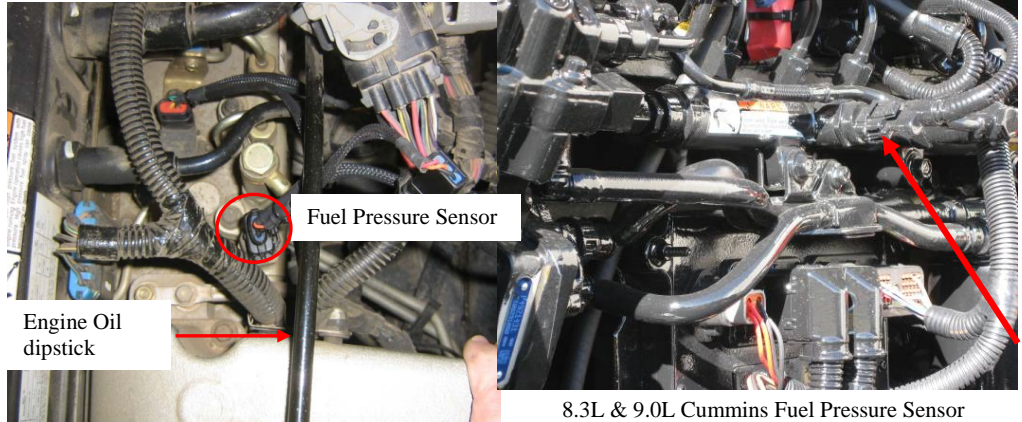

5.9L Cummins Fuel Pressure Sensor

For Tech Support Please Call
1.812.618.9168 or 1.855.343.7680

Position 1 - Stock - 0HP Gain
Position 2 - Low - Up to 10% HP
Position 3 - Med - Up to 20% HP
Position 4 - High - Up to 30% HP
Adjustable on the Fly
Position 1 - Switch to Far Left
Position 4 - Switch to Far Right




Module Switch can be ran inside the cab for easy performance adjustment
Module Switch can be secured in engine bay if desired
Module will default to HIGH setting if Switch is not connected

NOTE: Do not change performance settings while vehicle under excessive load

NOT FOR USE IN CALIFORNIA

MODULE DOES NOT BYPASS, DELETE OR DEFEAT ANY EMISSION CONTROL SYSTEMS

If installation assistance is needed, Ag Diesel Solutions is not responsible for any cost associated with third party instalaltion

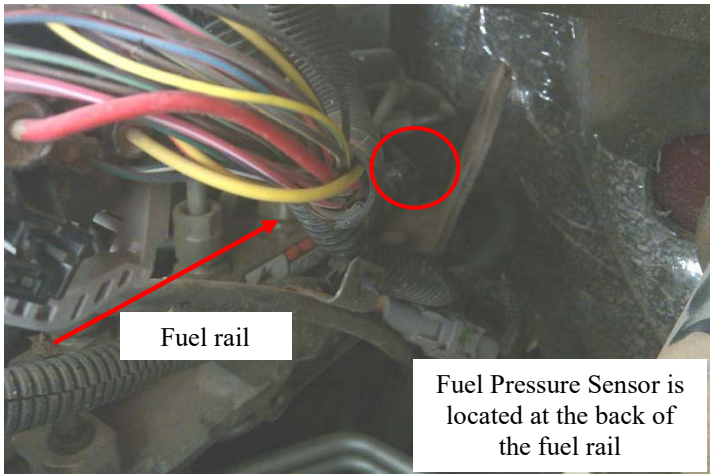

6.7L Cummins Fuel Pressure Sensor

- 3) Unplug fuel pressure sensor.
 - 4) Plug Female Connector from module into Fuel Pressure Sensor.
 - 5) Connect the Stock Cummins connector to the Male Connector from the module
- Note:** Make sure to push completely together until the connector snaps.
- 6) Mount the module box in a safe location using the zip ties to secure the wires and module away from any extreme heat and moving parts.

ONLY for 6.7 Cummins Shim Kit Instructions

- 1) Remove Cover shown below by removing the oil dipstick and 4 bolts holding cover to engine



- 2) Using an 11mm wrench remove the 2 clamps holding the EGR tube that crosses in front of the valve cover.


Note: You don't have to remove the tube just tilt the tube up towards the front of the truck

- 3) Use a 10mm Socket and remove the bolt that holds the dipstick tube to the bracket and the 6 bolts that hold the air horn to the manifold.



Note: Make sure not to damage the gasket.

- 4) Slide the air horn forward so that you can access the front end of the fuel

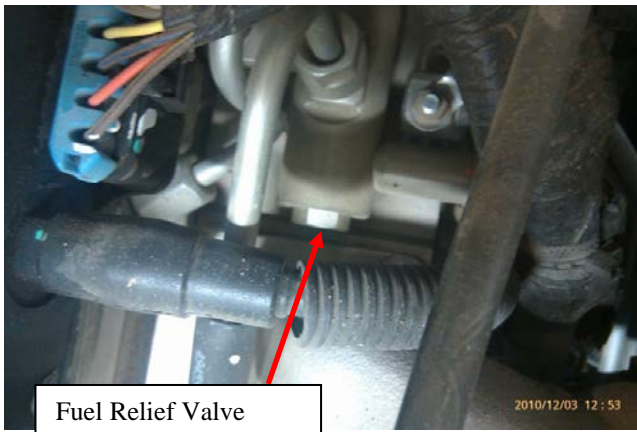

Fuel Relief Valve

5) Use an 18mm wrench to remove fuel relief valve



Removal Tool



.020" Shims



- 6) Thread removal tool on to Fuel Relief Valve and place tip of fuel relief valve into vise as shown above
- 7) Rotate removal tool toward the vise to split apart relief valve.



Tip

Note: Be careful to hold end of relief valve it is spring loaded and you don't want to lose any part. There is a small pin located in Tip behind the washer with three holes in it. Don't lose it, the truck will not run without it.



- 8) Remove the spring and insert the three shims as shown above



- 9) Making sure you don't lose any parts, replace spring into relief valve and put tip back together.

- 10) Place in vise and tighten to compress relief valve together

Note: Use a small piece of wood or cardboard, between tip and vise to eliminate the possibility of damaging the fuel relief valve.

- 11) Take a small punch and re-apply the 3 factory indentations used to hold tip into the body of the relief valve
- 12) Replace Valve back into Vehicle, torque Relief Valve to 75 ft-lbs. or fuel could bypass valve.
- 13) Replace air horn, making sure the gasket is lined up correct
- 14) Twist EGR tube down and replace the clamps
- 15) Replace cover and dipstick

THIS IS A HIGH PERFORMANCE PRODUCT. USE AT YOUR OWN RISK.

Do not use this product until you have carefully read the following agreement.

This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions

DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY

Power Systems Innovations, Inc and its successors, distributors, jobbers, and dealers (hereafter "SELLER") shall in no way be responsible for the product's proper use and service. It is the installer's responsibility to check for proper installation and if in doubt, contact the manufacturer. The SELLER assumes no liability regarding the improper installation or misapplication of its products. BUYER ACKNOWLEDGES IT HAS HAD THE OPPORTUNITY TO FULLY INSPECT THE PRODUCT. ACCORDINGLY, BUYER ACKNOWLEDGES THAT THE PRODUCT IS BEING SOLD IN "AS IS/WHERE IS" CONDITION AND WITH ALL FAULTS. EXCEPT AS OTHERWISE PROVIDED HEREIN, THERE ARE NO EXPRESS WARRANTIES WITH RESPECT TO THE GOODS, AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIKewise HEREBY EXPRESSLY AND FULLY DISCLAIMED. SELLER SHALL NOT BE HELD LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WITH RESPECT TO THE PRODUCTS (INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOST SALES, LOSS OF PRODUCTION, PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OR DAMAGE RESULTING FROM INTERRUPTION OR FAILURE IN OPERATION OF THE PRODUCTS) AND BUYER HEREBY EXPRESSLY WAIVES AND DISCLAIMS ALL SUCH LIABILITY CLAIMS. THE BUYER ACKNOWLEDGES AND AGREES THAT THE DISCLAIMER OF LIABILITY CONTAINED HEREIN IS A MATERIAL TERM OF THE SALE OF THE PRODUCT AND, TO THE FULLEST EXTENT PERMITTED BY LAW, BUYER SHALL DEFEND, INDEMNIFY AND HOLD SELLER HARMLESS FROM ANY AND ALL CLAIMS, DEMANDS, CAUSES OF ACTION, CONTROVERSIES, LIABILITIES, FINES, LOSSES, COSTS AND EXPENSES (INCLUDING, BUT NOT LIMITED TO ATTORNEYS' FEES, EXPERT WITNESS EXPENSES AND LITIGATION EXPENSES) ARISING FROM OR RELATED TO SELLER'S PRODUCTS.

LIMITED LIFETIME WARRANTY

Power Systems Innovations, Inc (hereafter "SELLER") warrants that the product supplied shall conform to SELLER's specifications and shall be free from defects in design, material or workmanship for the life of the original BUYER. This Warranty shall not be extended, transferred, assigned or varied except by a written instrument signed by SELLER and BUYER. Products that have been returned to SELLER during the warranty period and accompanied by a dated proof of purchase receipt, with shipping and handling paid by the BUYER, and found to be defective in design, material or workmanship, in SELLER's sole discretion, may be repaired or replaced at SELLER's option and cost. All warranty claims hereunder are subject to approval by SELLER upon examination of the product. If the product is found not to be defective by SELLER, the product may be returned to BUYER at BUYERS cost. Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other expenses. This warranty is void on any products that show evidence of misapplication, negligence, improper installation, abuse, lack of proper maintenance or alteration from its original design.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND. THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

AGRICULTURE



Up to 30% Horsepower Increase
10-20% Fuel Savings
Does NOT Flash Factory ECM
Does NOT Void Equipment Warranty
Plug and Play Installation
LIFETIME WARRANTY

CONSTRUCTION



Up to 30% Horsepower Increase
10-20% Fuel Savings
Does NOT Flash Factory ECM
Does NOT Void Equipment Warranty
Plug and Play Installation
LIFETIME WARRANTY

TRUCK EDITION: LIGHT DUTY



Up to 90 Horsepower Increase
1-3 MPG Fuel Savings
Does NOT Flash Truck ECM
Does NOT Void Factory Warranty
Plug and Play Installation
LIFETIME WARRANTY

TRUCK EDITION: MED, HEAVY DUTY



Up to 30% Horsepower Increase
5-15% Fuel Savings
Does NOT Flash Truck ECM
Does NOT Void Factory Warranty
Plug and Play Installation
LIFETIME WARRANTY

LEARN MORE: AGDIESELSOLUTIONS.COM

You Tube

