






Quick Start Guide : Additional Functions [AG7i Load Bars]



	Print Long press to display time/date	[PRINT]
	User function set Long press to exchange weight unit Enter function during parameters configuration	[FN]
	Accumulate Long press to retrieve weight records Move digits to right during parameters configuration	[ACCU]
	Tare Long press to display percentage function Increase the digits during configuration	[TARE]
	Zero Decrease the digits during parameters configuration	[ZERO]






Counting – Save and Retrieval

1. Boot up indicator “press green on button”
2. When countdown completed – long press “Triangle” button [Accumulate]
3. When “n” is displayed on screen – press “FN” button and weigh first item
4. Press “Triangle” button to store the weight record and move to the next reading
5. To review saved records – long press Triangle button – should display ‘n’ with number of records ie ‘14’ so [n 14] is what the LCD display will present
6. Then use the arrow buttons to navigate to the reading you want to review (see below list of navigation commands)

Push [→] Push [↑] or [↓] to change	[000008]	Input the serial number of the weight record
Push [FN]	[r 2]	Display the sequence number of that record
Push [PRINT]	[r 3]	Display the next record
Push [ON]	[r 2]	Display the previous record
Push [↑]	[16.06.03]	Display the date of that record
Push [↑]	[14:53:02]	Display the time of that record
Push [↑]	[30.06]	Display the gross weight of that record
Push [↑]	[20.00]	Display the tare weight of that record
Push [↑]	[10.06]	Display the net weight of that record
Push [↑]	[153]	Display the quantity of that record (for counting)
Push [FN]	[27.00]	Push [FN] to return to weighing mode during any data display (date-time-gross weight-tare weight-net weight-quantity)
Push [PRINT]	[16.06.03]	Push [PRINT] to print the record during any data display
Push [→] and [↑] or [↓]	[b 0001]	Push [→] to input the start number of the records (for retrieve)
Push [FN] Push [→] and [↑] or [↓]	[E 0008]	Input the end number of the records (for retrieve)

Livestock Weigh Mode



	Print Long press to display time/date	[PRINT]
	User function set Long press to exchange weight unit Enter function during parameters configuration	[FN]
	Accumulate Long press to retrieve weight records Move digits to right during parameters configuration	[ACCU]
	Tare Long press to display percentage function Increase the digits during configuration	[TARE]
	Zero Decrease the digits during parameters configuration	[ZERO]

Livestock mode is Aut 3 or 5 Second Average – see below

Operation	Display	Explanation
Push [FN]	[Aut 00]	User functions set
Push [→] and [↑] or [↓] Push [FN]	[Aut 01]	00: Normal weighing mode, manual print/accumulate 01: Normal weighing mode, automatic print/accumulate after the weight stable, auto arrow appears 02: Normal weighing mode, automatic save the weight value, and print/accumulate it after the load < 20d and auto arrow appears 03: Dynamic weighing mode, automatic print/accumulate after the weight <20d, auto arrow appears 04: Peak hold mode, automatic print/accumulate after the weight <20d, auto arrow appears 05: Dynamic weighing mode, manual print/accumulate 06: Peak hold mode, manual print/accumulate 07: Counting mode, manual print/accumulate 08: Positive/Negative weighing, use for testing the tension or compression force 09: Minus weighing mode 10: Automatic tare mode 11: Continuous automatic tare mode Modify the mode and push [FN] to confirm
Push [FN] Push [↑] or [↓] to modify	[Aut 03] [t 3]	If the Aut=03 or 05, there is the time set for dynamic weighing (average weight during the set time) After set done, push [FN] to confirm.
Push [FN]	[0]	Return to weighing mode

See the indicator manual for more information and guidance on specific configuration and settings or email info@agrioid.com with your query.