 


AMP **CADDY**

**V3** **PRO**  
**MAX**

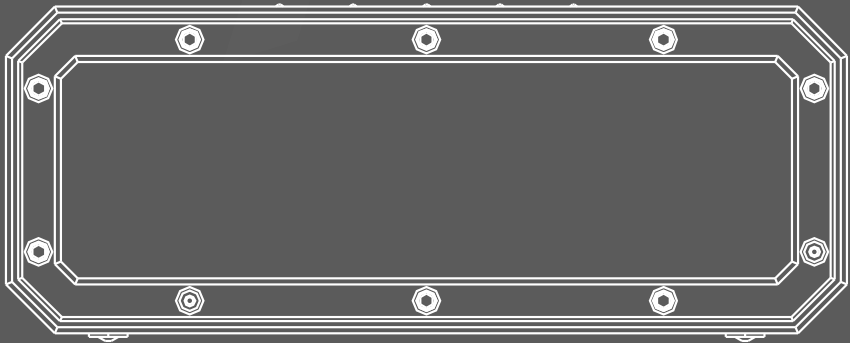

 
 
Type-C Charging Cable

### **Pairing one speaker to your device**

- Long press the power button. The speaker will automatically go into pairing mode
- Go to the Bluetooth Settings on your device and select “Ampcaddy”
- Success



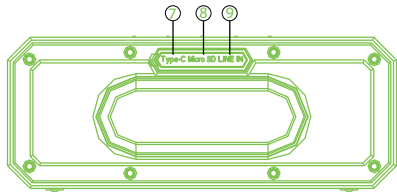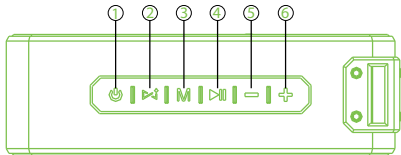

 

### **Pairing two speakers together**

- Verify both speakers are disconnected from your device before the speakers are turned on
- Turn on Ampcaddy Bluetooth speaker
- Press the TWS pairing button for 2 seconds, you will hear a double beep and the yellow light will blink
- Press the TWS pairing button for 2 seconds on the second Ampcaddy speaker, you will hear a double beep and the yellow light will flash, yellow light will turn solid when TWS pairing has completed.
- Go to Bluetooth settings on your device and select Ampcaddy
- Success! Ampcaddy speakers will now perform in stereo sound
- Once the speakers have been paired successfully, they will automatically pair at each subsequent use



- ① Power ON/OFF
- ② EQ and TWS option
- ③ Mode Selection of Bluetooth/Line In /Micro SD
- ④ Play/Pause/Answer or Reject Phone call
- ⑤ Volume -/Previous Track
- ⑥ Volume +/Next Track
- ⑦ Charging Port
- ⑧ Micro SD Port
- ⑨ AUX IN

Bluetooth Version	4.2
Transmission Range	≥18m (Open field)
Output Power	20x2 (40W total)
Battery	7.4V/2500mAh
Power Supply	Type-C 5V/3A
Frequency Response	80Hz-18KHz
Distortion	≤1.0%
Driver Unit	4Ω 20W/53mm
Charging Time	3hours

Key	Operation	Function
	ON/OFF	Short press to turn on. Press 2 times to pair multiple speakers
		Long press for 3 seconds to turn off
	EQ/TWS	Long press to change the mode to EQ, voice XBS bass or soft music Long press for 2 seconds to enter in to the TWS function. While in TWS ,long press the button for 2 seconds to disconnect
	MODE	Press to selection Bluetooth/Micro SD/AUX modes Long press for 5 seconds to clear the matching formation
	Play/pause	Press once when music is playing to pause, answer incoming calls or to hang up a phone call Press and hold for 2 seconds to reject the incoming call
	Volume-/Previous Track	Short press this button to decrease the volume Long press 2 seconds to skip track.
	Volume+/Next Track	Short press this button to increase the volume Long press 2 seconds to skip track.

1. Blue LED light blinks when the speaker is waiting to pair to a device. It will change to solid blue after successfully pairing with device.
2. Red LED light is solid red when the speaker is recharging. It will turn off when the battery is fully charged.
3. Yellow LED light blinks when pairing multiple speakers. When you've successfully matched the two speakers, the Yellow LED light will become solid.

Micro SD Card must be equal to or less than 64GB