

TWO SIDED VERTICAL FIRE DANGER SIGN (Assembly instructions)



Your Two Sided Vertical Fire Danger Sign (VFDS) has been shipped to you “Pre-Assembled”.


The 2S VFDS consists of two main sign sides - referred to as Side “A” and Side “B”.

You will need to separate the Two sides before installation. Do this by lifting the hinged side “B” and removing the end screws, washers and barrels from the hinge pins (pre-installed) When the sign is installed, these screws, washers and barrels will be re-installed as they are now. Slide the hinged side off the pins and set aside. Side “A” is the “fixed” side of the sign (non- hinging) Side “B” is the hinged side of the sign.

Side “A” also comes pre-assembled with the Slider tracks and the Fire Danger Rating “Slider”. At the top and bottom of Side “A”, there are (2) Machine screws that attach the track to the sign as well as act as “Stop Pins” for the slider. On both the Left and Right “Mounting Flanges” there are pre-installed “Pins”. They are held in place with a rubber washer and may seem a little loose, however, when the sign is attached tightly to the posts, these pins will become rigid and work perfectly for both the “hinging” and “receiving”. Do not remove the rubber washers. They keep the hinged Side “B” in proper alignment when closed and protect the edges of the sign.

Side “A” is attached to the (2) posts using (4) Pan-head screws (provided) on each side. You must attach the Side “A” to the posts before cementing them into the ground to insure perfect alignment. If you have a “Side Mount Smokey” sign and projecting post, You should pre-install that projecting post before the Side “A” sign is attached to the vertical posts. Use the 6” lag screws provided. Smokey can be installed later. If you have a “Smokey Lock”, you will find that the locking pin has also been pre-installed.

Side “B” is the hinged side of your sign. After the concrete has set and posts are secure, reassemble the two sides (“A” and “B”) as they were when shipped. Slide the hinged Side “B” over the pins then reinstall the hardware (barrel first, then washer, then the end screw) make sure the end screws are very tight.

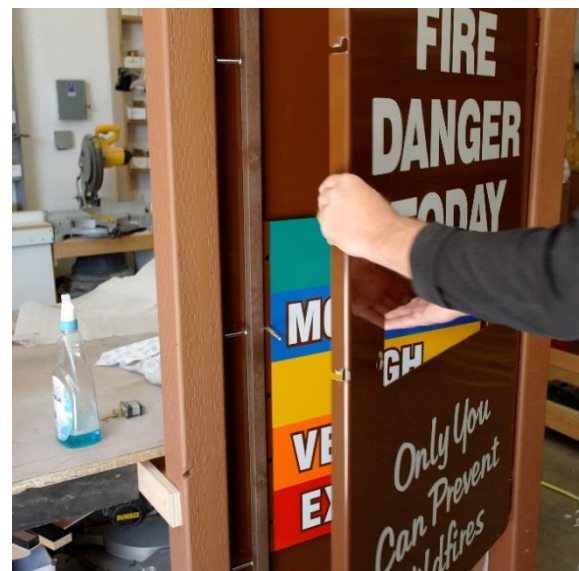

TWO SIDED VERTICAL FIRE DANGER SIGN (Assembly instructions)



Install the side mount Smokey using the pan-head screws provided and attach the lock body to the lock pin. The key to the Smokey Lock is the same as the Fire Danger Rating lock.

Once Side "B" is in place, you can open up the sign and set the Fire Danger Rating Slider. When the hinged Side "B" is opened to 90 degrees, it will drop into a pocket setting and will stay there until you are ready to close it. Place the Slider in its proper position by aligning the (2) holes on each side of the rating. On the right side (as you are facing) place the "Hitch Pin" (provided) to hold the slider in place. (This also helps to keep the Slider perfectly level) The hitch pin ring should be on the Slider side of the sign. Now place the locking pin in the opposite hole with the head of the pin on the other side, or, "Face of Side "A". Now close the hinged Side "B" and place the lock body onto the pin. The lock will keep the hinged side closed as well as make sure the Fire Rating cannot be tampered with.

