

SAKI

Baristan

Electric Pour-Over Kettle

USER MANUAL



Questions or Concerns?

Mon-Fri, 9:00 am-6:00 pm PST/PDT
support@saki.us | (844) 331-7333

Table of Contents

Package Contents	01
Specifications	02
Important Safeguards	03
• General Safety	04
• While Boiling	05
• Plug & Cord	06
Product Diagram	07
Before First Use	08
Brewing	09
• Test Run	10
• Turn Kettle ON/OFF	11
• Select Display Temperature Settings	12
• Setting a Goal Temperature	13
• Keep Warm Mode	14
• Built-in Brew Stopwatch	15
• High Altitude Use	16
• Optimal Brew Temperatures	17
Cleaning & Storage	18
Warranty Information	19
Customer Support	20

Specifications

SAKI	1-Liter Pour Over Kettle Model: SK-PO 01
Power Supply:	AC 120V, 60Hz
Rated Power:	1200W
Capacity:	34 oz / 1 L
Temperature Range:	104 - 212 F 40 - 100 C
Keep Warm Range :	1 - 60 min
Dimensions:	11.6 x 8.7 x 8.3 in
Weight:	2.4 kg / 5.3 lbs

Package Contents

- 1 x Baristan Pour Over Kettle
- 1 x Baristan Base
- 1 x Soft Close Lid
- 1 x Baristan User Manual
- 1 x Brew Guide

READ ALL INSTRUCTIONS. DO NOT THROW AWAY THIS SAFETY GUIDE.

Before use, please read these safety warnings carefully and use the kettle properly. These safety warnings are indicated for the safe and proper use of this product, prevent danger to the user or others, and damage property.

General Safety

- **Do not** touch hot surfaces. Use handle or knob.
- To protect against fire, electric shock, and injury to persons, **do not immerse** kettle, plug, or cord in water or other liquid.
- **Unplug** when not in use and before cleaning. Allow cooling before putting on or taking off parts. Contact **Customer Support**.
- **Do not** use third-party replacement parts or accessories, as this may cause injuries.
- **Do not** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact **Customer Support**.
- **Do not** use outdoors.
- **Do not** place on or near a hot gas or electric burner or in a heated oven. **Always** attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to **"off,"** then **remove the plug from a wall outlet**.
- **Do not** use the appliance for other than intended use. For household use only.
- **Do not** use your kettle for any purpose other than described in this manual.
- Not for commercial use. Household use **only**.
- To avoid burns and risk of personal injury, use extreme caution when carrying a kettle containing hot water.
- Do not use the kettle if your hands are wet.
- Position the kettle properly on the power base before switching on.
- **DO NOT HEAT AN EMPTY KETTLE:** The concealed heating element in the bottom of the kettle is protected by an automatic safety device. If your kettle is accidentally heated without being filled or is allowed to boil dry, it will automatically cool down and then turn off. If this happens, unplug the kettle, fill it with cold water, and wait a few minutes before replacing it on the base and plugging it in.

SAVE THESE INSTRUCTIONS

- Use the kettle only with a delivered power base.
- **Do not** use any other kettle on the delivered base or any other base with a delivered kettle. Use only the original, delivered pair together.
- After using the kettle, wait until the kettle has cooled

down before removing the lid.


- To avoid possible steam damage, turn spout away from walls or cabinets during use.
- Use a protective pad under the kettle after it has been heated to prevent damage to surfaces.
- To reduce the risk of fire or electric shock, do not remove the bottom cover from the base or disassemble the base or kettle in any way. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only. Opening base or kettle will result in a void of the one-year warranty.

While Boiling


- Scalding may occur if the lid is **removed** during the brewing cycles. If the kettle is overfilled, boiling water may be ejected.
- **Never** use your kettle without the parts in place.
- Keep your unit away from flammable materials. Use on a flat, stable, heat-resistant surface away from heat sources or liquid. The kettle is only to be used with the stand provided.
- **Warning:** Avoid spillage on the connector.
- **Warning:** Potential injury from misuse.
- **Do not remove** the lid while the water is boiling.

Plug & Cord

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to modify the plug in any way.
- **Keep the power cord away** from hot surfaces. **Do not** plug in the power cord or operate the Unit controls with wet hands.
- Your kettle should **only** be used with **120V, 60 Hz** electrical systems. **Do not** plug into another type of outlet.

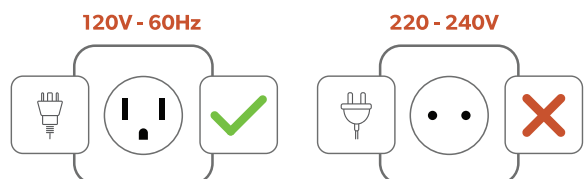

PRODUCT DIAGRAM

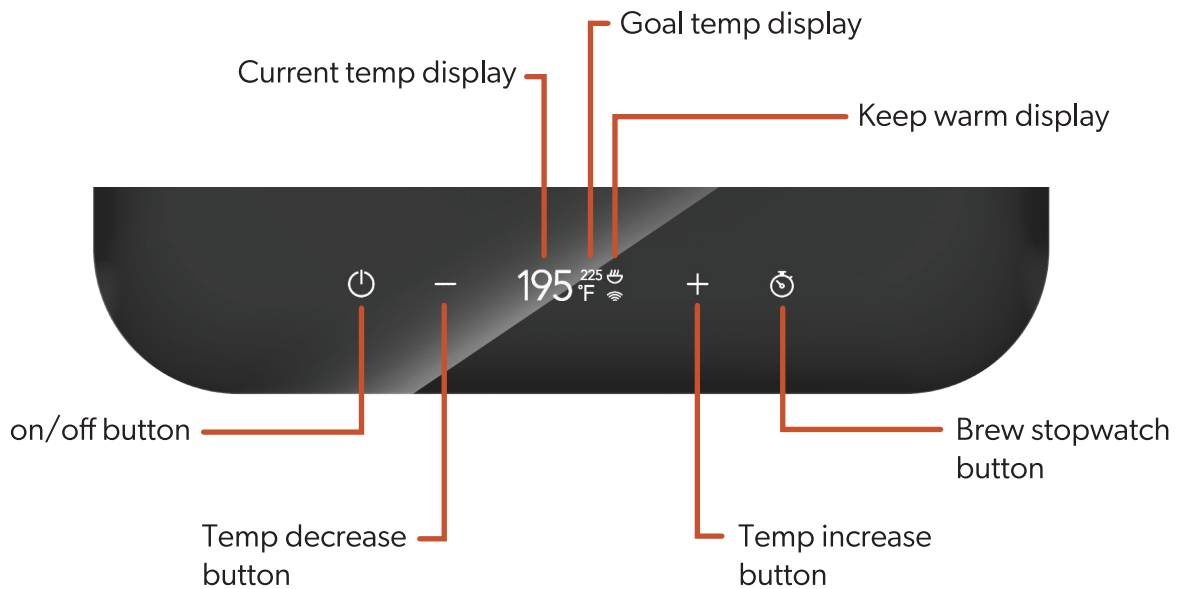

BEFORE FIRST USE

Please read all use instructions thoroughly before turning on and using your kettle.

Test Run

- Place the Baristan's base and kettle on a flat, level surface.
- Remove Baristan's lid to add water. Do not remove lid if it is hot.
- After adding water, insert lid and ensure spout is not close to and/or facing a wall or cabinet.
- Plug the power cord into wall outlet - make sure to follow the safety guidelines above.
- For FIRST USE, rinse interior of kettle and then boil small amount of water approx halfway full from the "max fill" line. Make sure you fill to at least the min fill point in diagram.
- Set goal temperature to 212 degrees Fahrenheit or 100 degrees Celsius to boil cleaning water.
- Boil water for one minute, then turn off kettle by long pressing the on/off button.
- Dispose initially boiled water; this water should not be consumed. Your Baristan is now ready to use.

Turn Kettle ON/OFF

To turn Baristan on, quickly press to the on/off button. The OLED screen will light up. To turn Baristan off, long press the on/off button until you hear beep sound. The OLED screen will turn black.

Select Display Temperature Settings

Choose your preferred temperature setting of Fahrenheit or Celsius by long pressing on "+" "-" button at the same to switch the preferred temperature.

Setting a Goal Temperature

- Press “+” button to increase SET temperature. The OLED screen will display temperature options as you press. Long press to “+” button to increase the temperature continually.
- Once you arrive at your desired temperature, stop pressing the button. Baristan will display this SET temperature for one second.
- On Baristan’s ring light will start breathing effect to, indicating the kettle is heating to your desired SET temperature.

Keep Warm Mode

- Baristan’s keep warm mode allows the kettle to hit your desired SET temperature and maintain that SET temperature for 60 minutes. This is not an optional setting.
- Once you arrive at your desired temperature, keep warm mode will be activated automatically.
- To turn to keep warm mode off, turn off the kettle by long pressing the on/off button after you finish your brewing.

Built-in Brew Stopwatch

- Baristan comes with a built-in Brew Stopwatch to keep track of your brew time. To start the stopwatch, press the brew stopwatch button.
- The OLED screen will start a 5-second countdown, giving you time to get ready to pour.
- To turn the stopwatch off and return to the main screen, press the brew stopwatch button once.

BREWING

High Altitude Use

At higher elevations, water will boil at a lower temperature. At sea level, water boils at 100°C (212°F). For every 500 feet/152 meters in elevation gain, the boiling point increases by approx. 0.5°C (0.9°F). Please use the following chart to adjust your temperature accordingly.

Caution: Choosing a SET temperature greater than your relative boiling point can result in the kettle overflowing.

High Altitude Chart

Altitude, ft (m)	Boiling Point of Water, °F (°C)
0 ft / 0 m	202 °F / 100 °C
500 ft / 150 m	211.1 °F / 99.5 °C
1.000 ft / 350 m	210.2 °F / 99 °C
2.000 ft / 610 m	208.4 °F / 98 °C
5.000 ft / 1524 m	203 °F / 95 °C
6.000 ft / 1829 m	201.1 °F / 94 °C
8.000 ft / 2438 m	197.4 °F / 91.9 °C
10.000 ft / 3048 m	193.6 °F / 89.8 °C
12.000 ft / 3658 m	189.8 °F / 87.6 °C
14.000 ft / 4267 m	185.9 °F / 85.5 °C

Optimal Brew Temperatures

Follow the brew chart below to use the optimal brew temperatures for coffee, tea, and other hot drinks. Please note, since tea has a wide range of types, the tea steeping temperatures below are basic guidelines. If your tea comes with brew instructions, we recommend following their instructions.

Optimal Temperature Brew Chart

Coffee	195 - 205 °F / 90 - 96 °C
White / Green Tea	170 - 200 °F / 76 - 93 °C
Oolong Tea	185 - 200 °F / 85 - 93 °C
Herbal / Black Tea	200 - 212 °F / 85 - 100 °C
Hot Cocoa / Cider	190 °F / 88 °C

CLEANING & STORAGE

Cleaning

- Before cleaning, be sure the base is unplugged, and the kettle has cooled completely. Empty any remaining water from the kettle.
- Wash the inside of the kettle with soapy water and rinse. NEVER IMMERSE THE KETTLE IN WATER OR OTHER LIQUIDS.
- Do not place in a dishwasher.
- Wipe the exterior of the kettle and base with a damp cloth or sponge and dry. Do not use abrasive soaps, cleansers, or scouring pads on any part of the kettle as it may damage the finish.
- Over time, the kettle may heat up but won't boil; this may be due to scaling and mineral deposits that can build up inside the kettle depending on your use and the hardness of the water in your area. When this happens, it's time for descaling. Use a scale/lime remover and follow its manufacturer's directions.

Storage

- Clean and dry all parts before storing. Store the kettle in its box or a clean, dry place.
- Never wrap the power cord around the kettle.

LIMITED ONE - YEAR WARRANTY

Product	Baristan Pour Over Kettle, 1l
Model	SK-PO 01
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID	
Date of Purchase	

Terms & Policy

Saki Kitchen Incorporation warrants this product to the original and quality, under normal use and conditions, for a period of one year from the date of original purchase.

Saki Kitchen agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than SAKI;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;

- To damages or defects exceeding the cost of the product.

Saki Kitchen will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Saki Kitchen's warranty extends only to products purchased from authorized sellers that are subject to Saki Kitchen's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@saki.us NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Extend Your Warranty by 1 Year

Register your product within 14 days of purchase at www.saki.us/pages/warranty to extend your 1 - year warranty by an additional year.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

SAKI KITCHEN INC.

2323 Main Street,
Irvine, CA, 92614

Email: Support@saki.us

Toll - Free: (844) 331-733

Support Hours

Mon - Fri, 9:00 am - 5:00 pm PST/PDT

*Please have your invoice and order ID ready before contacting Customer Support.

SAKI

Questions or Concerns?

Mon-Fri, 9:00 am-6:00 pm PST/PDT
support@saki.us | (844) 331-7333