

SAKI

Kettle Quick Start Guide

What's In The Box



Kettle Body



Kettle Base



Kettle Lid

Control Panel

Power On/Off

Press to power on the unit.
Hold to power off the unit.



Preset Selection

Press to select between
7 one-touch presets.

Temperature Display

Monitor water temperature

Please make sure to read SAKI User Manual prior to using your unit.

Using the Kettle

Before using the kettle:

1. Plug the kettle base into an outlet.
2. Fill the kettle up to MAX line, place it on the kettle base and run a heating cycle on BOIL preset.
3. Once the boil cycle is complete, discard the water and repeat this process one more time.

Note: ONLY fill the kettle body with water. DO NOT heat or boil other liquids.



1. Plug in the kettle base. Fill the kettle with the desired amount of water. Close the lid and set the kettle on the kettle base.

Note: To switch from Fahrenheit to Celcius, press and hold temperature + and - buttons for 2 seconds.

Note: DO NOT start the heating cycle when the kettle is empty. If the kettle detects there is not enough water, the kettle will shut off, and the temperature display will read "NO WATER". Plug out from the outlet and let the tea maker cool for 10 minutes before refilling.

2. Select your desired temperature on the control panel. After you selected desired temperature/preset on control panel. You do not have to press any buttons.

3. To indicate that the heating cycle has started, the red light ring will illuminate, and the temperature display will show current temperature as it rises. When the water has reached the desired temperature, the kettle will beep and automatically switch on the auto temperature hold function. The kettle will maintain the desired temperature for 60 minutes.

Note: To mute the kettle, press and hold the temperature + and  for 3 seconds. To indicate the kettle is muted,  icon will read on the temperature display.

Powering off:

The kettle will automatically power off after 1 hours of inactivity. To manually power off, press and hold the POWER ON/OFF button for 3 seconds.

Presets Temperature Table

Preset	Given Temperature	Recommended Drink Types	Ideal Range For Manual Control	Screen Reads
Green Tea	175°F (80°C)	Matcha Sencha Gyokuro Jasmine Gunpowder	160°F-175°F (70°C-80°C)	Green
White Tea	185°F (85°C)	Most White Teas	180°F-190°F (80°C-90°C)	White
Oolong Tea	195°F (91°C)	Most Oolong Teas	195°F-205°F (90°C-95°C)	Oolong
Coffee	200°F (93°C)	French Press Pour Over Instant Coffee	195°F-205°F (90°C-95°C)	Coffee
Black Tea	205°F (96°C)	Pu'erh Chai Black Tea With Milk	195°F-205°F (90°C-95°C)	Black
Herbal Tea	210°F (99°C)	Fruit Teas Rooibos Peppermint	210°F (99°C)	Herbal
Boil	212°F (100°C)	Hot Chocolate Oatmeal Instant Soup	212°F (100°C)	Boil

Warning: This table includes recommended guidelines. The ideal temperature ranges may vary according to personal preference. Experiment with your favorite tea/coffee and adjust the temperatures and steep times to suit personal taste.

Note: ONLY fill the kettle body with water. DO NOT heat or boil other liquids.

Cleaning, Care & Storage

Cleaning

Unplug your kettle and allow it to cool before cleaning. Wipe the kettle and power base with a soft damp cloth. Be sure that electric socket is kept dry. Dry all parts after every use.

Warning: NEVER immerse the kettle or kettle base in water.

Storage

Unplug power cord from outlet and allow kettle to cool completely before storing. Follow cleaning instructions and store in an upright position. Do not store anything on top of your kettle. The kettle may be stored on base when not in use.

Descaling

The kettle will not work properly if it is not descaled regularly. Regular descaling can increase the life of the kettle, allowing it to boil water faster and with less energy.

Scale is a naturally occurring buildup of mineral deposits caused by impurities in water, especially hard water. For best performance, descale the kettle every 4-8 weeks or whenever scale buildup is present inside.

Descaling can be completed with a descaling solutions specifically designed for kettles. Follow the directions on the descaling solution package

OR

1. Fill the kettle with equal parts water and white vinegar.
2. Let sit for 30 minutes.
3. Discard solution and rinse kettle thoroughly with clean water.
4. Repeat this process until all deposits are removed.

SAKI

For questions or to register your product, contact us at 1-844-331-7333 or visit us online at saki.us