



# SAKI BREAD MAKER REMOVING / INSERTING THE BREAD PAN GUIDE

For models: RA-018 AF/HF-8350 DT



[www.saki.us](http://www.saki.us)

## Questions or Concerns?

Mon-Fri, 9:00 am-6:00 pm PST/PDT  
support@saki.us | (844) 331-7333



## Important Notice

If you are having trouble removing and inserting the bread pan back, don't panic! Due to safety certifications, bread pans with dual kneading blades must be placed harder.

We have created this guide for you to help you remove and insert the bread pan with minimum effort.



## Removing the Bread Pan

### Step 1

Hold the bread pan's metal handle with both hands from each end. See the image on the right.



### Step 2

First tilt the bread pan toward you to unlatch it. Do not pull the pan upwards yet. See the attached image on the right.



### Step 3

Then lift the bread pan upward to remove it. See the attached image on the right.



## Inserting the Bread Pan

### Step 1

Hold the bread pan handle both hands from each end of the handle. Position the bread pan in the baking chamber. See the attached image on the right.



### Step 2

The bread pan should stay loosely in the baking chamber. Do not use bread pan handle to insert properly. See the attached image on the right.



### Step 3

Use your fingers to push down firmly on both ends of the pan until it clicks into place. See the attached image on the right.

