



SAKI BREAD MAKER TROUBLESHOOTING GUIDE

For models: RA-018 AF/HF-8350 DT

Questions or Concerns?

Mon-Fri, 9:00 am-6:00 pm PST/PDT
support@saki.us | (844) 331-7333

www.saki.us

TROUBLESHOOTING GUIDE

Problem and Solution

Kneading blades does not move during KNEAD cycle.

If the motor is used many times to continuously perform only the KNEAD cycle, the safety device will engage and stop the motor. Give the motor a break by stopping motor operation for about an hour after it has been used.

The buttons do not operate.

The Power Plug is disconnected from the electrical outlet.

The lights turn on but kneading does not start.

Bread pan not placed correctly.

- Check pan, make sure it is locked in place correctly.

Time delay selected.

- Bread maker will not start until start time is reached.

The product makes noise during operation.

The motor makes noise during the KNEAD cycle.

- This does not indicate a malfunction.

The product rattles during operation.

Bread pan not placed correctly.

- Please use bread pan guide to place correctly.

Smoke comes from the steam vent and there is a burning smell.

Ingredients or bread crumbs have collected on the main heater or inside the main body.

- This does not indicate a malfunction. Make sure to clean the product after use.
- Unplug the Power Plug and allow the product to cool off before cleaning.

Display screen shows "H HH".

Temperature inside bread maker is too high - machine still hot after the previous baking procedure.

- This does not indicate a malfunction. Press START/STOP and unplug, take out the baking pan and leave it to cool at room temperature. Then insert the plug and start again.

