

SAKI

Electric Samovar User Manual



Questions or Concerns?

Mon-Fri, 9:00 am-6:00 pm PST/PDT
support@saki.us | (844) 331-7333

Thank You



Register Your Purchase

saki.us/pages/warranty

1-844-331-7333

Scan **QR code** using mobile device

Specifications

SAKI	Electric Samovar, 4.0L Model: SK-SMW01
Power Supply	AC 120V, 60Hz
Rated Power	1500W
Kettle Capacity	135 oz / 4 L
Teapot Capacity	34 oz / 1 L
Keep Warm Temperature Range	94 - 96 °C
Dimensions	16.5 x 10.6 x 11,4 in
Weight	6.5 lbs / 3 kg

US FCC Compliance Statements: This device complies with Part 15 of the US FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Please note that changes or modifications of this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Table Of Contents

Important Safeguards	2
Parts Diagram	3
Before First Use.....	4
Getting to Know Your Electric Samovar.....	5
Using Your Electric Samovar.....	6
Cleaning & Care	7
Troubleshooting Guide.....	8
Warranty.....	9
Customer Support	10

IMPORTANT SAFEGURADS

Read All Instructions. Do Not Throw Away This Safety Guide.

Before use, please read these safety warnings carefully and use the samovar properly. These safety warnings are indicated for the safe and proper use of this product, prevent danger to the user or others, and damage property.

General Safety

- **Do not** touch hot surfaces. Use handle or knob.
- To protect against fire, electric shock, and injury to persons, **do not immerse** samovar, plug, or cord in water or other liquid.
- **Unplug** when not in use and before cleaning. Allow cooling before putting on or taking off parts. Contact **Customer Support**.
- **Do not** use third-party replacement parts or accessories, as this may cause injuries.
- **Do not** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact **Customer Support**.
- **Do not** use outdoors.
- **Do not** place on or near a hot gas or electric burner or in a heated oven. **Always** attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then **remove the plug from a wall outlet**.
- **Do not** use the appliance for other than intended use. For household use only.
- **Do not** use your samovar for any purpose other than described in this manual.
- Not for commercial use. Household use **only**.
- To avoid burns and risk of personal injury, use extreme caution when carrying a samovar containing hot water.
- Do not use the samovar if your hands are wet.
- Position the samovar properly on the power base before switching on.
- **DO NOT HEAT AN EMPTY SAMOVAR:** The concealed heating element in the bottom of the samovar is protected by an automatic safety device. If your samovar is accidentally heated without being filled or is allowed to boil dry, it will automatically cool down and then turn off. If this happens, unplug the samovar, fill it with cold water, and wait a few minutes before replacing it on the base and plugging it in.

- Use samovar only with a delivered power base.
- **Do not** use any other samovar on the delivered base or any other base. Use only the original, delivered pair together.
- After using the samovar, wait until samovar has cooled down before removing the lid.
- To avoid possible steam damage, turn spout away from walls or cabinets during use.
- Use a protective pad under the samovar after it has been heated to prevent damage to surfaces.
- To reduce the risk of fire or electric shock, do not remove the bottom cover from the base or disassemble the samovar in any way. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only. Opening base or samovar will result in a void of the one-year warranty.


While Boiling

- Scalding may occur if the lid is **removed** during the brewing cycles. If the samovar is overfilled, boiling water may be ejected.
- **Never** use your samovar without the parts in place.
- Keep your unit away from flammable materials. Use on a flat, stable, heat-resistant surface away from heat sources or liquid. Samovar only be used with the stand provided.
- **Warning:** Avoid spillage on the connector.
- **Warning:** Potential injury from misuse.
- **Do not remove** the lid while the water is boiling.

Plug & Cord

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to modify the plug in any way.
- **Keep the power cord away** from hot surfaces. Do not plug in the power cord or operate the Unit controls with wet hands.
- Your samovar should **only** be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.

**SAVE THESE
INSTRUCTIONS**

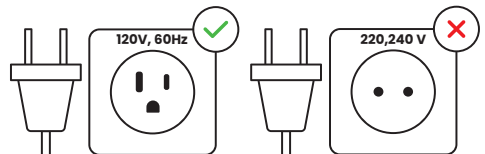

PARTS DIAGRAM

- A Porcelain Teapot
- B Teapot Lid
- C Body Handles
- D Electric Samovar Body
- E Electric Samovar Base
- F Control Panel
- G Drip Tray
- H Electric Samovar Faucet



BEFORE FIRST USE


Please read all use instructions thoroughly before turning on and using your electric samovar.

Test Run

Remove and discard any packaging material, promotional labels, and tape from the electric samovar.

1. Place the electric samovar base on a flat, level surface.
2. Fill the electric samovar with water to **MAX 4.0 L** line.
3. Put the porcelain teapot on top of electric samovar body.
4. Make sure the electric samovar base is plugged in.
5. Press **START/STOP** button on control panel to begin the heating cycle.
6. Once the boil cycle is complete, discard the water and repeat this process one more time.

GETTING TO KNOW YOUR ELECTRIC SAMOVAR

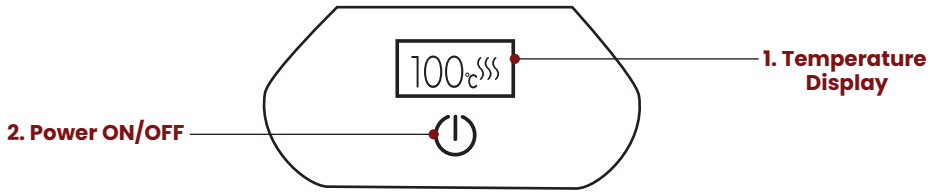

CONTROL PANEL DISPLAY & OPERATING BUTTONS

NOTE: The temperature accuracy of the electric samovar is $\pm 3^{\circ}\text{F}$.

1. Temperature Display:

Live Temperature Readout: When the electric samovar starts working, the temperature display will show the current temperature of the water inside to track progress.

2. Power ON/OFF:

Press to turn on the electric samovar. Press and hold again to turn off the electric samovar.

POWERING ON

Plug the power cord into the socket. The power button will start illuminating, control panel will automatically turn on once plugged in.

POWERING OFF

The electric samovar will automatically power off after **3 hours** of inactivity. To manually power off, press and hold the **POWER ON/OFF** button for 3 seconds.

USING YOUR ELCTRIC SAMOVAR

Automatic Shutoff:

The electric samovar will automatically power off after **3 hours** of inactivity.

HEATING WATER

NOTE: ONLY fill the electric samovar body with water. **DO NOT** heat or boil other liquids.

1. Plug in the electric samovar. Fill the electric samovar with the desired amount of water above minimum level and below maximum level. Put the porcelain teapot on top of electric samovar body.

2. Press POWER ON/OFF button once to start heating cycle. To indicate that the heating cycle has started, the red light ring will illuminate, and the display will show current temperature.

3. When the water has reached the temperature, the electric samovar will beep and automatically switch on the keep warm function. The electric samovar will continue to keep warm the temperature for up to **3 hours**.

AUTO KEEP WARM

Auto keep warm is the electric samovar's ability to maintain the default temperature for **3 hours** after a heating cycle. Once the electric samovar reached boiling temperature, the electric samovar will beep and automatically activate keep warm. To indicate that the keep warm is activated, the red light ring will start pulsing effect.

NOTE: In order to keep the tea hot in the teapot, please be sure that there is enough water inside the samovar during the keep warm period.

BOIL DRY PROTECTION

If the electric samovar has insufficient water when starting a heating cycle, the tea maker kettle will automatically switch off to protect from overheating and causing damage. The electric samovar will beep and the temperature display will read "**NO WATER**" to signify that the electric samovar has boiled dry. Allow the electric samovar to cool for at least **10 minutes** before refilling.

CLEANING & CARE

WARNING: NEVER immerse the electric samovar in water. Instead of washing just wipe the exterior of the samovar body during the keep warm period.

WARNING: Do not use chemicals or abrasive cleaners internally or externally.

1. Unplug your electric samovar and allow it to cool before cleaning.
2. Wipe the electric samovar and power base with a soft damp cloth.
- 3 Be sure that electric socket is kept dry.
4. Dry all parts after every use.

DESCALING

The electric samovar will not work properly if it is not descaled regularly. Regular descaling can increase the life of the electric samovar, allowing it to boil water faster and with less energy.

Scale is a naturally occurring buildup of mineral deposits caused by impurities in water, especially hard water. For best performance, descale the electric samovar every **4-8 weeks** or whenever scale buildup is present inside.

Descaling can be completed with a descaling solutions specifically designed for kettles. Follow the directions on the descaling solution package,

OR

- 1) Fill the kettle with equal parts water and white vinegar.
- 2) Let sit for **30 minutes**.
- 3) Discard solution and rinse electric samovar thoroughly with clean water.
- 4) Repeat this process until all deposits are removed.

TROUBLESHOOTING GUIDE

The electric samovar base won't turn on.

- Make sure the power cord is securely plugged into the socket.
- Insert the power cord into a different socket
- Reset the circuit breaker if necessary.

The electric samovar is not heating up.

- The overheat control may have tripped. Let the electric samovar cool down.
- Ensure the electric samovar is fully seated on the power base.

The electric samovar turns off before reaching the target temperature.

- The electric samovar may contain too much scale. Refer to the descaling instructions on page 7 to descale the samovar.

TEMPERATURE DISPLAY MESSAGES:

NO WATER

- There is an insufficient amount of water inside the electric samovar. Allow the electric samovar to cool for at least **10 minutes**, then add fresh, room temperature water to at least above the minimum level and restart the heating cycle.
- If there is already water filled up to at least the minimum level, please email Customer Service at support@saki.us

LIMITED TWO-YEAR WARRANTY

Product	Electric Samovat
Model	SK-SMW01
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID Date of Purchase	

Terms & Policy

Saki Kitchen Incorporation warrants this product to the original and quality, under normal use and conditions, for a period of one year from the date of original purchase.

Saki Kitchen agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than SAKI;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Saki Kitchen will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Saki Kitchen's warranty extends only to products purchased from authorized sellers that are subject to Saki Kitchen's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@saki.us NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Extend Your Warranty to 3 Years

Register your product within **14 days** of purchase at www.saki.us/pages/warranty to extend your **2 year warranty** by an additional **1 year**.

CUSTOMER SUPPORT

If you have any questions or concerns about your electric samovar, please contact our helpful **Customer Support Team**.

SAKI KITCHEN INC

100 Bayview Cir, STE 100 Newport Beach, CA, 92660

Email: support@saki.us

Toll-Free: (844) 331-7333

Support Hours

Mon-Fri, **9:00 am - 6:00 pm** PST/PDT

*Please have your invoice and order ID ready before contacting Customer Support.

SAKI

Questions or Concerns?

Mon-Fri, **9:00 am-6:00 pm** PST/PDT
support@saki.us | (844) 331-7333