

# SAKI

## Tea Maker Quick Start Guide

### What's In The Box



Tea Maker  
Body



Teapot



Tea Maker  
Base



Teapot/Kettle  
Lid

### Control Panel


#### Power On/Off

Press to power on the unit.  
Hold to power off the unit.



#### Start/Stop Button

Press to begin a heating cycle.  
Press again to stop heating.

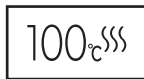

#### Temperature Display

Monitor water temperature

Please make sure to read SAKI User Manual prior to using your unit.


# Using the Tea Maker

## Before using the tea maker:

1. Plug the tea maker base into an outlet.
  2. Fill the tea maker up to MAX line, place it on the tea maker base, and run a heating cycle by pressing START/STOP button.
  3. Once the boil cycle is complete, discard the water and repeat this process one more time.
2. Press START/STOP once to start the heating cycle. To indicate that the heating cycle has started, the red light ring will illuminate, and the temperature display will show current temperature as it rises. Once the tea maker reaches boiling temperature, the tea maker will beep and automatically activate keep warm. The red light ring will start a pulsing effect to indicate that the keep warm is activated.

**Note:** ONLY fill the tea maker body with water. DO NOT heat or boil other liquids.

1. Plug in the tea maker base. Fill the tea maker with the desired amount of water. Put the teapot on top of tea maker body and set the tea maker body on to the tea maker base.

**Note:** To mute the tea maker, press and hold the START/STOP button for 3 seconds. To indicate the tea maker is muted,  icon will read on the temperature display

**Note:** To switch from Fahrenheit to Celsius, press and hold POWER ON/OFF and START/STOP buttons for 2 seconds.

## Powering On

To turn on the tea maker, plug the power cord into the socket. The control panel will automatically turn on once plugged in.

**Note:** DO NOT start the heating cycle when the tea maker is empty. If the tea maker detects there is not enough water in it, the tea maker shuts off, and the temperature display will read "NO WATER." Plug out from the outlet and let the tea maker cool for 10 minutes before refilling.

## Powering Off:

To manually power off, press and hold the POWER ON/OFF button for 3 seconds. manually power off, press and hold the

# Cleaning, Care & Storage

## Cleaning

Unplug your tea maker and allow it to cool before cleaning. Wipe the tea maker and power base with a soft damp cloth. Be sure that electric socket is kept dry. Dry all parts after every use.

## Storage

Unplug power cord from outlet and allow kettle to cool completely before storing. Follow cleaning instructions and store in an upright position. Do not store anything on top of your kettle. The kettle may be stored on base when not in use.

**Warning: NEVER** immerse the tea maker or tea maker base in water.

## Descaling

The tea maker will not work properly if it is not descaled regularly. Regular descaling can increase the life of the tea maker, allowing it to boil water faster and with less energy.

Scale is a naturally occurring buildup of mineral deposits caused by impurities in water, especially hard water. For best performance, descale the tea maker every 4-8 weeks or whenever scale buildup is present inside.

Descaling can be completed with a descaling solutions specifically designed for kettles. Follow the directions on the descaling solution package

OR

1. Fill the tea maker with equal parts water and white vinegar.
2. Let sit for 30 minutes.
3. Discard solution and rinse tea maker thoroughly with clean water.
4. Repeat this process until all deposits are removed.

# **SARI**

**For questions or to register your product, contact us at  
1-844-331-7333 or visit us online at [saki.us](http://saki.us)**