
Electric Curtain Rail Assembly

Use the Track Connectors to connect the rails together. Tighten with the Allen Key provided




One Rail is already assembled with Track Connectors. This is made up of shorter pieces that you can remove and use to achieve a more precise length.

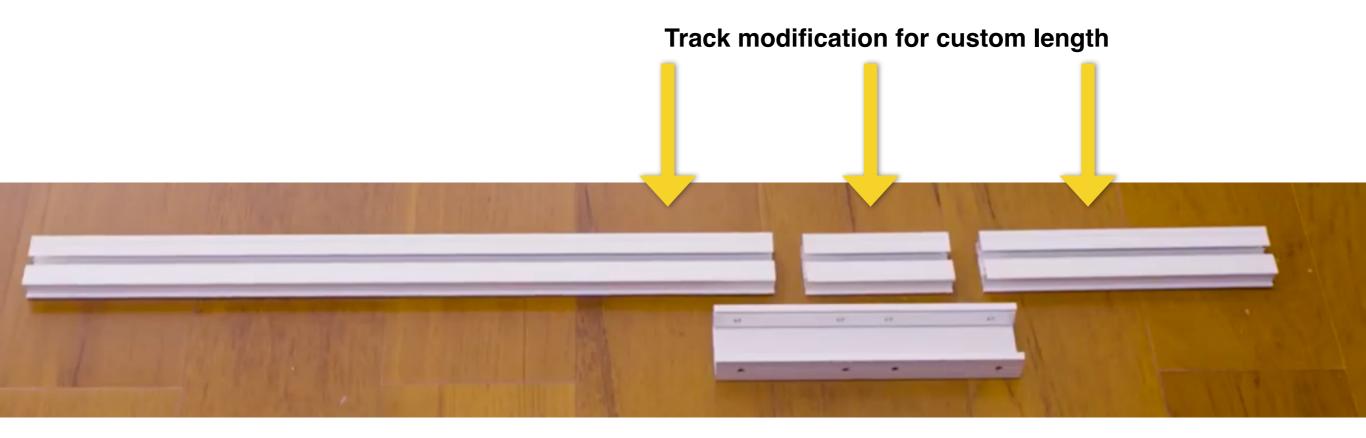





Make sure there are not large gaps between the joints

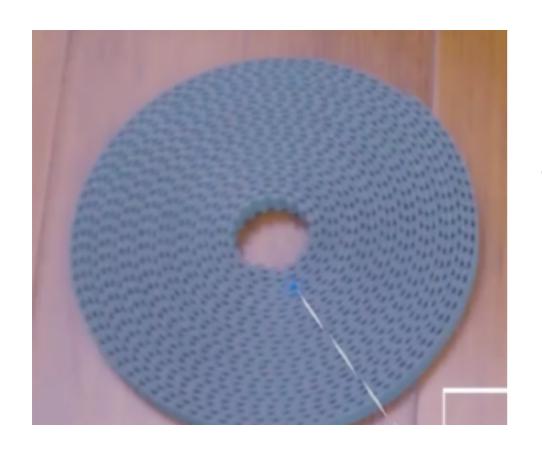

There is a ribbon and 2 measuring tools.


Do NOT cut the ribbon incorrectly!

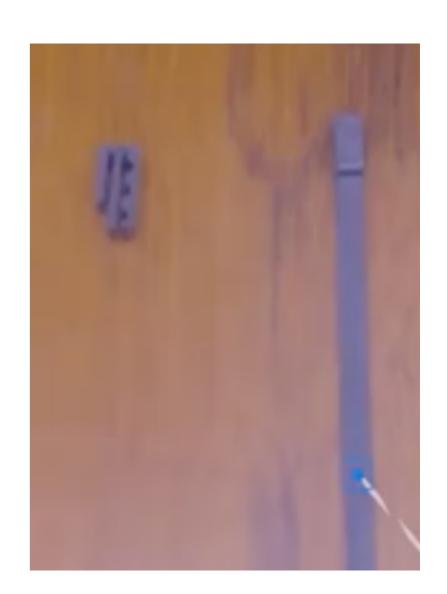

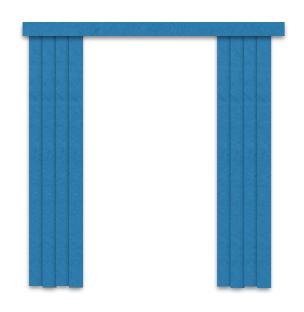


Curtains can open from the centre or all to one side but the instructions are different and you cannot change between these

Centre Opening Instructions ONLY!

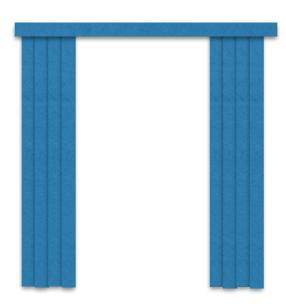


1. Attach the belt measure tool as shown

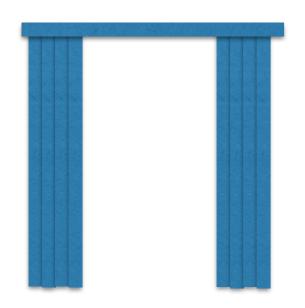

2. Pull the belt straight along the track and attach the Long measure tool

Centre
Opening
Instructions
ONLY!


3. Attach the Long measure tool to the track and cut at the end

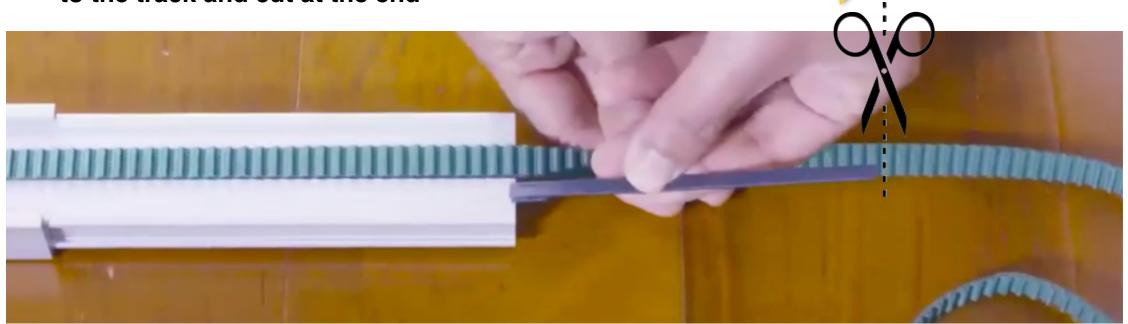

4. Repeat the steps so you have 2 parts equal in length



5. Fix the buckles onto the ends of the belts

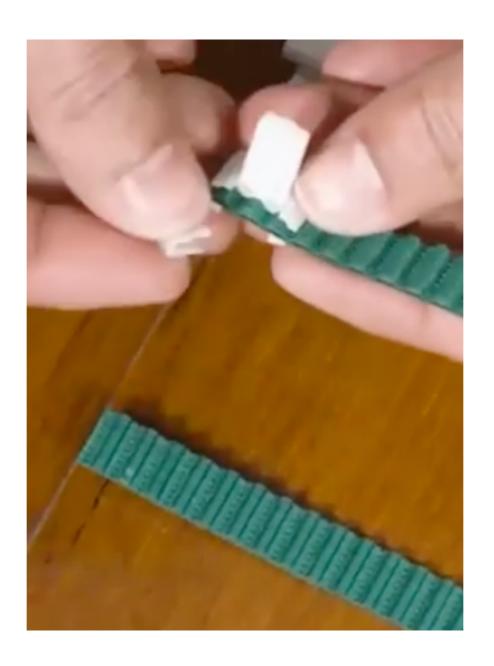


6. Press hard




7. Attach the runner wheel in inserting the buckle into the gap on the runner wheels




8. Take note of all the following

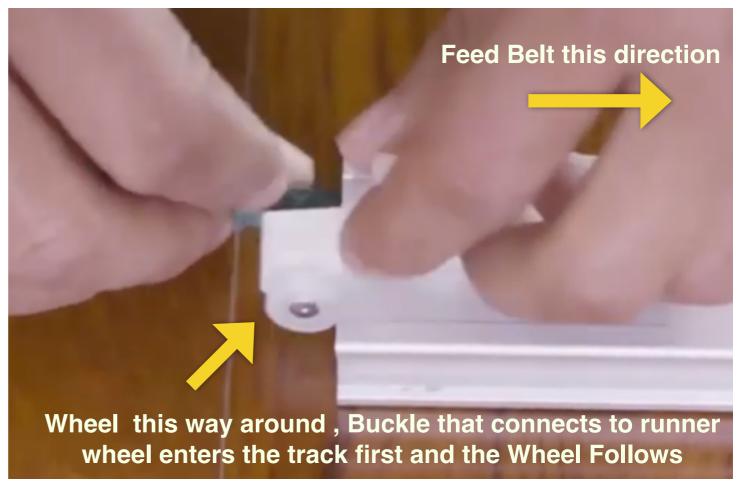


9. Feed all the way through the track

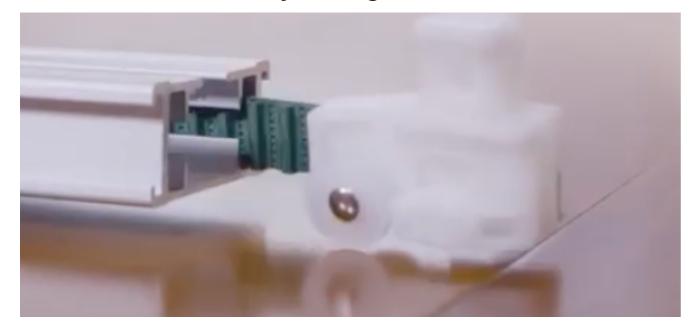

10. Feed the 2nd belt from the opposite side

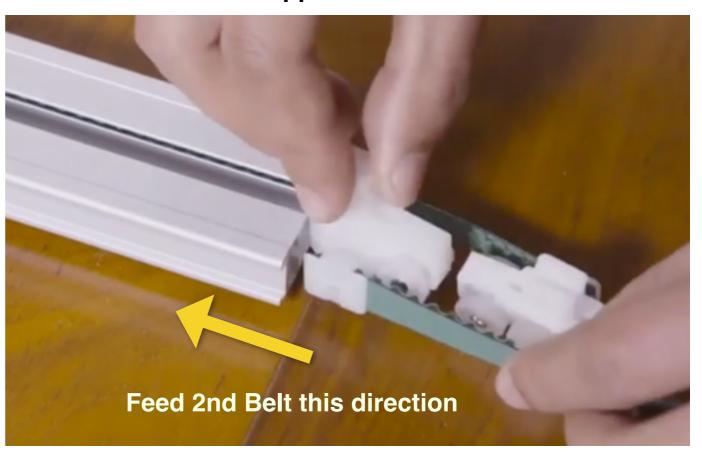

11. Feed the belt through the track end, make sure the wheel opening on the track end cap faces up

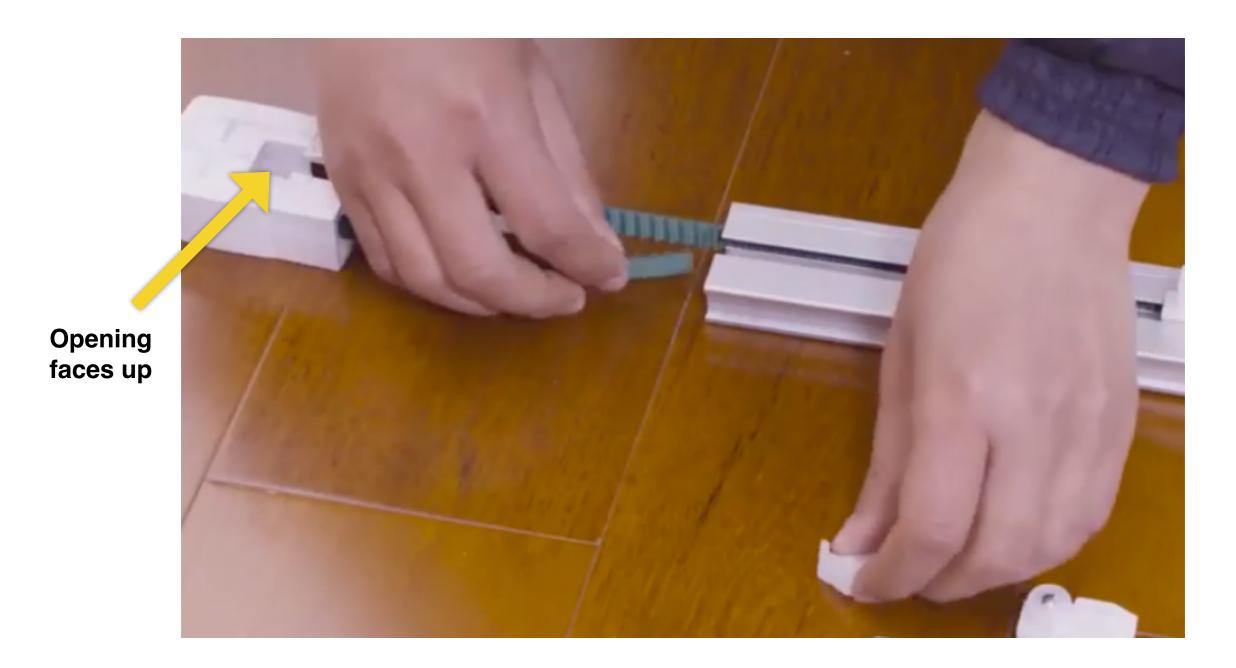


12. Attach the Belt buckle and runner wheel and insert into the track.



Don't put the runner wheel in the wrong way around, buckle first wheel nearest the endcap


13. Repeat on the other side

14. Assemble the two carriers

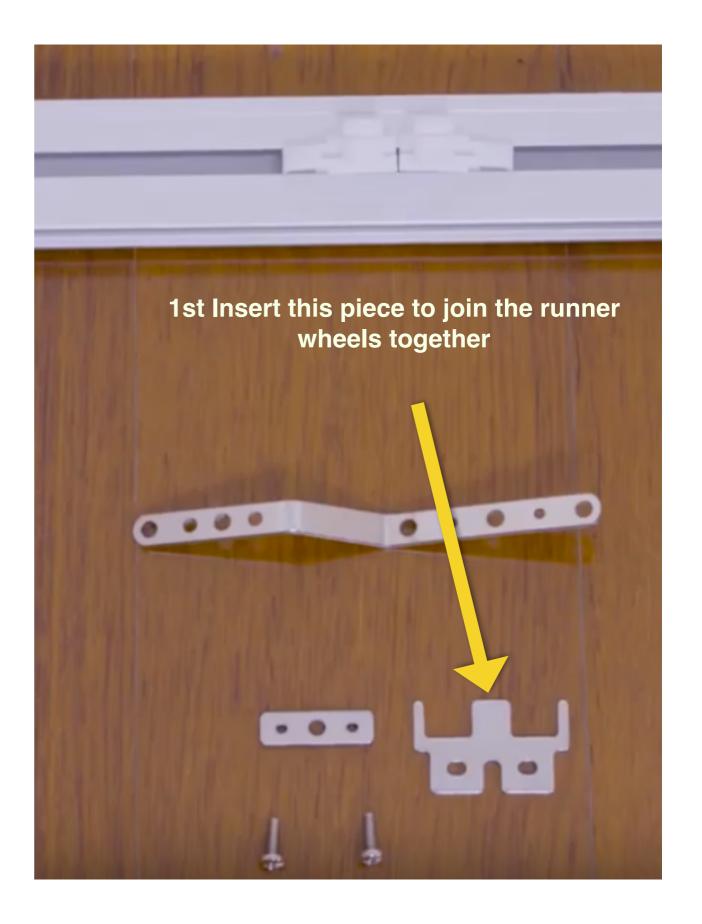

15. Completed Carrier Assembly, Test for smooth action then insert half of the wheels from each side, there are 8 wheels per meter of track.

16. When putting hooks on the curtains put 2 more hooks on each curtain than you have wheels on the rails

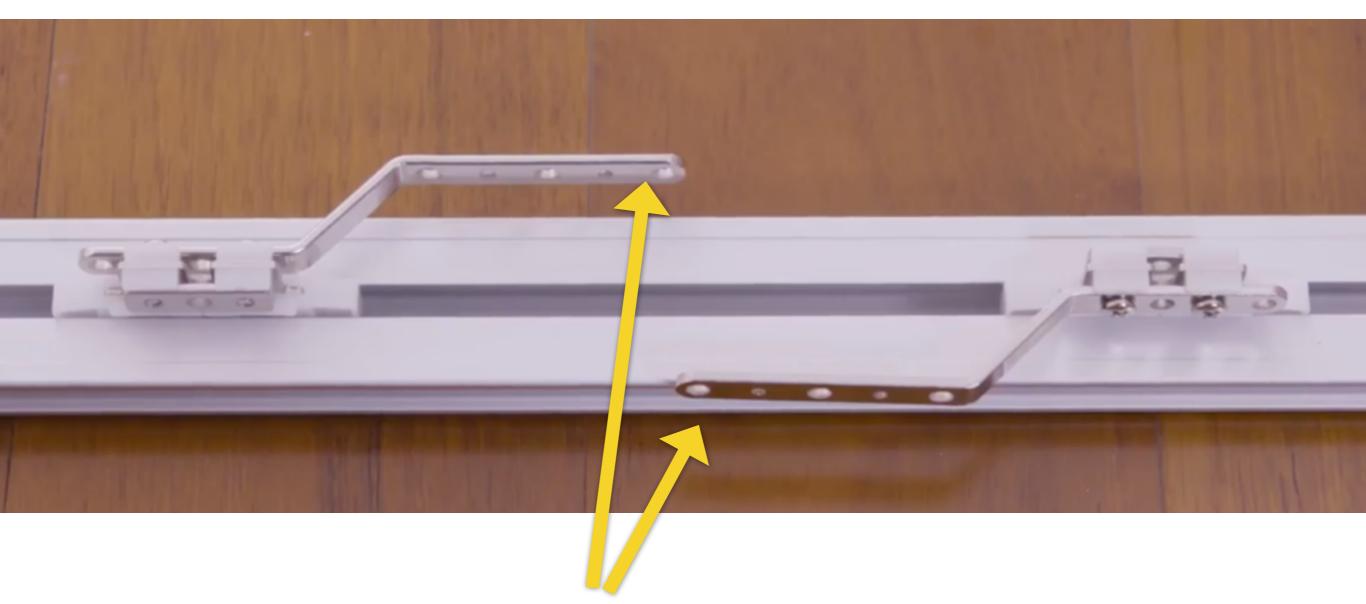


17. First curtain hooks for each side will hook here and the last on the rail tensioner

17. Insert and tighten the rail tensioners




18. Use the Distance between the endcap and track to fine-tune the tension and easy movement of the assembly

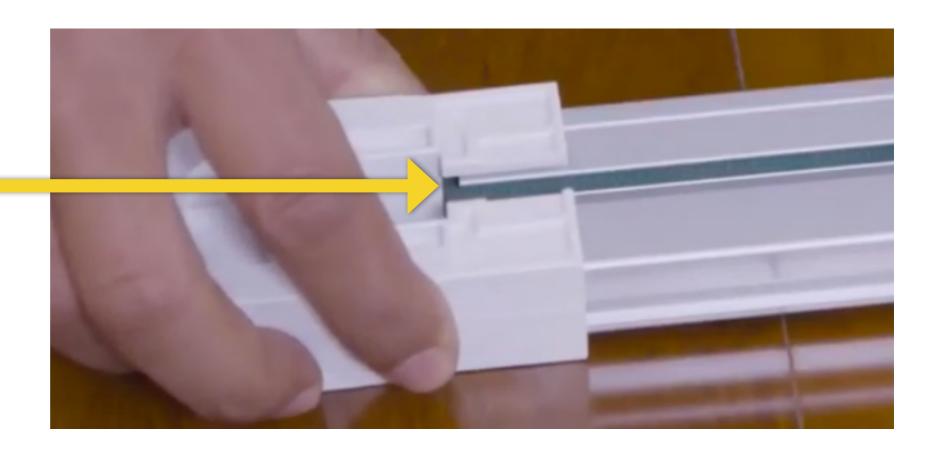


17. Insert and tighten the rail tensioners



18. Use the Distance between the endcap and track to fine-tune the tension and easy movement of the assembly

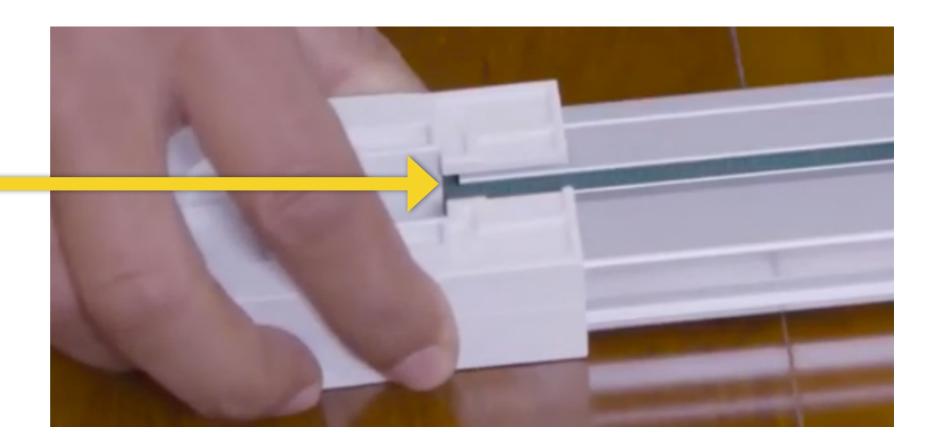

Side Opening Instructions ONLY!

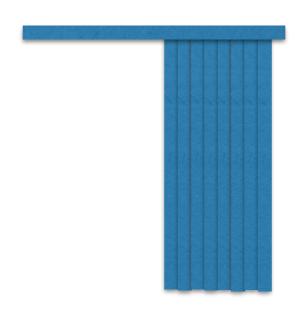


Do not cut the Ribbon in to two pieces like centre opening



SIDE Opening ONLY!

Instructions

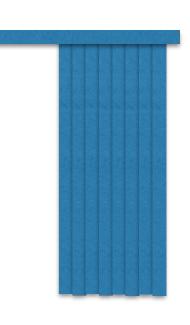



SIDE Opening ONLY!


1. Fix a buckle onto the one end of the belt




2. Press hard



3. Attach the runner wheel and feed through the track. Make sure the wheel of the runner wheel goes in after the buckle the wheel must not go into the track ahead of the belt.

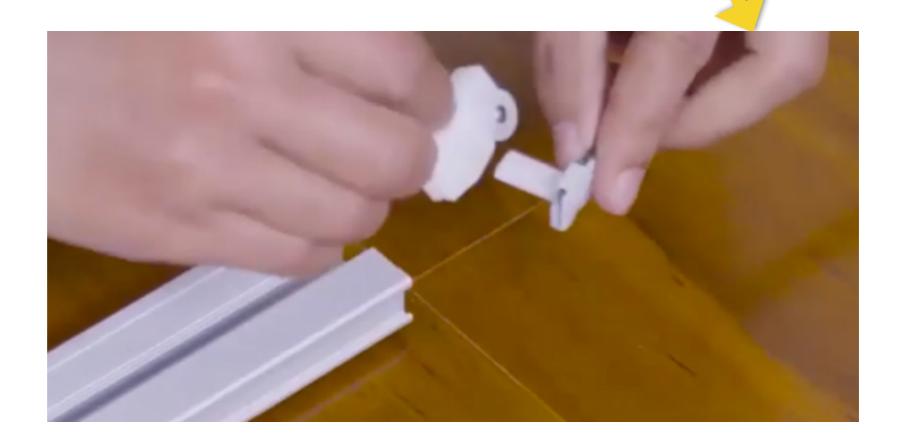


SIDE Opening ONLY!

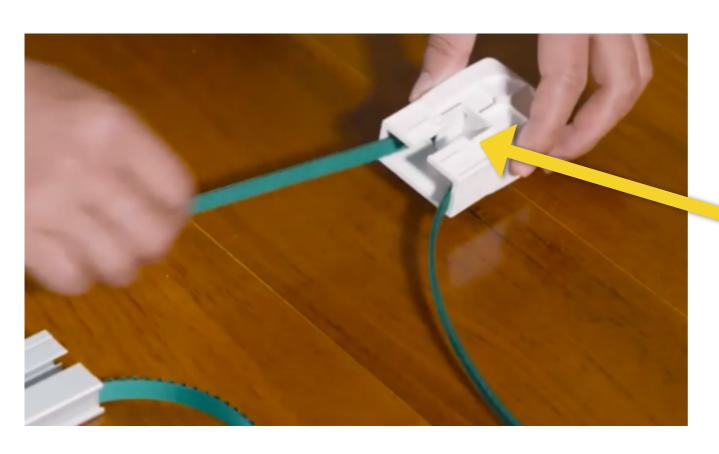


4. Feed the belt through the track end, make sure the wheel opening on the track end cap faces up

Opening faces up

5. Attach the endcap to the track and insert firmly but don't screw in place

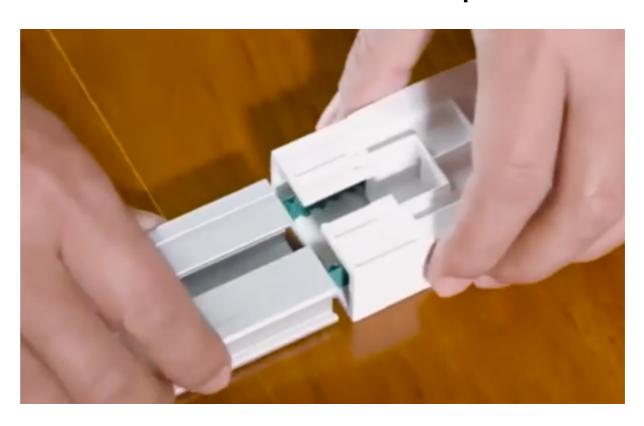


6. Feed the belt all the way through the track, through the Endcap and attach the 2nd runner wheel

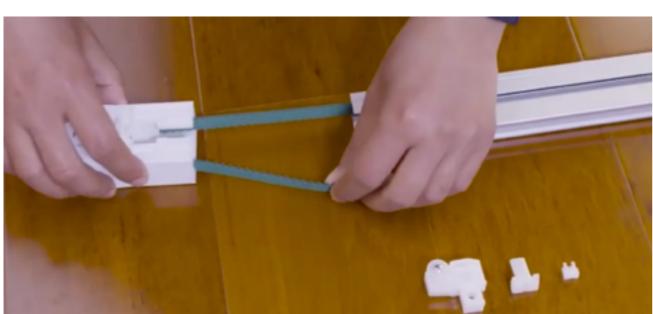

Make sure the wheel of the runner wheel goes in after the buckle the wheel must not go into the track ahead of the belt.

SIDE Opening ONLY!


7. Assemble the carrier

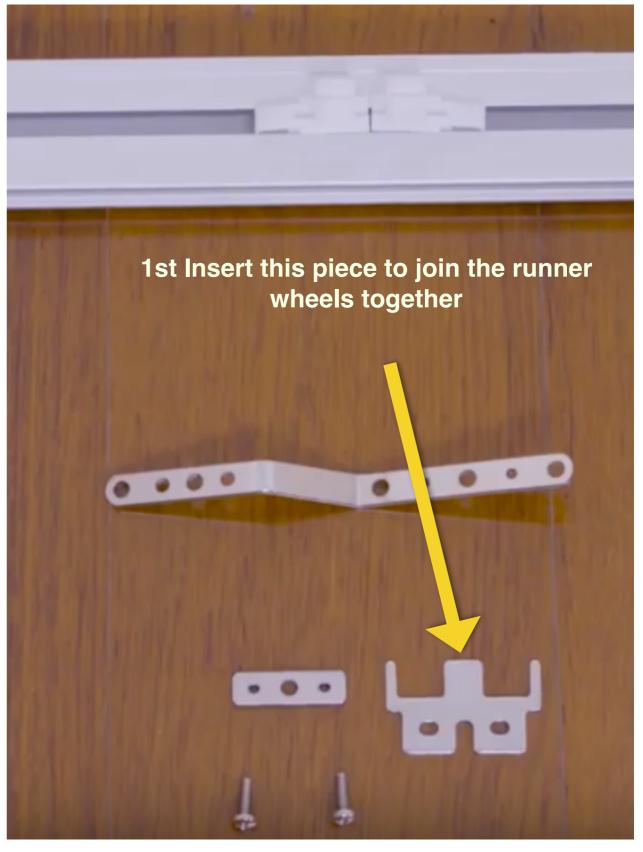

8. Insert the wheels and tighten the rail tensioners



9. Use the Distance between the endcap and track to finetune the tension and easy movement of the assembly

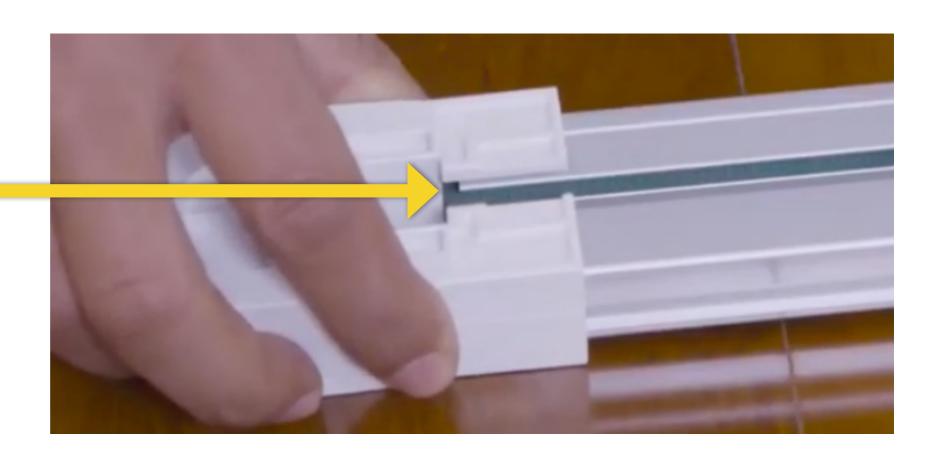

Fixing the Rails to the ceilings or wall brackets (Not Included)

1. Attach the clip on brackets to the track. Then mark the appropriate height against the wall or ceiling for mounting the rail.



Fixing the Rails to the ceilings or wall brackets (Not Included)






2. Attach the Motor align the grooves and rotate Anti-Clockwise

3. Push the Clip upwards, before you rotate the motor if you need to remove the motor

1. Fix a buckle onto the one end of the belt

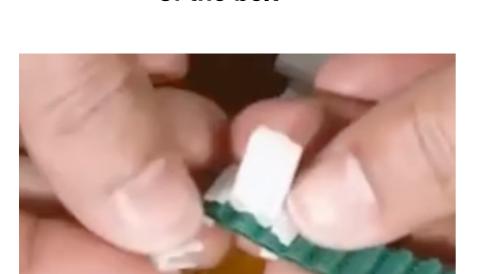

SIDE Opening Reverse Open and Close Direction 2. Press hard




3. Attach the runner wheel and feed through the track. Make sure the wheel of the runner wheel goes in after the buckle the wheel must not go into the track ahead of the belt.




Depending on whether the motor is on the left or right side of the curtain rail when mounted and if you want to open left or right; You might find that in the App you need to close the curtain to have it open, or use the open command to close the curtain. To change this you will need to do the following:


1. Dismantle the carrier.

SIDE Opening Reverse Open and Close Direction

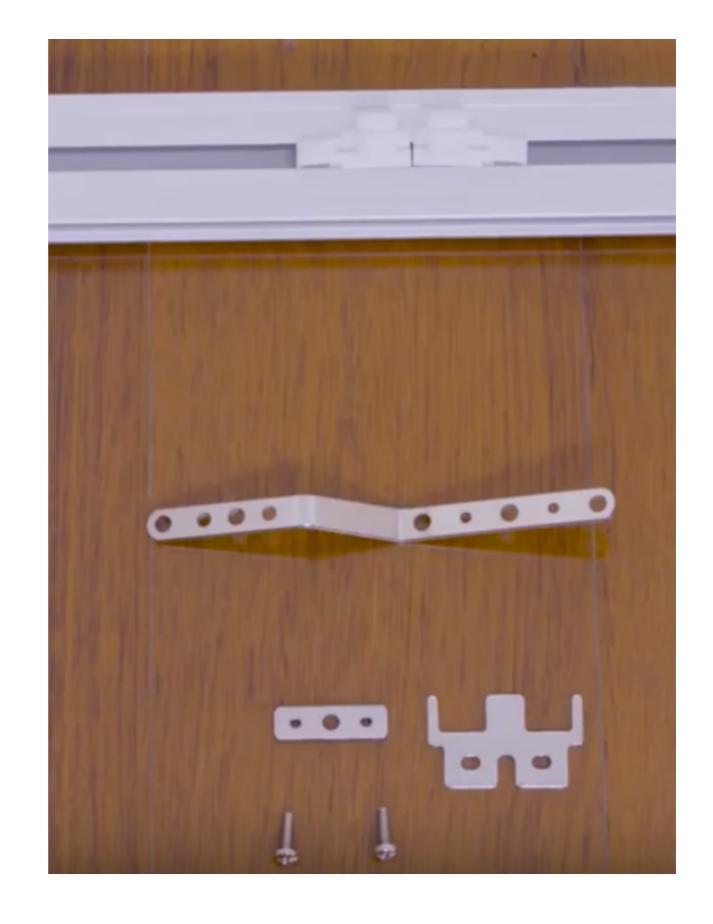


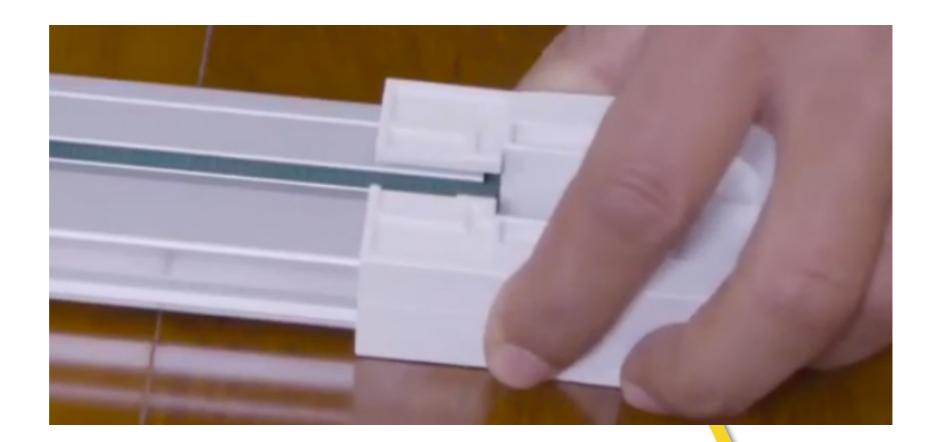


2. Remove the endcap.

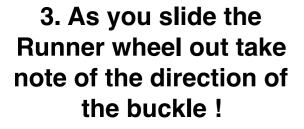




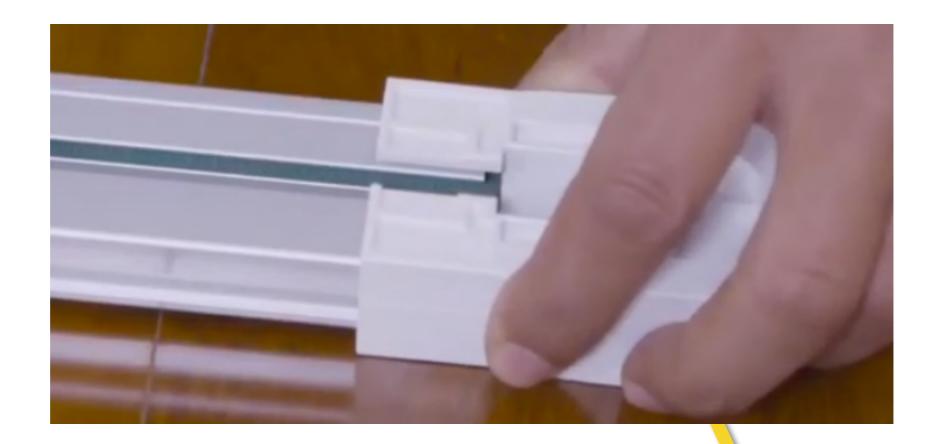

2. Remove the endcap.

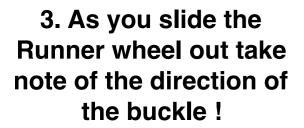

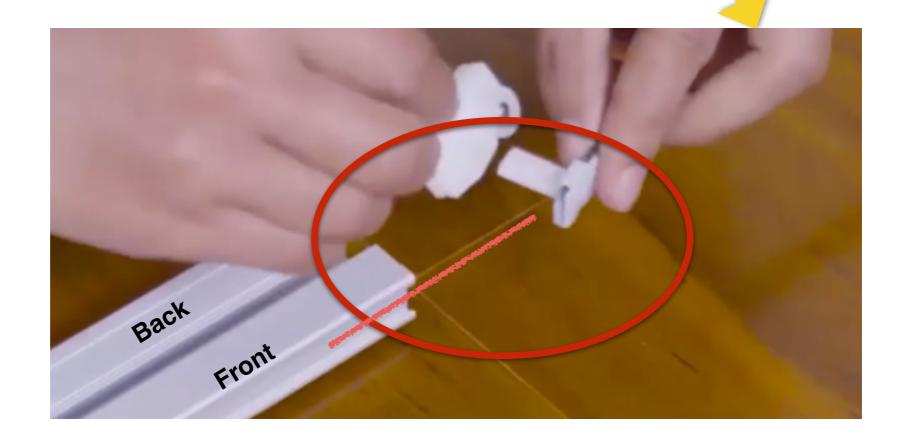

4. In this picture the buckle was inserted in the front of the rail, to reverse the open/close position the buckle must be inserted in the rear section of the rail







5. Remove the buckle from the ribbon and remove the 2nd runner wheel and buckle

6. Now feed the Ribbon through the endcap in the opposite Direction


7. The "join Side" of the Ribbon will now be on the opposite side of the track

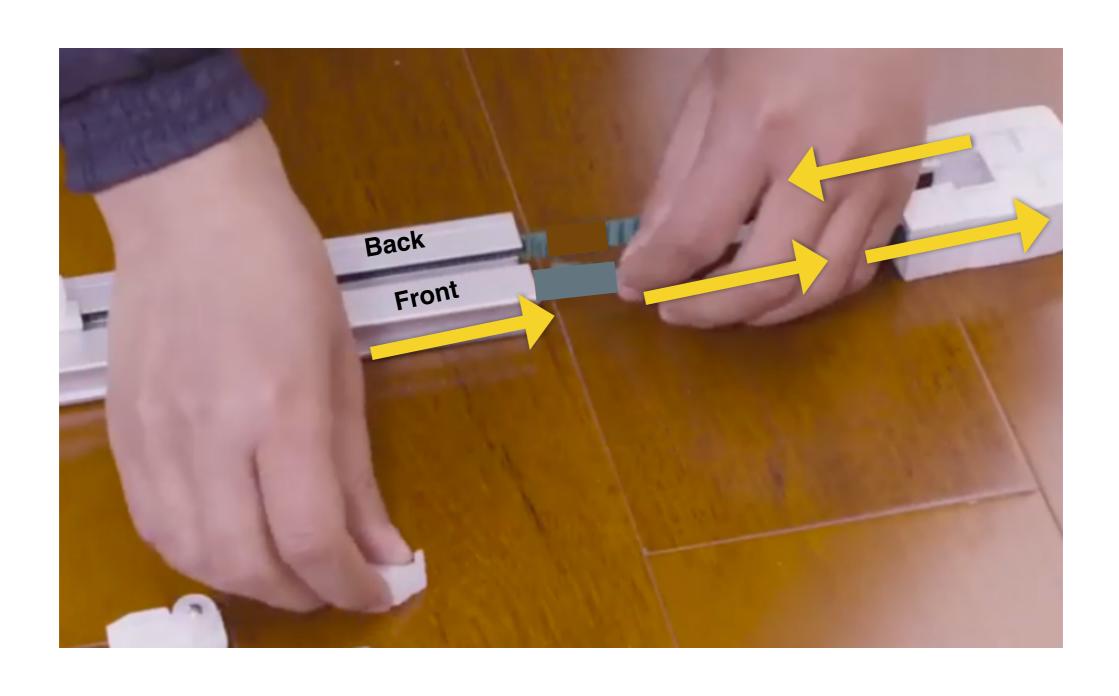

8. Where before the Buckle was in the front of the track, it will now be assembled and run the back of the track, thus reversing the direction of Open and Close

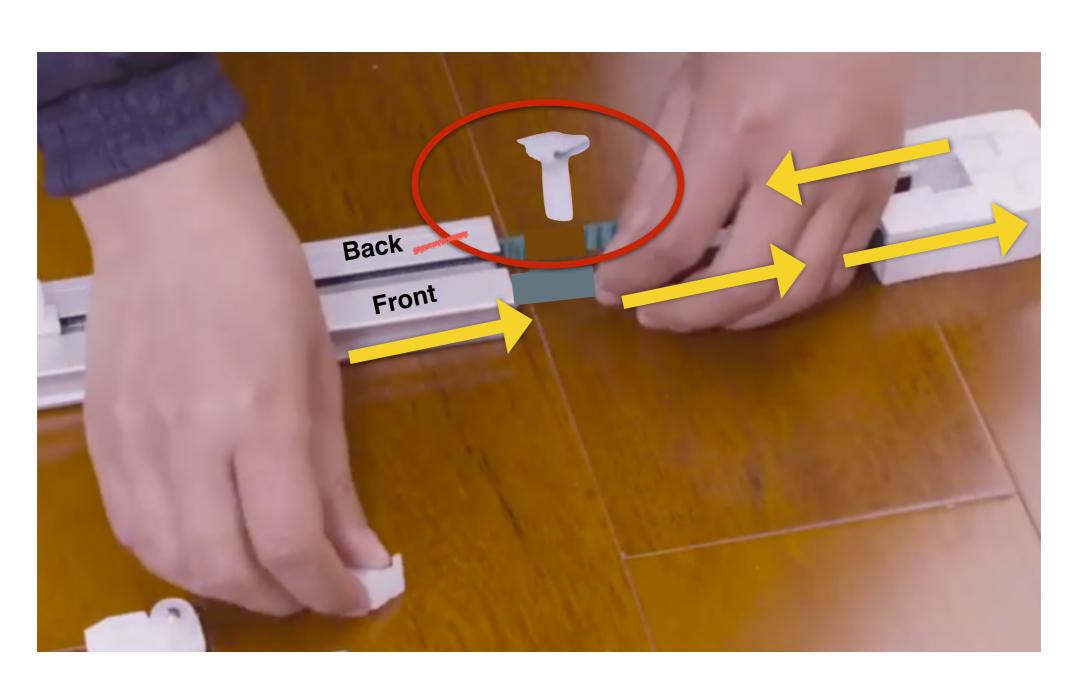

4. In this picture the buckle was inserted in the front of the rail, to reverse the open/close position the buckle must be inserted in the rear section of the rail

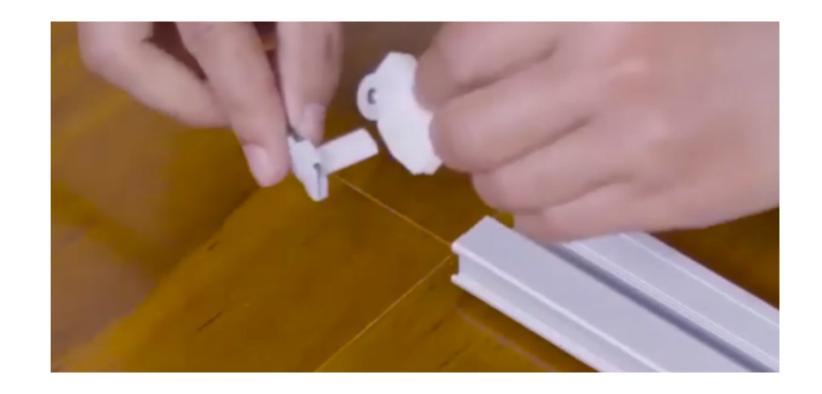

5. Remove the buckle from the ribbon and remove the 2nd runner wheel and buckle