




WIRELESS SPORTS EARBUDS

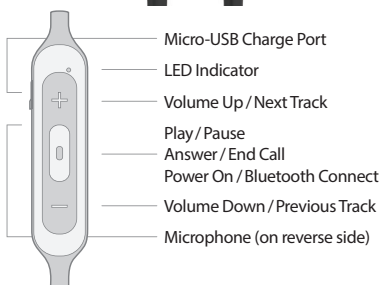

1. To turn on, press and hold the button on the remote of the wireless sports earbuds for 3 seconds or until the LED indicator blinks **blue** and **red**.
2. Earbuds will automatically try to connect through Bluetooth® while blinking **blue** and **red**. Open your device's Bluetooth® settings and connect to the wireless device **Hottips**.
3. Once on and connected, press the button to Play or Pause music. If you receive a call, the button will answer the call and press the button again to end the call. Double click the button to call the last person in your history.
4. To turn volume up listening to music or a phone call, press and hold the button until it reaches the volume of your choice. Turn volume down using the the same method with the button. Please read about volume safety in the **Safety Instructions** below.
5. To skip to the next song, click the button and click the button for a previous song.
6. To turn off, press and hold the button for 5 seconds or until LED indicator turns off.

1. Connect the included Micro-USB connector to the charge port on the side of the remote. Once connected, the **red LED** will turn on to indicate the battery is charging.
2. When the battery is fully charged, the **red LED** will turn off and the Micro-USB connector can be unplugged from remote charge port.
3. Indicator will slowly flash a **blue LED** intermittently while on and with a sufficiently charged battery. Indicator will turn to a **red LED** when battery is low.

Attention:

1. Read through this manual closely to ensure your safety before and while using wireless sport earbuds.
2. Do not listen to at loud volumes for extended periods of time. If you can't hear others speak, you are at risk of permanently damaging your hearing.
3. Attempts to repair or dismantle earbuds/remote may place user at serious risk and voids warranty.
4. Do not use any dilutents or volatile liquid to clean earbuds or remote.
5. Do not use earbuds while driving or while you are in a hazardous location.

Bluetooth V4.2 Technology

Wireless Range: Up to 33 ft.

Pairing Name: Hottips

Driver Unit: 10mm Dynamic Transducer

Frequency Response: 20Hz-20kHz

Speaker Resistance: 32 Ω \pm 15%

Speaker Sensitivity: 98dB \pm 3dB

Mic Sensitivity: 38dB \pm 3dB

Battery Life: 3 Hrs.



Limited Lifetime Warranty

Thank you for selecting this high quality Hottips! product. Hottips! warrants this product from defects in material or workmanship for the life of the product. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. Please return the defective product with a brief explanation of the problem along with \$8.00 for shipping and handling. THERE ARE NO WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. If you need assistance, please call our toll-free tech support at 1-800-525-5097 or mail to Navajo Incorporated, 5330 Fox Street Denver, CO 80216. www.HottipsUSA.com