

READ MANUAL BEFORE USE

NOTE: This charger is designed for Qi-compatible devices only.

Wireless Charge ChargeMate



NEED HELP? HAVE QUESTIONS?

Give us a call.

(03) 9482 2203

info@ozcharge.com.au

PLATE PLACEMENT

1 CLEAN PLATE LOCATION WITH INCLUDED ALCOHOL PAD



2 USE INCLUDED TEMPLATE





(3) APPLY THE CHARGEMATE PLATE

NOTE: Any material between the plate and magnets such as a phone case will weaken the magnetic grip. For the strongest hold possible, the plate should make direct contact with the ChargeMate head.



 
NOTE: Incorrect placement of the ChargeMate Plate will interfere with wireless charging and activate the Foreign Object Detection (FOD) safety feature.




Phone cases that contain metal, magnets, or are thicker than 3mm will interfere with all wireless chargers.

ASSEMBLY


1 Remove locking ring from magnetic head.

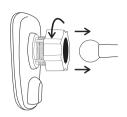

 
Place the locking ring over the 360° ball

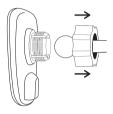

 3 Firmly press the magnetic head onto the ball until it locks into place

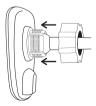


 Pivot to your desired viewing angle then twist the ring until it's secured

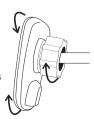


POWERING UP

 
Onnect the wireless charger to the USB port labeled "ChargeMate" on the adapter.

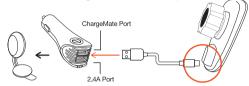

Firmly press USB-C Cable into ChargeMate input port

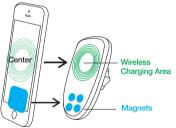

- Position the center of your phone in the center of the charging area.
- (4) You will feel a magnetic pull lock into place.
- (5) Your phone will indicate when charging begins.

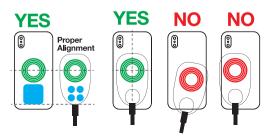

NOTE: Fast Charge mode requires use of the included fast charger. Standard 1A/2A adapters are not powerful enough for this charger and may cause it to malfunction or overheat.

LED STATUS

Standby Charging

Foreign Object Detected



NOTE: For most Android devices LED will Indicate when fully charged.

FOREIGN OBJECT DETECTION (FOD)

Built-in FOD will automatically shut-off power and alert you with a flashing BLUE LED if it detects any foreign objects on or near the wireless charger that may affect charging, such as metal plates and other objects.

If the LED flashes BLUE...

Remove any foreign objects from the charging area. The unit will automatically reset. You can also instantly reset by unplugging and re-plugging the power cable.

IMPORTANT

Improper use and failure to follow safety guidelines could result in hazards, injury and/or property damage that is not the manufacturer's responsibility.

- Use only the included adapter or a certified 3rd party Fast Charge adapter to power this device.
 Standard adapters may damage the charger or cause a fire hazard.
- 2. Do not place metal objects, magnets, magnetic stripe cards, and hard drive based devices near the wireless charger. It may cause data corruption.
- Do not attempt to modify, disassemble, or repair this product. Do not expose to water, moisture, or extreme temperatures
- Under any circumstances, if you find this product rapidly increasing in temperature, emitting odor, or demonstrating an abnormal phenomenon, discontinue use immediately.
- Do not direct heated air from the vent onto the mount- this can damage the mount and the docked device.

It's normal for a wireless charger and your device to become warm while charging.

If temperatures exceed the normal operating range, safety protocols will shut down and reset the charger every second.

Remove your phone from the charger and turn off any power-heavy apps to allow both devices to cool down. Charging will automatically resume as normal once both devices have cooled down.



Batteries
Battery Chargers
Charging Accessories
Jump Starters

www.ozcharge.com.au