


melodysusie
MAKE BEAUTY A NEW SMART

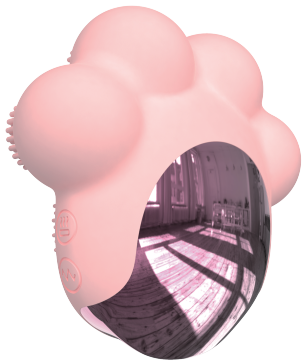

Silica Gel Facial Cleansing Massager
User's manual

● On/Off

Congratulations on your purchase of Melodysusie Smart Facial Cleansing Massager (hereinafter referred to as MS Facial Cleansing Massager) and you have successfully taken the first step of skincare. There are many benefits come of our facial cleansing massager with the top skincare technology, so please take a few minutes to read this manual carefully before using it.

Please read the manual carefully and use this product only according to the specified purpose in this manual.




Warning: Do not refit the product.

● The Profile of MS Facial Cleansing Massager

MS Facial Cleansing Massager innovates the way of facial cleaning by combining the innovative transdermal sonic pulse with the design of silica gel brush head, which can gently and deeply clean the skin. Sonic pulse can remove the blemishes through silicone touchpoints, which is better than manual cleaning; zinc alloy on the back combined with t-heat heating technology can better help your skincare products into the skin, make the skin bright, clear and moist, bring you a better skin condition which leaves the skin looking firm and smooth. Meanwhile,

the unique structure design of MS Facial Cleansing Massager can lift the facial muscles, firm the skin, prevent facial muscles from sagging and keep the skin young and beautiful.

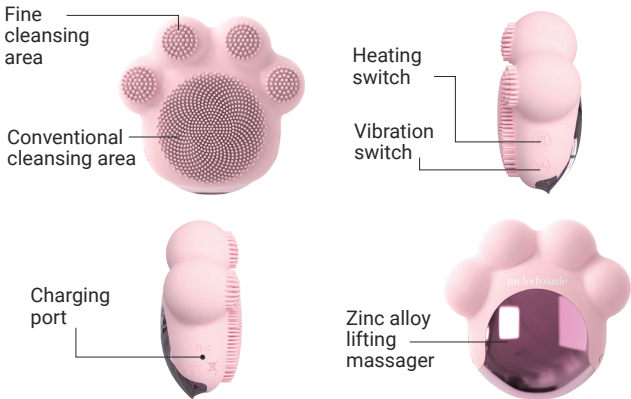



● How to Use MS Facial Cleansing Massager

MS facial cleansing massager is suitable for all skin types. Its unique cat-claw design-cat-claw area brush head contains many smaller touchpoints that are suitable for sensitive or neutral skin, the wider

palm area contains conventional touchpoints that are suitable for oily skin. The four thicker areas of touchpoints on the top are suitable for fine cleansing which can cleanse every dead corner of the face. We recommend using a facial cleansing massager for one minute each morning and evening.

The Vibration Intensity of MS Facial Cleansing Massager Can Be Adjusted:

1. Long press  the vibration button for 1.5 seconds to turn on/off the vibration function. (White light on/off)
2. After the vibrate mode is turned on, short press the vibrate button to adjust your preferred cleansing intensity. It has 5 levels of massage intensities, and you can adjust the appropriate intensity according to your skin cleansing needs and the intensity will be automatically set to the default value; the next time you open it, it will automatically adjust this intensity to better meet your habits and needs of facial cleansing.
3. Long press  the Heat button for 1.5 seconds to turn on/off the T-HEAT constant temperature heating function. (Red light on/off)
4. When the vibration button and the heating button are pressed at the same time, both modes will be activated. When both modes are turned on, long press any button for 3 seconds to turn off vibration and

heating at the same time. (In order to clean and protect your skin effectively, we do not recommend turning on both modes at the same time.)

The Cleaning Procedures of MS Facial Cleansing Massager Are Described Below :

● Cleansing mode

Channeled through soft silicone touchpoints, T Sonic pulsations remove 99.5% of dirt and oil, and lifts away makeup residue and dead skin cells that lead to clogged pores. The cleaning time of each area is about 20 seconds (Pause to remind you to change the area) .

1. Apply Cleanser

First of all, remove all makeup, dampen MS facial cleansing massager and your face, apply your regular cleanser and long press the vibration button for 1.5 seconds to start the vibration cleaning mode.

2. Cleansing the facial area :

- Clean your chin and cheeks in a circular motion and clean the other side in the same way.
- Gently stroke from the middle of the forehead to two sides until the entire forehead is cleansed.

- When cleansing the nose, use the fine cleansing area of the MS facial cleansing massager to gently swipe up and down one side of the nose, and then clean the other side of the nose in the same way. When cleansing the area below the eyes, it is recommended to reduce the intensity of the pulsation and gently stroke outwards to avoid damage to the skin around the eyes.

3. Rinse

After the cleansing process is completed, rinse and dry the face. Then you can use skincare products as needed.

4. Apply skincare products

Turn on the heating mode, drop the skincare essence on the back alloy, then put the alloy close to the face and gently massage. With the technical support of T-Heat, skincare products can be better absorbed by the face.

5. Lifting the face


Turn over to the zinc alloy lift massager on the back, hold the massager in reverse and lift it up from the chin, using the same method on the other side of the cheek. With the design of the zinc alloy lifting massager on the back, MS facial cleansing massager can lift the face muscles and remove edema, thus keeping the skin young and firm.



If you have any discomfort while using MS facial cleansing massager, please stop using it immediately and consult your physician.


● Clean MS facial cleansing massager

Please clean thoroughly after each use. Clean the surface of the brush head with clean water and soap, and then rinse with warm water. Please dry with a lint-free cloth or towel. We recommend that the best way for washing is warm water rinses.

 Note: Do not use cleaning products containing alcohol, gasoline or acetone, which may irritate the skin.

● Charge

Your massager can be charged by a charger configured. It takes 3 hours to fully charge and can be used 300 times after charging. Plug in the charging cable, while the white light of the facial cleanser flashes, which indicates that the battery is charging. After the charging is completed, the LED light shines steadily. When the battery is low, the red light flashes.

 Warning: Before charging, make sure the charging port and charger are dry, free of water and cleanser residue. Do not charge in places where the charger may be immersed in water. Please do not use the product while charging, charging time should not exceed 12 hours.

● Important information

Ensure safety

Do not use a clay-based facial cleanser, silicone-soluble or granular facial cleanser or exfoliating cream or facial scrub with MS facial cleansing massager at the same time, which may damage the soft silicone touchpoints.

- If you have skin problems or have any medical concerns, please consult your dermatologist before use.
- Using MS facial cleansing massager should be comfortable, if you have any discomfort, please stop using it immediately.
- Be especially careful when cleaning the area under the eyes, and do not allow the product to directly contact the eyelids or eyes.
- For hygiene reasons, we do not recommend that you share the MS facial cleansing massager with others.
- Please avoid direct sunlight, do not leave in deep water for a long time.
- Use it for children or close to children please supervise closely.
- Do not use when the product is damaged.
- To avoid electric shock, this product should be connected to a power supply with a safety protective ground wire.
- If you will not use it for a long time, please fully charge it and charge it every three months.
- In view of the cleansing and soothing effects of MS facial cleansing massager, when using the product for the first time, we recommend

starting with the weak intensity and finding the right intensity. Do not use the vibration mode of MS facial cleansing massager for more than 3 minutes each time.

- The use of this product is limited to the purpose specified in the user's manual, do not use for other purposes.

● **Frequently Asked Questions**

Why the LED light of MS facial cleansing massager does not flash after connecting the charger?

- The battery is fully charged.
- The battery is completely dead and it takes a few minutes to recognize the charger.
- The charger does not work, please check the socket and charging port.

Why MS facial cleansing massager does not turn on after pressing the vibration button or the heating button?

- The battery has no power, please charge MS facial cleansing massager.

Why MS facial cleansing massager can't be turned off or the function buttons do not respond?

- The microprocessor has a temporary functional fault please connect the charging cable to restore the normal function.

The silicone brush surface of MS facial cleansing massager degenerates into a sticky or foamy texture.

- Stop using it immediately! Although silicone is highly durable, it will still degrade under certain conditions. Please check the cleaning and safety section of this manual to learn how to avoid such situations.

If you do not find a suitable answer in this section, or if you still have other questions about product operation, please contact the official WeChat Melodysusie customer service section for more information.

● **Warranty Terms and Conditions**

Six-Month-Warranty

During the product warranty period, any quality problems caused by product manufacturing or material defects are covered by the warranty. If you have any such quality problems and notify Melodysusie within the warranty period, we will replace the product for you free of charge. The scope of the warranty covers the quality of parts and components that affect the function of the product, but does not include the wear and tear of appearance caused by long-term use or the wear and tear or

damage caused by incorrect operation, negligence or accident. Any damages attempt to open or disassemble the product (or its accessories) will not be covered by the warranty.

The warranty claim needs to provide reasonable evidence that the product is still within the warranty period. In order to make your product warranty effective, please keep the original purchase ticket properly during the warranty period.

If you need to apply for warranty, please send email to service@melodysusie.com. Subsequently, please send MS facial cleansing massager and your purchase voucher to the return address provided by customer service. Shipping costs need to be paid by yourself. This is a supplement to the legal rights of consumers and does not affect any rights and interests of consumers.

● Disposal methods

Disposal methods for waste electronic equipment (Be applicable in EU or other European countries with waste separation systems). This product cannot be disposed of as household waste, but should be sent to a suitable collection station for electrical and electronic equipment. Proper disposal of this product can prevent waste products from negatively affecting the environment and human health. Material recycling also helps to conserve natural resources. For more product recycling information, please contact your local garbage disposal service station.

● Product specifications

| | |
|---|---|
| Model: | MS-201 |
| Color: | Pink/ White /Mint green |
| Size: | 9.6x9.3x4.3CM |
| Weight: | Standard weight 142g, including charging cable 156g |
| Battery: | li-polymer battery 700mAH 3.7V |
| Charge time: | 3H |
| Material: | Silica gel + ABS +Plastic |
| Standby time: | 90 days |
| How many times I could be used after a full charge: | Up to 300 times |
| Frequency: | 100 Hz |
| Noise level: | Less than 50 dB |
| Charging Voltage: | 5V (300mA) |

Disclaimer. The users of the products bear their own risks. Melodysusie and the retailer shall not be liable or responsible for any physical or non-physical injury or damage caused directly or indirectly by using the product. In addition, Melodysusie reserves the right to modify this description and change the content at any time and has no obligation to notify any individual of these modifications or changes.

©2020 Melodysusie all rights reserved
www.metodysusie.com