

Malfunctions	Reasons	Solutions	Malfunctions	Reasons	Solutions
The nail lamp does not work well. / The beads do not turn on.	The nail lamp does not work well. / The beads do not turn on.	The LED light beads or the lamp's internal circuit is damaged. Please contact our customer service team	The gel nail polish cannot be	Use the incompatible polish, such as regular nail polish, nail lacquer.	Please use LED, UV gel nail polish or use a compatible nail lamp.
	A light bead or a group of	For help. Please contact MelodySusie customer service team to change to the new light beads.	cured or dried	The gel polish is a bit tacky after drying.	Please wipe your nail surfac with a gentle cleanser or alcohol prep pads.
	light beads don't turn on. The light bead is damaged.		Important S	afety Information	
	The power cord's AC plug is not compatible with outlet.	Please kindly note the plug is US plug. If you want to use the nail lamp in other countries or areas, please use it with a universal adaptor.	* Please be sure to read the following safety instruction to avoid potential hazards that could result in personal injuries o damage to the device. 1. Make sure your outlet supplies correct power voltage to avoid damage to the lamp. 2. Please do not unplug the power cord when the machine is working to avoid potential damage to the lamp. 3. Do not use the lamp's top as a nail table, as this can negatively affect the performance. 4. If you don't use the nail lamp for long time, please turn off the power switch and store it properly to extend its lifetime 5. Do not disassemble the device. Doing so could be dangerous and result in voiding warranty conditions. If you require any technical support, contact us at service@melodysusie.com. 6. If the device or the power cord is damaged, it should be repaired or replaced by MelodySusie or another authorized professional. 7. Children under 18 years old should not use this device without parental consent and supervision. 8. Please turn off the device and unplug the power cord befor cleaning. Use cloth with neutral detergent to clean the surface of machine.		
	When pressing the button, the lamp doesn't have any response.	Please check whether the surface of the button has water or dust. Clean the nail lamp with a dry cloth.			
The gel nail polish cannot be cured or dried	The light to your nail surface is not enough.	Please adjust the angle of your nail surface to face the light straightly to ensure sufficient illumination.			
	Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors.	Please try to extend the curing time appropriately until the nail surface is completely cured. For best results, avoid moving your hand too much until curing is complete.			
	Please check whether the light beads of nail lamp are aging.	Please contact MelodySusie customer service team to change for the new light beads.			
- 2 -			- 3 -		



