

## Bring Your Beauty Salon Home



[service@melodysusie.com](mailto:service@melodysusie.com)



<http://www.melodysusie.com>



2809 Whipple Road, Union City, CA 94587



*melodysusie*

**EOS 5 LED/UV Nail Lamp  
User Manual**



Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

## LG Chip

---

MelodySusie and LG have reached strategic cooperation. LG is our only nail lamp chips' supplier. Each of our Eos 5 LED UV nail lamp beads has an LG Chip. LG Chip is high luminance and light efficiency, low electric power consumption, long lifespan. It is environment-friendly and no harm to skin and eyes. We combine to provide nail lamps with the most advanced technology for every customer.

## Items Included

---

1 x MelodySusie Eos 5 LED/UV Nail Lamp (Including a rechargeable lithium battery)

1 x AC/DC Adaptor

1 x User Manual

## How to Use

---

**Step 1:** Connect the power cord and turn the switch on the back of the machine to "o", the 15s timer will light up.

or

**Step 1:** When using battery, turn the switch on the back of the machine to "-", the 15s timer will light up.

**Step 2:** Place your hands in the device and the lamp will automatically turn on for 15 seconds. To stop drying, simply remove your hands.

**Step 3:** You can also choose a pre-set timer button (15s/30s/45s/60s) as needed. The lamp will run until the preset time has elapsed.

Tips: If there is no action within 5 minutes, the indicator light will turn off. Touch any buttons on the operation panel to wake up.

## Malfunctions and Solutions

Malfunctions	Reasons	Solutions
The nail lamp does not work well. / The beads do not turn on.	The power cord's AC plug is loose or poorly connected.	Reconnect the power cord and make sure it is properly connected or contact MelodySusie customer service team to change the power supply.
The nail lamp does not work well. / The beads do not turn on.	The power cord's AC output is not properly connected to the lamp's AC outlet.	Please make the power cord's AC output is properly connected to the lamp's AC outlet.
	The LCD screen and the countdown are normal. But the LED light beads don't turn on.	The LED light beads are defective or the lamp's internal circuits are damaged. Please contact our customer service team for help.
	The LED light beads are defective or the lamp's internal circuits are damaged. Please contact our customer service team for help.	The light bead is damaged. Please contact MelodySusie customer service team to change for the new light beads.
	The power cord's AC plug is not compatible with outlet.	Please kindly note the plug is US plug. If you want to use the nail lamp in other countries or areas, please use it with a universal adaptor.
	When pressing the button, the lamp doesn't work.	Please check whether there is water or dust on the button surface. Clean the nail lamp with a dry cloth.

Malfunctions	Reasons	Solutions
The gel nail polish cannot be cured or dried	Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors.	Please try to extend the curing time appropriately until the nail surface is completely cured. For best results, avoid moving your hand too much until curing is complete.
The gel nail polish cannot be cured or dried	The light to your nail surface is not enough.	Please adjust the angle of your nail surface until it faces the light straightly to ensure sufficient illumination.
	Please check whether the light beads have been aged.	Please contact MelodySusie customer service team to change for the new light beads.
	Use the incompatible polish, such as regular nail polish, nail lacquer.	Please use LED, UV gel nail polish or a compatible nail lamp.
	The gel polish is a bit tacky after drying.	Please wipe your nail surface with a gentle cleanser or alcohol prep pads.

**⚠ NOTE**

*There has a protective film on the touch screen, please take it off to get a smooth and bright panel.*

## How To Charge

---

Turn the back switch to "-", connect the power adapter and insert into the power socket or power supply board. If the power indicator light flashes repeatedly, the device is charging. It takes about 4 hours. And the battery indicator light will turn on if fully charged.

Tips: Connect the adapter to charge when the battery drops below 20%. The red indicator light will flicker. When voltage is lower than 8.6V, the timer buttons and red indicator light will flicker together. This means a critical low-battery and the lamp will not work soon. The device can work with 90 minutes after fully charged.

Note: Please don't use it in the process of charging. If there is no action within 3 minutes, the device will go into sleeping mode. Touch any buttons on the operation panel to wake up.

## Important Safety Information

---

1. Ensure your outlet supplies the correct power voltage to avoid damage to the device.
2. Do not unplug the lamp during operation.
3. Do not place heavy objects on the lamp housing.
4. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
5. If the power cord is damaged, it should be replaced by MelodySusie or another authorized professional.
6. Certain cosmetic substances may lead to adverse skin reactions.

- Children under 18 years of age should not use this device without parental consent and supervision.
- Please handle with care and do not drop

## Eos 5 Specifications

Weight: 2.8 lbs

Input: AC100V~240V,50~60Hz

Size: 8.74 x 9.44 x 4.50 inches (LxWxH)

Wavelength: 365~400nm

## Warranty and Customer Service

This lamp has a 6-month limited warranty on quality related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

