

MELODY SUSIE

{ P SERIES }

Instruction Manual



INDEX

- 1 Check before Using
- Note for Battery
- 2 Note for Using
- 2 Maintenance Work
- 2 Note for Injury
- 3 Two Drill Bits
- 3 How to Use
- 3 Charging
- 4 Problem and Terms of Settlement
- Specifications
- 5 Warranty and Customer Service



Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS REFORE USING



To reduce the risk of burns. electrocution, fire or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

NOTE: If the USB cable connects to the adapter, it is recommended to use an adapter of 5V/2A. Please do not exceed 5V/2A, or the drill will burn out.

01 Check before Using

- Check the power supply cord before the first time use and during the life of the device. Do not use the device if it has a damaged cord or plug, or if it is not working properly.
- 2 Do not plug the device into a voltage system that is not specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
- Use the original charger only.

02 Note for Battery

- The Battery needs to be charged fully before first use to ensure optimal performance.
- 2 Do not overcharge the device or use it when it is charging. Charge the device in well-ventilated condition with 0°C-40°C.
- Do not charge the device close to flammable or explosive materials. When charging the device, please do not cover it with clothes or other thinas.
- If the device is not used for long periods of time, you should charge and discharge once every three months. In normal conditions, the battery performance will decline over several years.

- 1 -



03 Note for Using

- To prevent electric leakage and shock or fire, do not draw out the connecting wires during use or touch the plug with the wet hand. Turn the power off after use.
- 2 Do not use the crooked or damaged nail drill bit or replace the bit when power is on.
- Do not adjust the speed abruptly, stop using once the unusual movement and noise happens.
- Misuse, dropping or excessive force may cause device damage.
- Minor should not use this device without parental consent and supervision.

04 Maintenance Work

- Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
- Do not keep the device in a metal box, car, or other places at high temperature(more than 50°C). Keep the handpiece dry and away from oil and grease.
- Do not store the device in a hot or humid environment. Store it in a cool and dry place.
- Keep the electrical cord away from heated surfaces.
- Do not dispose of the device in heat or fire.
- Do not clean the device with harmful chemicals or detergents.

05 Note for Injury

- Having manicures done frequently can cause injuries to the nails as well.
- If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.
- Do not use the device if you have an open wound on your nail or hand.



If you have any skin diseases. heat-sensitive, allergic reactions. onvchomycosis, or any other disorder, you should consult your doctor and medical professionals before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions. If you require any technical support, please contact us. SAVE THE INSTRUCTION MANUAL

06 Two Drill Bits



Surface work Cleaning & Prepping



Mandrel+ Sanding Bands Surface work. shortenina. and removal



- ON/OFF
- Indicator Light
- Drill Bit

07 How to use?

- Step 1: Choose one nail drill bit, and insert the drill bit into the handpiece in place.
- Step 2: Press the ON/OFF button for 2 seconds to turn on or off the device.
- Step 3: Press the Speed control to accelerate or decelerate the rotation speed.

08 Charging

Take out the cord and connect it with the DC socket



- The indicator light of the handpiece shows red and flashes, which means that the drill needs to be charged.
- 1 The indicator light of the handpiece shows green when the drill is fully charged.

09 Problem and Terms of Settlement

Malfunction	Reasons	Solutions
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit.
The power is on when not in use		Turn off the power when not in use.
Long time, Large load work	1.Motor burns out 2. Device lifespan shortens 3. Bearing damages (Loud Noise) 4.Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to made it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply.
Put the power cord at random/Pull the power cord	1. Device lifespan shortens 2. Power cord brokes 3. Poor connection 4. Easy to cause short circuit	Do not pull the power cord.
Replace the original charger randomly	1. Device damages 2. Easy to cause short circuit	Use the original specification charger.

. 4 -



Malfunction	Reasons	Solutions
Dust into device	Bearing damages (Loud Noise) Motor gets hot Rotational speed slows down The potentiometer speed regulation fails Handpiece damages	Clean dust, add the dust-proof protection of the dustproof hood.
Device drops to the ground or by other impacts	1. The ON/OFF button doesn't work 2. The potentiometer speed regulation fails 3. Handpiece damages	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Replace drill bit when handpiece is not completely stopped	1.The handpiece stucks and cannot be turned on 2. Handpiece damages	Do not replace drill bit when handpiece is not completely stopped.
Overcharge	Battery lifespan shortens	Not exceed the specified charging time
The size of drill bit is not suitable	1. Can not insert the drill bit into the device	Use standard drill bit
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	Motor burns out Device lifespan shortens	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning.

10 Specifications

Input voltage range: 5V/2A

E-mail: service@melodysusie.com E-mail: service.uk@melodysusie.com Website: www.melodysusie.com

11 Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality related issues. Please apply for your extra 6-month warranty extension and download the instruction manual in other languages by registering on www.melodysusie.com if needed.

Thank you for purchasing from MelodySusie.
You are welcome to share your experience after receiving the product.
Please contact us for any technical support if needed.

- https://www.melodysusie.com
 US Service: service@melodysusie.com
 UK Service: service.uk@melodysusie.com
 FR Service: service.fr@melodysusie.com
 DE Service: service.de@melodysusie.com
 Whippie Rd, Union City, CA 94578
- EU REP AMZLAB GmbH Laubenhof 23, 45326 Essen, Germany
- UK REP THEMIS AR support ltd. 85 Great Portland St. London, United Kingdom, W1W 7LT