



melodysusie

P Series

Manicure & Pedicure
Nail Drill Kit



User Manual

INDEX

Important Safeguards	01
Eight Drill Bits	04
How to Use	05
Charing	05
Problem and Terms of Settlement	06
Warranty and Customer Service	08

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire, or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

Note: If the charging cable connects to the adapter, it is recommended to use an adapter of 5V 2A. Please do not exceed 5V 2A, or the drill will burn out.

Check before Using

1. Check the power supply cord before the first use and during the life of the device. Do not use this device if it has a damaged cord or it is not working properly or damaged.
2. Do not plug this device into a voltage system that is different from the voltage system specified on the device. Use with improper voltage will damage the device and VOID warranty.
3. Please use the original cord only.

Note for Battery

1. The Battery needs to be charged fully before first use to ensure optimal performance.
2. Do not overcharge the device or use it when it is charging.
3. Charge the device in well-ventilated condition with $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$. Do not charge the device close to flammable or explosive materials. When charging the device, please do not cover it with clothes or other things.
4. If the device is not used for long periods of time, you should charge and discharge once every three months. In normal conditions, the battery performance will decline over several years.

Note for Using

1. Do not touch the cord with the wet hand to prevent electric leakage and shock or fire. Please turn the power off after use.
2. Do not use the crooked or damaged nail drill bit or replace the bit when the power is on.
3. Adjust the speed gradually, not abruptly. Please stop to use once the unusual movement and noise happens.
4. Misuse, dropping or excessive force may cause device damage.
5. Children under 18 years of age should not use this device without parental consent and supervision.

Maintenance Work

1. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.

2. Do not keep the device in a place which is about or more than 50°C (in a metal box, car or other places in high temperature). Keep the device dry and keep it away from the oil and grease.
3. Store the device in a cool and dry place. Do not store it in a hot or humid environment.
4. Keep electrical cord away from heated surfaces.
5. Do not dispose of the device in heat or fire.
6. Do not clean the device with harmful chemicals or detergents.

Note for Injury

1. Having manicures done frequently can cause injuries to the nails as well.
2. Do not use the device if you have an open wound on your nail or hand.
3. If you have any skin diseases, heat-sensitive, allergic reaction, onychomycosis or any other disorder, you should consult your doctor and medical professional before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.

If you require any technical support, contact us at service@melodysusie.com or service.uk@melodysusie.com
SAVE THESE INSTRUCTIONS

Eight Drill Bits



Large
Sapphire
Wheel

Remove calluses on the soles of the foot.



Small
Sapphire
Wheel

Remove hard skin and corns on the soles of the foot .



Sapphire
Callus File

Remove calluses on the soles of the heel.



Sapphire
Cone

Reduce thick toenails and calluses, and remove cracks on heels.



Felt Cone

Eliminate dust, polishing, and matting.



Mandrel +
Sanding
Bands

Thick and fragile nails trimming, grinding, and polishing.



Umbrella
Top Cutter

Clean cuticle area and sidewalls. Clean dirt from under the nails.



Rounded
Top Cutter

Remove product in sidewalls and remove callused skin around sidewalls.




Dust
Protector

Prevent dust splashing. Need to be used together with bits.

How to Use

- Step 1:** Choose one nail drill bit, and insert the drill bit into the handpiece in place.
- Step 2:** Control the Forward/ OFF/ Reverse button to turn the device on/off or change the rotation direction.
- Step 3:** Press the Speed Control to accelerate or decelerate the rotation speed.

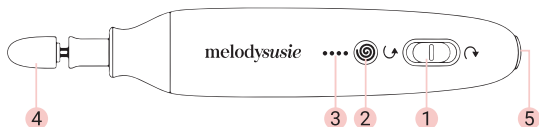

- 1 Forward/ OFF/ Reverse Button 2 Speed Control
3 Indicator Light 4 Drill Bit 5 Charging Port

Note: When there is an abnormal pressure, the handpiece will stop rotating, and it will automatically power off after 10 seconds. If you still need to use it, please restart it.

Charging

1. Take out the cord and connect it with the charging port and wait for a full charge.
2. It cannot be used while charging. The Battery needs to be charged fully before first use
3. When the power is plugged in, the white light flashes when charging, and the white light stays on when fully charged.
4. When in use, the indicator light flashes if the power is lower than 20%.
5. The charging time is about 2 hours.

Problem and Terms of Settlement

Misoperation	Causing	Terms of settlement
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit
The power is on when not in use		Turn off the power when not in use
Overcharge	1. Battery lifespan shortens	Not exceed the specified charging time
Long time, Large load work	1. Motor burns out 2. Device lifespan shortens 3. Bearing damages (Loud Noise) 4. Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply
Put the power cord at random/ Pull the power cord/ Use the device when charging	1. Battery damages and device lifespan shortens 2. Power cord brokes 3. Poor connection 4. Easy to cause short circuit	Do not pull the power cord/Do not use the device when charging

Misoperation	Causing	Terms of settlement
Replace the original charger randomly	<ol style="list-style-type: none"> 1. Device charging unsuccessfully 2. Battery damages 3. Easy to cause short circuit 	Use the original specification charger
Dust into device	<ol style="list-style-type: none"> 1. Bearing damages (Loud Noise) 2. Motor gets hot 3. Rotational speed slows down 4. The potentiometer speed regulation fails 5. Handpiece damages 	Clean dust, add the dust-proof protection of the dustproof hood/Avoid device drops or by other impacts
Device drops to the ground or by other impacts	<ol style="list-style-type: none"> 1. The Forward/OFF/Reverse button doesn't work 2. The potentiometer speed regulation fails 3. Handpiece damages 	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Replace drill bit when handpiece is not completely stopped	<ol style="list-style-type: none"> 1.The handpiece sticks and cannot be turned on 2. Handpiece damages 	Do not replace drill bit when handpiece is not completely stopped
The size of drill bit is not suitable	Can not insert the drill bit into the device	Use standard drill bit
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	<ol style="list-style-type: none"> 1. Motor burns out 2. Device lifespan shortens 	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning

Specifications

Input voltage range: 5V/2A


Email: US: service@melodysusie.com

UK: service.uk@melodysusie.com

Website: www.melodysusie.com

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality related issues. **Please apply for your extra 6-month warranty extension and download the user manual in other languages by registering on www.melodysusie.com if needed.**

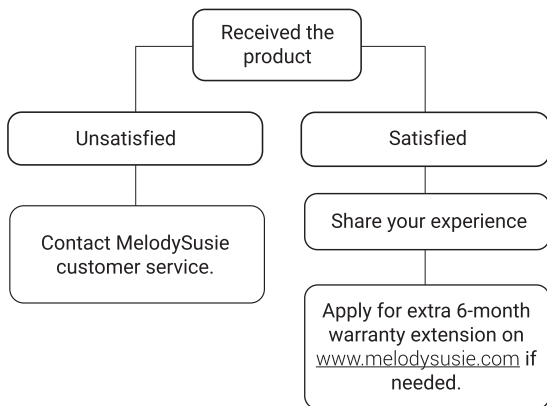

MAKE BEAUTY A NEW SMART



US: service@melodysusie.com



EU: service.uk@melodysusie.com



<http://www.melodysusie.com>



Whipple Road, Union City, CA 94578

EU

REP

AMZLAB GmbH
Laubenhof 23, 45326 Essen, Germany

UK

REP

THEMIS AR support ltd
85 Great Portland St, London, United Kingdom, W1W 7LT