




MAKE BEAUTY A NEW SMART

 service@melodysusie.com

 service.uk@melodysusie.com

 <http://www.melodysusie.com>



melodysusie

2 IN 1 Nail Lamp
with Nail Drill
User Manual

INDEX

Important Safeguards	01
Six Drill Bits	03
How to Use	04
How to Replace Drill Bit	05
Problem and Terms of Settlement	05
Specifications	09
Warranty and Customer Service	09

Thank you for choosing Melodysusie! Please read this user guide carefully and keep it in an accessible location as you may refer to it later.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire, or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

Check before Using

1. Check the power supply cord before the first use and during the life of the device. Do not use this device if it has a damaged cord or plug or it is not working properly or damaged.
2. Do not plug this device into a voltage system that is different from the voltage system specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
3. Please use the original charger only.
4. The handpiece of this device is not compatible with other models of nail drill machines from MelodySusie and other brands. Please don't connect the handpiece with other nail drill machines

Note for Using

1. Make sure your outlet supplies the correct power voltage to avoid damage to the lamp.

2. Please do not unplug the power cord when the machine is working to avoid potential damage to the lamp.
3. Do not place heavy objects on the lamp housing.
4. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
5. Do not draw out the connecting wires during use or touch the plug with the wet hand to prevent electric leakage and shock or fire. Please turn the power off after use.
6. Do not use the crooked or damaged nail drill bit or replace the bit when the power is on.
7. Adjust the speed gradually, not abruptly. Please stop to use once the unusual movement and noise happens from the handpiece.
8. Do not cover the ventilation of the handpiece avoiding burning your hand or touch any rotating part while the device is working.
9. Misuse, dropping or excessive force may cause device damage.
10. Please turn off the device and unplug the power cord before cleaning. Use a cloth with neutral detergent to clean the surface of the machine.
11. Children under 18 years of age should not use this device without parental consent and supervision.
12. If the device or the power cord is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.

Maintenance Work

1. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
2. Do not keep the device in a place which is about or more than 50°C (in a metal box, car, or other places at high temperature). Keep the handpiece dry and keep it away from the oil and grease.
3. Store the device in a cool and dry place. Do not store it in a hot or humid environment.
4. Keep the electrical cord away from heated surfaces.
5. Do not dispose of the device in heat or fire.
6. Do not clean the device with harmful chemicals or detergents.

Note for Injury

 
1. Having manicures done frequently can cause injuries to the nails as well.
2. If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.
3. Do not use the device if you have an open wound on your nail or hand.
4. If you have any skin diseases, heat-sensitive, allergic reactions, onychomycosis, or any other disorder, you should consult your doctor and medical professional before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.


If you require any technical support, contact us at service@melodysusie.com

SAVE THESE INSTRUCTIONS


Six Drill Bits

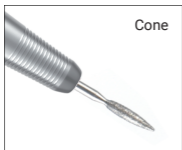


Under nails, cuticles,
and sidewalls

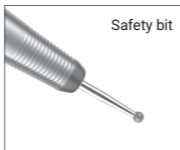 

Cuticle work, polish
nail side edge

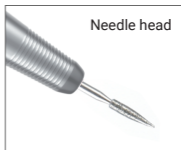 


Polish nail edge

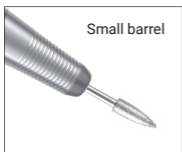 

Surface work




 Surface work and
shortening

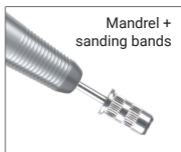

Surface work, shortening,
and removal

 How to Use

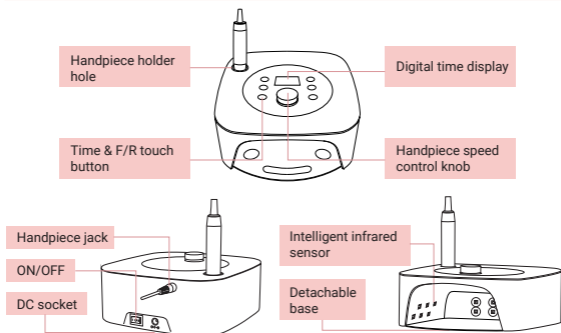


- Step 1:** Connect the handpiece to the handpiece jack.
- Step 2:** Connect the power adapter with the DC socket.
- Step 3:** Choose the required time (15s/ 30s/60s/90s) to start working, the default time is 15s.
- Step 4:** Choose a drill bit, release the handpiece, insert the drill bit into the handpiece, and lock it in place.
- Step 5:** Press the ON/OFF button to turn on the device
- Step 6:** Rotate the speed control knob to accelerate or decelerate the rotation speed.
- Step 7:** Change the rotation direction of the grinding drill bit on the F/R button if needed.
- Step 8:** Press the ON/OFF button to turn off the device, unplug the power adapter when you do not use it for a long time.

NOTE:

1. Please turn off the power when you do not use the device.
2. There has a protective film on the touch screen, please take it off to get a smooth and bright panel.

How to Replace Drill Bit

 Please make sure that the desired bits is suitable for the collet.

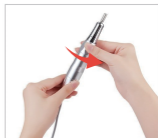

*Do not move the central barrel during operation.

*Do not cover the ventilation holes on the handpiece, when using the device.

1. Turn the central barrel clockwise until hearing a "click" sound to release the drill bit. Put the desired bit into the handpiece.
2. Turn the central barrel counterclockwise until hearing a "click" sound to lock the drill bit in place.
3. Be sure to confirm the rotation of the bit and collet. Please take care of your fingers not to be hurt by bit edge.

Problem and Terms of Settlement

Part 1 : Nail Lamp		
Malfunctions	Reasons	Terms of settlement
The nail lamp does not work well. / The beads do not turn on.	The power cord's AC plug is loose or poorly connected.	Reconnect the power cord and make sure it is properly connected or contact MelodySusie customer service team to change the power supply.
The nail lamp does not work well. / The beads do not turn on.	The power cord's AC output is not properly connected to the lamp's AC outlet.	Please make the power cord's AC output is properly connected to the lamp's AC outlet.

Malfunctions	Reasons	Terms of settlement
The nail lamp does not work well. / The beads do not turn on.	The LCD screen and the countdown are normal. But the LED light beads don't turn on.	The LED light beads are defective or the lamp's internal circuits are damaged. Please contact our customer service team for help.
	The LED light beads are defective or the lamp's internal circuits are damaged. Please contact our customer service team for help.	The light bead is damaged. Please contact MelodySusie customer service team to change for the new light beads.
	The power cord's AC plug is not compatible with outlet.	Please kindly note the plug is US plug. If you want to use the nail lamp in other countries or areas, please use it with a universal adaptor.
	When pressing the button, the lamp doesn't work.	Please check whether there is water or dust on the button surface. Clean the nail lamp with a dry cloth.
The gel nail polish cannot be cured or dried	Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors.	Please try to extend the curing time appropriately until the nail surface is completely cured. For best results, avoid moving your hand too much until curing is complete.
The gel nail polish cannot be cured or dried	The light to your nail surface is not enough.	Please adjust the angle of your nail surface until it faces the light straightly to ensure sufficient illumination.

Malfunctions	Reasons	Terms of settlement
The gel nail polish cannot be cured or dried	Please check whether the light beads have been aged.	Please contact MelodySusie customer service team to change for the new light beads.
	Use the incompatible polish, such as regular nail polish, nail lacquer.	Please use LED, UV gel nail polish or a compatible nail lamp.
	The gel polish is a bit tacky after drying.	Please wipe your nail surface with a gentle cleanser or alcohol prep pads.

Part 2: Nail Drill

Malfunctions	Causing	Terms of settlement
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit
The power is on when not in use		Turn off the power when not in use
Long time, Large load work	1. Motor burns out 2. Device lifespan shortens 3. Bearing damages (Loud Noise) 4. Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply
Put the power cord at random/ Pull the power cord	1. Device lifespan shortens 2. Power cord breaks 3. Poor connection 4. Easy to cause short circuit	Do not pull the power cord

Malfunctions	Causing	Terms of settlement
Replace the original charger randomly	1. Device damages 2. Easy to cause short circuit	Use the original specification charger
Dust into the handpiece	1. Bearing damages (Loud Noise) 2. Handpiece damages	Clean dust, add the dust-proof protection of the dustproof hood
Device drops to the ground or by other impacts	1. Device damages 2. Handpiece damages	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Insert the nail drill bit into the handpiece incorrectly /Rotate the central barrel into the place incorrectly /Take the drill bit out when the central barrel is locked	1. Drill bit falls out 2. High vibration 3. Drill bit sticks 4. The handpiece sticks and cannot be turned on 5. Handpiece damages	Insert the nail drill bit into the device correctly/If the drill bit sticks, please release the handpiece and try to take out it hard/Rotate the central barrel correctly
Replace drill bit when handpiece is not completely stopped	1. The handpiece sticks and cannot be turned on 2. Handpiece damages	Do not replace drill bit when handpiece is not completely stopped
Cover the ventilation holes on the handpiece, when using the device	1. Handpiece overheats 2. Hand burns	Do not cover the ventilation holes on the handpiece, when using the device
The size of drill bit is not suitable	1. Can not insert the drill bit into the device	Use standard drill bit
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	1. Motor burns out 2. Device lifespan shortens	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning

Specifications

Input voltage range: AC 100-240V/50-60Hz

Output Voltage: DC 24V/2A

Email: service@melodysusie.com

Website: <http://www.melodysusie.com>

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please apply for your extra 6-month warranty extension and download the user manual in other languages by registering on www.melodysusie.com if needed.**

