

melodysusie

## Sharpe Electric Nail Drill User Manual

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

### Items Included

1 x Electric Nail Drill	6 x Drill Bits
1 x Power Control Device	6 x Sanding Bands
1 x Power Supply	1 x User Manual

### Six Drill Bits

1. Mandrel + sanding bands for surface work, shortening, and polish removal
2. Large barrel for surface work and shortening
3. Small barrel for surface work
4. Safety bit for cuticle work
5. Cone for under nails, cuticles, and sidewall
6. Under the nail cleaner for safe under nail work

### How to Use

- Step 1:** Take out the nail drill. Turn central barrel clockwise until hearing a "click" sound to open the hole on the drill head.
- Step 2:** Choose one grinding drill bit and insert it at the drill head. Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.
- Step 3:** Connect the nail drill with the power control device in the "MOTOR" hole. Press the ON/OFF button to turn on the machine.
- Step 4:** Rotate the circular speed controller on the power control device to accelerate or decelerate.
- Step 5:** Change the rotation direction of the grinding drill bit on the sliding F/R button if needed.

- Step 6:** After the polishing is finished, please turn off the machine and take out the drill bit.

### How to Replace Drill Bit



1. Turn central barrel clockwise until hearing a "click" sound to release drill bit.
2. Remove current bit and insert desired bit.
3. Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.

### Charging

1. When under 1/3 battery capacity, the display will read blank.
2. Take out the adapter and connect it with the power control device in the "DC INPUT" hole.
3. Connect the power supply with adapter and insert the main plug into a wall socket.
4. Move the switch of the adapter to the "—" position to begin charging.
5. The display will show three green dots when the drill is fully charged.

### Tips

1. Charging display light will only be on when nail drill power is turned on.
2. It takes 8 hours to charge the power control device fully for the first time but shortens to only 2 hours afterwards.

### Important Safety Information

1. Make sure your outlet supplies correct power voltage to avoid damage to the device.
2. Always unplug the power cord in between use.
3. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at [service@melodysusie.com](mailto:service@melodysusie.com).
4. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
5. Children under 18 years of age should not use this device without parental consent and supervision.
6. Always consult a physician before beginning a new beauty or skincare routine.

### Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

### Specifications

Input Voltage: AC 100-240V ~ 50/60Hz  
Output Voltage: DC 17V  
Charging Time: 2 hours  
Working Time: 6-8 hours

Email: [service@melodysusie.com](mailto:service@melodysusie.com)  
Website: <http://www.melodysusie.com>  
Address: 2809 Whipple Rd, Union City, CA 94587