



## Sheen Nail Drill User Manual

### Tips

1. Don't leave device on for extended periods of time.
2. Don't rotate to open the body of the handpiece.
3. Please remove the drill bit after use and store in a dry location.

### Important Safety Information

1. Make sure your outlet supplies correct power voltage to avoid damage to the device.
2. Do not unplug the device during operation. Always slide the switch to the middle before unplugging the power cord.
3. Always unplug the power cord in between use.
4. For optimal maintenance of your nail drill, please remove the drill bit after use.
5. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at [service@melodysusie.com](mailto:service@melodysusie.com).
6. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
7. Always consult a physician before beginning a new beauty or skincare routine.
8. Children under 18 years of age should not use this device without parental consent and supervision.

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

### Items Included

1 x Electric Nail Drill	6 x Sanding Bands
1 x Power Supply	1 x User Manual
6 x Drill Bits	

### Six Drill Bits

1. Mandrel + sanding bands for surface work, shortening, and polish removal
2. Large barrel for surface work and shortening
3. Small barrel for surface work
4. Safety bit for cuticle work
5. Cone for under nails, cuticles, and sidewalls
6. Under the nail cleaner for safe under nail work

### How to Use

**Step 1:** Attach the drill bit firmly to the drill head.

**Step 2:** Connect the nail drill power supply. The sliding switch on the power cord turns the drill on and off.

**Step 3:** Move the switch to the right for clockwise spin or to the left for anticlockwise spin. Slide the speed controller (also located on the power cord) to accelerate or decelerate the rotation speed.

**Step 4:** After the polishing is finished, please turn off the machine and return the control switch to the middle position.

### Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

### Specifications

Input voltage range: 100-240V ~50/60Hz

Output Voltage: DC 12V 1A

Length: 5.1 inches

Email: [service@melodysusie.com](mailto:service@melodysusie.com)

Website: <http://www.melodysusie.com>

Address: 2809 Whipple Rd, Union City, CA 94587