

Bring Your Beauty Salon Home



service@melodysusie.com



 
service.uk@melodysusie.com



<http://www.melodysusie.com>



Whipple Road, Union City, CA 94578



AMZLAB GmbH

Laubenhof 23, 45326 Essen, Germany

melodysusie

Professional 2 In 1
Nail Dust Collector
User Manual

INDEX

Important Safeguards	01
How to Use	03
How to Replace Drill Bit	04
Problem and Terms of Settlement	05
Specifications	07
Warranty and Customer Service	07

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire, or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

Check before Using

1. Check the power supply cord before the first use and during the life of the device. Do not use this device if it has a damaged cord or plug or it is not working properly or damaged.
2. Do not plug this device into a voltage system that is different from the voltage system specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
3. Please use the original charger only.
4. The handpiece of this device is not compatible with other models of nail drill machine from MelodySusie and other brands. Please don't connect the handpiece with other nail drill machines.

Note for Using

1. Do not draw out the connecting wires during use or touch the plug with the wet hand to prevent electric leakage and shock or fire. Please turn the power off after use.

2. Do not use the crooked or damaged nail drill bit or replace the bit when the power is on.
3. Adjust the speed gradually, not abruptly. Please stop to use once the unusual movement and noise happens from the handpiece.
4. Do not cover the ventilation of the handpiece avoiding burning your hand or touch any rotating part while the device is working.
5. Misuse, dropping or excessive force may cause device damage.
6. Children under 18 years of age should not use this device without parental consent and supervision.

Maintenance Work

1. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
2. Do not keep the device in a place which is about or more than 50°C (in a metal box, car or other places in high temperature). Keep the handpiece dry and keep it away from the oil and grease.
3. Store the device in a cool and dry place. Do not store it in a hot or humid environment.
4. Keep electrical cord away from heated surfaces.
5. Do not dispose of the device in heat or fire.
6. Do not clean the device with harmful chemicals or detergents.

Note for Injury

1. Having manicures done frequently can cause injuries to the nails as well.
2. If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with the improper operation.
3. Do not use the device if you have an open wound on your nail or hand.


4. If you have any skin diseases, heat-sensitive, allergic reaction, onychomycosis or any other disorder, you should consult your doctor and medical professional before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.

If you require any technical support, contact us at service@melodysusie.com

SAVE THESE INSTRUCTIONS

How to Use

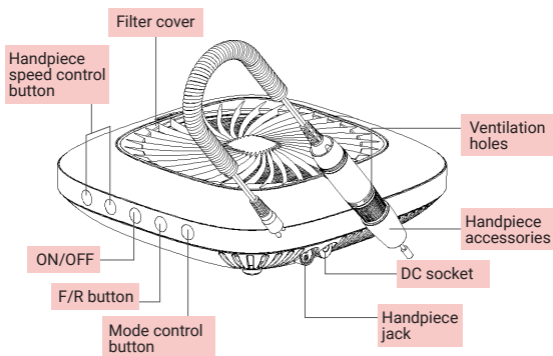

Step 1: Choose a drill bit, release the handpiece, insert the drill bit into the handpiece, and lock it in place.

Step 2: Connect the handpiece to handpiece jack.

Step 3: Connect the power supply with the power control device in the DC socket.

Step 4: Press the ON/OFF button to turn on the device.

Step 5: Choose the required mode (high/low) to start working.

Step 6: Choose "+" or "-" to accelerate or decelerate the rotation speed of the handpiece.

Step 7: Change the rotation direction of the handpiece on the F/R button if needed.

Step 8: Press the ON/OFF button to turn off the device, unplug the power adapter when you do not use it for a long time.

NOTE:

1. Please turn off the power when you do not use the nail dust collector.
2. When you take off the filter cover without turning off the power, the device will stop working to enter the safety protection mode and the indicator of the corresponding mode will flash. After you replaced the filter and put the filter cover back in place, it will back to work.
3. The filter is reusable and replaceable, please replace it after use 2-3 months.

How to Replace Drill Bit

Please make sure that the desired bit is suitable for the collet.



*Do not move central barrel during operation.

*Do not cover the ventilation holes on the handpiece, when using the device.

1. Turn central barrel clockwise until hearing a "click" sound to release drill bit. Put the desired bit into the handpiece.
2. Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.
3. Be sure to confirm the rotation of the bit and collet. Please take care of your fingers not to be hurt by bit edge.

Problem and Terms of Settlement

Misoperation	Causing	Terms of settlement
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit
The power is on when not in use		Turn off the power when not in use
Long time, Large load work	1. Motor burns out 2. Device lifespan shortens 3. Bearing damages (Loud Noise) 4. Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply
Put the power cord at random/ Pull the power cord	1. Device lifespan shortens 2. Power cord brokes 3. Poor connection 4. Easy to cause short circuit	Do not pull the power cord

Misoperation	Causing	Terms of settlement
Replace the original charger randomly	<ol style="list-style-type: none"> 1. Device damages 2. Easy to cause short circuit 	Use the original specification charger
Dust into the handpiece	<ol style="list-style-type: none"> 1. Bearing damages (Loud Noise) 2. Handpiece damages 	Clean dust, add the dust-proof protection of the dustproof hood
Device drops to the ground or by other impacts	<ol style="list-style-type: none"> 1. Device damages 2. Handpiece damages 	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Insert the nail drill bit into the handpiece incorrectly /Rotate the central barrel into the place incorrectly /Take the drill bit out when the central barrel is locked	<ol style="list-style-type: none"> 1. Drill bit falls out 2. High vibration 3. Drill bit sticks 4. The handpiece sticks and cannot be turned on 5. Handpiece damages 	Insert the nail drill bit into the device correctly/If the drill bit sticks, please release the handpiece and try to take out it hard/Rotate the central barrel correctly
Replace drill bit when handpiece is not completely stopped	<ol style="list-style-type: none"> 1. The handpiece sticks and cannot be turned on 2. Handpiece damages 	Do not replace drill bit when handpiece is not completely stopped
Cover the ventilation holes on the handpiece, when using the device	<ol style="list-style-type: none"> 1. Handpiece overheats 2. Hand burns 	Do not cover the ventilation holes on the handpiece, when using the device
The size of drill bit is not suitable	<ol style="list-style-type: none"> 1. Can not insert the drill bit into the device 	Use standard drill bit
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	<ol style="list-style-type: none"> 1. Motor burns out 2. Device lifespan shortens 	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning

Specifications

Input voltage range: 100-240V/50-60Hz

Output Voltage: 24.0V 2.0A

Email: service@melodysusie.com

Email: service.uk@melodysusie.com

Website: www.melodysusie.com

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

