

## Bring Your Beauty Salon Home



service@melodysusie.com



 
service.uk@melodysusie.com



<http://www.melodysusie.com>



Whipple Road, Union City, CA 94578



AMZLAB GmbH

Laubenhof 23, 45326 Essen, Germany



*melodysusie*

Professional Nail  
Dust Collector  
**User Manual**

# INDEX

---

|                                       |    |
|---------------------------------------|----|
| Important Safeguards .....            | 01 |
| How to Use .....                      | 03 |
| Problem and Terms of Settlement ..... | 04 |
| Specifications .....                  | 05 |
| Warranty and Customer Service .....   | 05 |

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire, or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

### Check before Using

1. Check the power supply cord before the first use and during the life of the device. Do not use this device if it has a damaged cord or plug or it is not working properly or damaged.
2. Do not plug this device into a voltage system that is different from the voltage system specified on the device or charger.
3. Use with improper voltage will damage the device and VOID warranty.
4. Please use the original charger only.

### Note for Using

1. Do not draw out the connecting wires during use or touch the plug with the wet hand to prevent electric leakage and shock or fire. Please turn the power off after use.

2. Misuse, dropping or excessive force may cause device damage.
3. Children under 18 years of age should not use this device without parental consent and supervision.

### Maintenance Work

1. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
2. Do not keep the device in a place which is about or more than 50°C (in a metal box, car or other places in high temperature). Keep the device dry and keep it away from the oil and grease.
3. Store the device in a cool and dry place. Do not store it in a hot or humid environment.
4. Keep electrical cord away from heated surfaces.
5. Do not dispose of the device in heat or fire.
6. Do not clean the device with harmful chemicals or detergents.

### Note for Injury

1. Having manicures done frequently can cause injuries to the nails as well.
2. Do not use the device if you have an open wound on your nail or hand.
3. If you have any skin diseases, heat-sensitive, allergic reaction, onychomycosis or any other disorder, you should consult your doctor and medical professional before using the device.


*The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.*

*If you require any technical support, contact us at [service@melodysusie.com](mailto:service@melodysusie.com)*

**SAVE THESE INSTRUCTIONS**

## How to Use

---

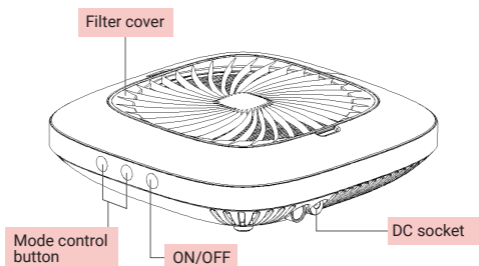

**Step 1:** Connect the power supply with the power control device in the DC socket.

**Step 2:** Press the ON/OFF button to turn on the device, choose the required mode ( high/low ) to start working.

**Step 3:** Press the ON/OFF button to turn off the device, unplug the power adapter when you do not use it for a long time.

### **NOTE:**

1. Please turn off the power when you do not use the nail dust collector.
2. When you take off the filter cover without turning off the power, the device will stop working to enter the safety protection mode and the indicator of the corresponding mode will flash. After you replaced the filter and put the filter cover back in place, it will back to work.
3. The filter is reusable and replaceable, please replace it after use 2-3 months.

## Problem and Terms of Settlement

| Misoperation   | Causing   | Terms of settlement   |
|--|---|---|
| The power is on when not in use  | 1. Motor burns out  | Turn off the power when not in use  |
| Long time, Large load work   | 1. Motor burns out<br>2. Device lifespan shortens   | The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature. |
| Insert into a mismatched power supply  | 1. Motor burns out  | According to the device voltage requirements, insert the matching power supply  |
| Put the power cord at random/ Pull the power cord  | 1. Device lifespan shortens<br>2. Power cord brokes<br>3. Poor connection<br>4. Easy to cause short circuit | Do not pull the power cord  |
| Replace the original charger randomly  | 1. Device damages<br>2. Easy to cause short circuit   | Use the original specification charger  |
| Device drops to the ground or by other impacts   | 1. Device damages   | Avoid device drops or by other impacts  |
| Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device | 1. Motor burns out<br>2. Device lifespan shortens   | Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning  |

## Specifications

---

Input voltage range: 100-240V/50-60Hz

Output Voltage: 24.0V 1.0A

Email: [service@melodysusie.com](mailto:service@melodysusie.com)

Email: [service.uk@melodysusie.com](mailto:service.uk@melodysusie.com)

Website: [www.melodysusie.com](http://www.melodysusie.com)

## Warranty and Customer Service

---

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

