

S SERIES

JADE ELECTRIC NAIL DRILL

Instruction Manual



INDEX

- Check before Using
- Note for Battery
- Note for Using
- Maintenance Work
- Note for Injury
- Six Drill Bits
- 6 How to Use
- How to Replace Drill Bit
- 6 Charging
- 6 Problems and Terms of Settlement
- 8 Specifications
- 8 Warranty and Customer Service



Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

O1 Check before Using

- Check the power supply cord before the first time use and during the life of the device. Do not use the device if it has a damaged cord or plug, or if it is not working properly.
- Do not plug the device into a voltage system that is not specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
- Use the original charger only.
- The handpiece of this nail drill is not compatible with other models of nail drill machine from MelodySusie and other brands. Please don't connect the handpiece with a different nail drill machine.

O2 Note for Battery

- The Battery needs to be charged fully before first use to ensure optimal performance.
- Do not overcharge the device or use it when it is charging. Charge the device in well-ventilated condition with 0℃ ~40 C.



- Do not charge the device close to flammable or explosive materials. When charging the device, please do not cover it with clothes or other things.
- If the device is not used for long periods of time, you should charge and discharge once every three months. In normal conditions, the battery performance will decline over several years.

03 Note for Using

- To prevent electric leakage and shock or fire, do not draw out the connecting wires during use or touch the plug with the wet hand. Turn the power off after use.
- Do not use the crooked or damaged nail drill bit or replace the bit when power is on.
- 3 Do not adjust the speed abruptly, stop use once the unusual movement and noise happens.
- Misuse, dropping or excessive force may cause device damage.
- Minor should not use this device without parental consent and supervision.
- Do not cover the ventilation of the handpiece avoiding burning your hand or touch any rotating part while the device is working.

04 Maintenance Work

- Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
- Do not keep the device in a metal box, car, or other places at high temperature (more than 50°C). Keep the handpiece dry and away from oil and grease.



- Do not store the device in a hot or humid environment. Store it in a cool and dry place.
- Keep the electrical cord away from heated surfaces.
- Do not dispose of the device in heat or fire.
- 6 Do not clean the device with harmful chemicals or detergents.

05 Note for Injury

- Having manicures done frequently can cause injuries to the nails as well.
- If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.
- 3 Do not use the device if you have an open wound on your nail or hand.
- If you have any skin diseases, heat-sensitive, allergic reactions, onychomycosis, or any other disorder, you should consult your doctor and medical professionals before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.

If you require any technical support, please contact us.

SAVE THE INSTRUCTION MANUAL



06 Six Drill Bits



Needle Head Polish nail edge



Cone Under nails, cuticles, and sidewalls



Mandrel+Sanding Bands Surface work, shortening, and removal




Safety Bit Cuticle work, polish nail side edge

 


Large Barrel
Surface work for
backfill cutting,
shorten,
infill cuticle



Small Barrel Surface work

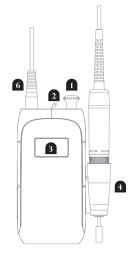



- ON/OFF Speed control knob
- 2 F/R button
- LCD screen (It will show the RPM and the battery)
- 4 Handpiece fixture

- DC socket
- 6 Handpiece connector



07 How to Use?

- Step 1: Choose one grinding drill bit, release the handpiece, insert the drill bit at the drill head and lock it in place.
- Step 2: Rotate the ON/OFF button to turn on the device.
- Step 3: Rotate the speed control knob to accelerate or decelerate the rotation speed.
- **Step 4:** Change the rotation direction of the grinding drill bit on the F/R button if needed.
- **Step 5:** After the polishing is finished, please rotate the central barrel and take out the drill bit. The handpiece fixture could be used to place the handpiece when not in use.

O8 How to Replace Drill Bit?

Please make sure that the desired bit is suitable for the collet.







- Do not move central barrel during operation.
- Do not cover the ventilation holes on the handpiece, when using the device.
- 1 Turn central barrel clockwise until hearing a "click" sound to release drill bit. Taking out the blank bar. Put the desired bit into the handbiece.
- 2 Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.
- Be sure to confirm the rotation of the bit and collet. Please take care of your fingers not to be hurt by bit edge.



09 Charging

- Take out the adapter and connect it with the DC Socket.
- Connect the power supply with the adapter and insert the main plug into a wall socket.
- 3 The LCD screen will show the battery.

10 Problem and Terms of Settlement

Malfunction	Reasons	Solutions
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit.
The power is on when not in use		Turn off the power when not in use.
Long time, Large load work	Notor burns out Device lifespan shortens Bearing damages (Loud Noise) Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply.
Put the power cord at random/ Pull the power cord	Device lifespan shortens Power cord brokes Poor connection Easy to cause short circuit	Do not pull the power cord.



Malfunction	Reasons	Solutions
Replace the original charger randomly	Device damages Easy to cause short circuit	Use the original specification charger.
Dust into device	Bearing damages (Loud Noise) Motor gets hot Rotational speed slows down The potentiometer speed regulation fails Handpiece damages	Clean dust, add the dust-proof protection of the dustproof hood.
Device drops to the ground or by other impacts	1. The ON/OFF button doesn't work 2. The potentiometer speed regulation fails 3. F/R button doesn't work 4. Handpiece damages	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Insert the nail drill bit into the device incorrectly /Rotate the central barrel into the place incorrectly /Take the drill bit out when the central barrel is locked	1. Drill bit falls out 2. High vibration 3. Drill bit stucks 4. The Handpiece stucks and cannot be turned on 5. Handpiece damages	Insert the nail drill bit into the device correctly/If the drill bit stucks, please release the handpiece and try to take out it hard/Rotate the central barrel correctly.
Replace drill bit when handpiece is not completely stopped	1.The handpiece stucks and cannot be turned on 2. Handpiece damages	Do not replace drill bit when handpiece is not completely stopped.
Cover the ventilation holes on the handpiece, when using the device	Handpiece overheats Hand burns	Do not cover the ventilation holes on the handpiece, when using the device.
The size of drill bit is not suitable	Can not insert the drill bit into the device	Use standard drill bit.



Malfunction	Reasons	Solutions
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	1. Motor burns out 2. Device lifespan shortens	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning.
Overcharge	1. Battery lifespan shortens	Not exceed the specified charging time

11 Specifications

Input voltage range: 100-240V 50/60Hz Output voltage: 12.6V/0.8A

E-mail: service@melodysusie.com E-mail: service.uk@melodysusie.com Website: www.melodysusie.com

12 Warranty and Customer Service

MelodySusie offers a 6 months limited warranty on quality related issues. Please apply for your extra 6 months warranty extension and download the instruction manual in other languages by registering on www.melodysusie.com if needed.

Thank you for purchasing from MelodySusie.
You are welcome to share your experience after receiving the product.
Please contact us for any technical support if needed.

- www.melodysusie.com
- US Service: service@melodysusie.com
- UK Service: service.uk@melodysusie.com
- FR Service: service.fr@melodysusie.com
- DE Service: service.de@melodysusie.com
- Whipple Rd, Union City, CA 94578

EU REP AMZLAB GmbH Laubenhof 23, 45326 Essen, Germany

THEMIS AR support Itd.

85 Great Portland St. London, United Kingdom, W1W 7LT