

# melodysusie

## Shimmer Electric Nail Drill User Manual

**Step 5:** To change the rotation direction of the grinding drill bit, switch on the front, lower part of the base.

**Step 6:** After the polishing is finished, please turn off the machine and take out the drill bit.

### How to Replace Drill Bit



1. Turn central barrel clockwise until hearing a "click" sound to release drill bit.
2. Remove current bit and insert desired bit.
3. Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.

### Important Safety Information

1. Make sure your outlet supplies correct power voltage to avoid damage to the device.
2. Do not unplug the device during operation.
3. Always unplug the power cord in between use.
4. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at [service@melodysusie.com](mailto:service@melodysusie.com).
5. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
6. Always consult a physician before beginning a new beauty or skincare routine.

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

### Items Included

1 x Electric Nail Drill	6 x Sanding Bands
1 x DC Adapter	1 x Foot Pedal
6 x Drill Bits	1 x User Manual

### Six Drill Bits

1. Mandrel + sanding bands for surface work, shortening, and polish removal
2. Large barrel for surface work and shortening
3. Small barrel for surface work
4. Safety bit for cuticle work
5. Cone for under nails, cuticles, and sidewall
6. Under the nail cleaner for safe under nail work

### How to Use

- Step 1:** Rotate the spindle to the left until you hear a "click" sound and insert the bit of your choice into the hole at the tip. Rotate the spindle to the right to attach firmly.
- Step 2:** Connect the nail drill to the base. Then plug the adapter into the base of the nail drill. Optional: plug the foot pedal into to the base.
- Step 3:** The indicator light will be on when the nail drill is connected with a power supply.
- Step 4:** Flip the switch on the back of the base to "FOOT" to use the foot pedal for speed control or to "HAND" to control the speed with knob on the front base.

7. Children under 18 years of age should not use this device without parental consent and supervision.

### Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please register on our website to extend your warranty and to view this manual in other languages.**

### Specifications

Input Voltage: AC100-240V/50-60Hz  
Output Voltage: DC 0-12V/18V

Email: [service@melodysusie.com](mailto:service@melodysusie.com)  
Website: <http://www.melodysusie.com>  
Address: 2809 Whipple Rd, Union City, CA 94587