

Shine Electric Nail Drill
User Manual

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

#### Items Included

1 x Electric Nail Drill6 x Drill Bits1 x Power Control Device6 x Sanding Bands1 x Power Supply1 x User Manual

## Six Drill Bits

- Mandrel + sanding bands for surface work, shortening, and polish removal
- 2. Large barrel for surface work and shortening
- 3. Small barrel for surface work
- 4. Safety bit for cuticle work
- 5. Cone for under nails, cuticles, and sidewall
- 6. Under the nail cleaner for safe under nail work

## How to Use

- Step 1: Turn central barrel clockwise (from "S" to "R") until hearing a "click" sound and the hole on the drill head opens.
- Step 2: Choose one grinding drill bit and insert it at the drill head. Turn central barrel counterclockwise (from "R" to "S") until hearing a "click" sound to lock drill bit in place.
- Step 3: Connect the nail drill with the power control device in the "MOTOR" hole.

- Step 4: Connect the power supply with the power control device in the "DC INPUT" hole.
- Step 5: Press the ON/OFF button to turn on the machine.
- Step 6: Rotate the circular speed controller on the power control device to accelerate or decelerate.
- Step 7: Change the rotation direction of the grinding drill bit on the sliding F/R button if needed.
- Step 8: After the polishing is finished, please rotate the spindle and take out the drill bit. The top of the power control device could be used to place the nail drill when not in use.

# **How to Replace Drill Bit**







- Turn central barrel clockwise until hearing a "click" sound to release drill bit.
- 2. Remove current bit and insert desired bit.
- 3. Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.

## Important Safety Information

- 1. Make sure your outlet supplies correct power voltage to avoid damage to the device.
- 2. Do not unplug the device during operation.
- 3. Always unplug the power cord in between use.

- Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at service@melodysusie.com.
- 5. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
- Children under 18 years of age should not use this device without parental consent and supervision.
- Always consult a physician before beginning a new beauty or skincare routine.

# **Warranty and Customer Service**

MelodySusie offers a 6-month limited warranty on qualityrelated issues. **Please register on our website to extend your warranty and to view this manual in other languages**.

# Specifications

Input Voltage Range: AC 100-240V/50-60Hz Output Voltage: DC 12V/2A Size: 4.75 x 3.15 x 2.48 inches

N.W: 1.38 lbs

Email: <a href="mailto:service@melodysusie.com">service@melodysusie.com</a>
Website: <a href="http://www.melodysusie.com">http://www.melodysusie.com</a>

Address: 2809 Whipple Rd, Union City, CA 94587