Bring Your Beauty Salon Home

- service@melodysusie.com
- http://www.melodysusie.com
- 2809 Whipple Road, Union City, CA 94587

melodysusie

Sparkle Rechargeable Nail Drill **User Manual**

INDEX

Items Included	1
Six Drill Bits · · · · · · · · · · · · · · · · · · ·	1
How to Use ·····	1
How to Replace Drill Bit	3
Charging ·····	3
Problem and Terms of Settlement ·····	4
Important Safety Information	5
Question and Answer ·····	6
Best Choice For Nail Drill Bits	7
Specifications	8
Warranty and Customer Service	9

Thank you for choosing MelodySusie! Please read this user quide carefully and keep it in an accessible location so you may refer to it later.

Items Included

- 1 x Rechargeable Nail Drill
- 1 x Power Supply
- 1 x Handpiece Holder
- 1 x Ceramic Nail Drill Bit

- 6 x Drill Bits
 - 6 x Sanding Bands
 - 1 y Hser Manual

Six Drill Bits



Under nails, cuticles, and sidewalls



Surface work



Cuticle work, polish nail side edge



shortening



Polish nail edge



Surface work, shortening, and removal

How to Use

Step 1: Choose one grinding drill bit, release the handpiece. insert the drill bit at the drill head and lock it in place.

- Step 2: Rotate the ON/OFF button to turn on the device.
- Step 3: Rotate the speed control knob to accelerate or decelerate the rotation speed.
- Step 4: Change the rotation direction of the grinding drill bit on the F/R button if needed.
- Step 5: After the polishing is finished, please rotate the central barrel and take out the drill bit.

NOTE: * When connecting the handpiece, please align with the "

" of the handpiece connector and the "

" of the handpiece jack correctly.



How to Replace Drill Bit

Originally a blank bar is attached but it can be removed as you like. Please make sure that the desired bit is suitable for the collet.







*Do not move central barrel during operation.

- Turn central barrel clockwise until hearing a "click" sound to release drill bit. Taking out the blank bar. Put the desired bit into the handpiece.
- Turn central barrel counterclockwise until hearing a "click" sound to lock drill bit in place.
- Be sure to confirm the rotation of the bit and collet. Please take care of your fingers not to be hurt by bit edge.

Charging

- When the display flashes, it means that the drill needs to be charged.
- 2. Take out the adapter and connect it with the DC Socket.
- Connect the power supply with the adapter and insert the main plug into a wall socket.
- The display will show four green dots when the drill is fully charged.

Problem and Terms of Settlement

Misoperation	Causing	Terms of settlement
Changing the nail drill bit when the power is on	Motor burns out Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit
The power is on when not in use		Turn off the power when not in use
Overcharge	1. Battery lifespan shortens	Not exceed the specified charging time
Long time, Large load work	Motor burns out Device lifespan shortens Bearing damages (Loud Noise) Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply
Put the power cord at random/ Pull the power cord/ Use the device when charging	Battery damages and device lifespan shortens Power cord brokes Poor connection Easy to cause short circuit	Do not pull the power cord/Do not use the device when charging
Replace the original charger randomly	Device charging unsuccessfully Battery damages Easy to cause short circuit	Use the original specification charger
Dust into device	Bearing damages (Loud Noise) Motor gets hot Rotational speed slows down The potentiometer speed regulation fails Handpiece damages	Clean dust, add the dust-proof protection of the dustproof hood

Misoperation	Causing	Terms of settlement
Device drops to the ground or by other impacts	The ON/OFF button doesn't work The potentiometer speed regulation fails F/R button doesn't work Handpiece damages	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Insert the nail drill bit into the device incorrectly /Rotate the central barrel into the place incorrectly/Take the drill bit out when the central barrel is locked	Drill bit falls out High vibration Drill bit stucks The Handpiece stucks and cannot be turned on Handpiece damages	Insert the nail drill bit into the device correctly/lf the drill bit stucks, please release the handpiece and try to take out it hard/Rotate the central barrel correctly
Replace drill bit when handpiece is not completely stopped	1.The handpiece stucks and cannot be turned on 2. Handpiece damages	Do not replace drill bit when handpiece is not completely stopped
The size of drill bit is not suitable	Can not insert the drill bit into the device	Use standard drill bit
Water into the device/ Operate in wet or moist conditions/Use a wet cloth to clean the device	Motor burns out Device lifespan shortens	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning

Important Safety Information

- *Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.
- Make sure your outlet supplies correct power voltage to avoid damage to the device. It is forbidden to draw out the connecting wires during use, and the power switch needs to be turned off after use.
- Please use standard nail drill bit. Don't use crooked or damaged nail drill bit to prevent the device unnormal vibration and voice.
- Please stop to use once the unusual movement and noise happens.

- Please do not touch any rotating part while the device is working.
- 5. Please charge the device in well ventilated condition with 0 °C ~40 °C. Do not keep the device in a place which is about or more than 50 °C (in a metal box, car or other place in hight temperature).
- Please keep the handpiece dry and keep it away from the oil and grease.
- Please do not charge the device close to flammable or explosive materials.
- 8. When charging the device, please do not cover it with cloth or other things. Please do not use the device when the connecting wires broke and do not touch the plug with the wet hand to prevent electric leakage and shock or fire.
- Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at service@melodysusie.com
- 10. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
- 11. Children under 18 years of age should not use this device without parental consent and supervision.
- 12. If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.

Ouestion and Answer

Question: Why couldn't I insert the drill bit into my handpiece?

Answer: 1. Please make sure that the nail drill bit is 3/32"standared size.

2. Please confirm that you have released the handpiece. Turn central barrel clockwise until hearing a "click" sound to open the handpiece.

Question: Why the handpiece did not rotate, when I turned on the nail drill?

- Answer: 1. Please check whether the battery is too low to turn it on. If yes, please charge it.
 - 2. Please connect all the wires well to avoid poor connection
 - 3. Nail drill self-protection mechanism: when there is an unnormal pressure, the handpiece will stop to rotate. In that case, please turn off the nail drill and adjust the speed to Min. Then, turn on the nail drill again.

Best Choice For Nail Drill Bits

In order to work efficiently and effectively with your nail drill, it is also important to choose the best bits.

MelodySusie have a series of premium quality ceramic nail bits and complete carbides nail bits set that can be used for gels. acrylics, hyper-keratosis and for every nail service from under nail cleaning, cuticle care, backfill cutting, shortening and morel





Key Features for MS Nail Drill Bits:

- Personal Use and Clean The ceramic material is antibacterial, corrosion, as well as no clogging for your nails, the smooth surface is easy to be cleaned by water and disinfected by alcohol.
- 2. Multifunctional-hard-wearing, rust resistant, and durability.
- 3. Sharp-remove the gel like a breeze and cut your time in a half!
- High Precision Bits-thanks to the 100% accurate diameter and perfectly shaped tips, it is impossible to damage the handpiece.
- Universal Size professional 3/32" stainless steel shank diameter fits for most electric manicure nail file machine on the market
- Compact and Unique Design-with the portable design and lightweight, it is convenient for both personal and family use anytime and anywhere.

If you are interested in more nail drill bits set, please search "MelodySusie nail drill bits" on Amazon for any further information

Specifications

Input voltage range: AC100-240V/50-60Hz 0.6A

Output voltage: 24.0V 1.0A Charging time: 2 hours

Email: service@melodysusie.com Website: www.melodysusie.com

Address: 2809 Whipple Rd, Union City, CA 94587

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on qualityrelated issues. Please register on our website to extend your warranty and to view this manual in other languages.

