

X SERIES

3 IN 1 NAIL DRILL WITH NAIL ART LAMP

Instruction Manual



INDEX

- Check before Using
- Note for Battery
- Note for Using
- Maintenance Work
- Note for Injury
- Six Drill Bits
- 6 How to Use
- 6 Charging
- Problems and Terms of Settlement
- 9 Specifications
- Warranty and Customer Service



Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire or injury to persons,

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

O1 Check before Using

- Check the power supply cord before the first time use and during the life of the device. Do not use the device if it has a damaged cord or plug, or if it is not working properly.
- Do not plug the device into a voltage system that is not specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
- Use the original charger only.
- The handpiece of this device is not compatible with other models of nail drill machines from MelodySusie and other brands. Do not connect the handpiece with other nail drill machines.



02 Note for Battery

- The battery needs to be charged fully before the first use to ensure optimal performance.
- Do not over charge the device or use it when charging.
- Charge the device in a well-ventilated condition with 0°C-40°C. Do not charge the device close to flammable or explosive materials.
- Do not cover any thing on it when charging.
- Charge the device once every three months to keep it in normal conditions, the battery performance will decline over several years.

03 Note for Using

- To prevent electric leakage and shock or fire, do not draw out the connecting wires during use or touch the plug with the wet hand. Turn the power off after use.
- Do not use the crooked or damaged nail drill bit.
- 3 Do not replace the bit when the power is on.
- Do not adjust the speed abruptly, stop use once the unusual movement and noise happens.
- Misuse, dropping or excessive force may cause device damage.
- Minor should not use this device without parental consent and supervision.

04 Maintenance Work

Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.



- Do not keep the device in a metal box, car, or other places at high temperature(more than 50°C). Keep the handpiece dry and away from oil and grease.
- 3 Do not store the device in a hot or humid environment. Store it in a cool and dry place.
- Keep the electrical cord away from heated surfaces.
- Do not dispose of the device in heat or fire.
- 6 Do not clean the device with harmful chemicals or detergents.

05 Note for Injury

- Having manicures done frequently can cause injuries to the nails as well
- If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.
- Do not use the device if you have an open wound on your nail or hand.
- If you have any skin diseases, heat-sensitive, allergic reactions, onychomycosis, or any other disorder, you should consult your doctor and medical professional before using the device.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions. If you require any technical support, please contact us.

SAVE THE INSTRUCTION MANUAL



06 Six Drill Bits



Small Barrel Surface work



Cone Under nails, cuticles, and sidewalls



Mandrel+Sanding Bands Surface work, shortening, and



Safety Bit Cuticle work, polish nail side edge



removal

Needle Head Polish nail edge




Large Barrel Surface work for backfill cutting, shorten. infill cuticle






ON/OFF F/R Button


Speed Controller

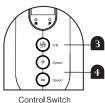

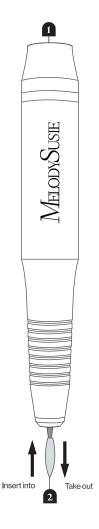



Nail Art Lamp

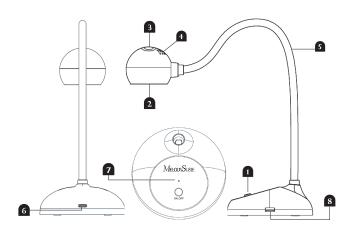

- ON/OFF
- 2 LED Light/UV Light
- 3 Touch Switch
- 4 Heat Dissipation Hole

- Flexible Tube
- 6 Charge Jack
 - Charging Indicator
- 8 USB Output Port

07 How to Use

Step 1: Insert the drill bit firmly into the drill.

Step 2 : Connect the nail drill power cord to the USB port of the lamp.

Step 3: Press the "ON/OFF" button of the nail lamp to power on the device.



For the Lamp

- The lamp into LED Light Mode.
- Touch () once to turn to UV Light Mode.
- Touch twice to turn off the light.
- The UV Light Mode will switch into LED Light Mode after 60 seconds curing automatically.

For the Nail Drill

- Press "ON/OFF" button of the control switch over 2 seconds to turn on the device.
- Press "F/R" button to choose the direction of spinning.
- Press the speed controller "+" or "-" to accelerate or decelerate the rotation speed.
- After the polishing is finished, press "ON/OFF" button of the control switch over 2 seconds to turn off the device.

Step 4: Press the "ON/OFF" button to power off the device.

NOTE:

- LED Light Mode: Without curing function, can only provide the lighting requirement for manicure work.
- UV Light Mode: Work for nail gel polish curing (When used in conjunction with MelodySusie Nail Lamp whose power is higher than 48W).
- Avoid eye contact directly with the light, which may cause eye injury.

08 Charging

- Connect the charging cord to the nail lamp and insert it into the adaptor.
- Insert the main plug into a wall socket.
- Indicator will change from RED to GREEN when the device is fully charged.



09 Problems and Terms of Settlement

Part 1: Nail Art Lamp

Malfunction	Reasons	Solutions
Device drops to the ground or by other impacts.	The "ON/OFF" button doesn't work. Nail Lamp damages.	Avoid device drops or by other impacts.
Long time, large load work.	Burns out, or device lifespan shortens.	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
The beads do not turn on.	The LED light beads are defective, or the lamp's internal circuits are damaged.	When the light beads are damaged, please contact MelodySusie customer service team for help.
The gel nail polish cannot be cured or dried.	Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors.	1. Please try to extend the curing time appropriately until the nail surface is completely cured. 2. Please make sure the naillamp is closer enough to your nails, and avoid moving your hand too much until curing is complete. 3. Please adjust the naillight angle to make sure the light can reach your nails directly. 4. When used in conjunction with MelodySusie Nail Lamp(Power higher than 48W).
Overcharged.	Battery lifespan shortens.	Not exceed the specified charging time.
Insert into a mismatched power supply.	Burns out.	According to the device voltage requirements insert the matching power supply.



Malfunction	Reasons	Solutions
Put the power cord at random, or use the device when charging.	Battery damages and device lifespan shortens. Power cord brokes. Poor connection.	Do not pull the power cord, or do not use the device when charging.
Water into the device, or operate in wet or moist conditions, or use a wet cloth to clean the device.	Motor burns out. Device lifespan shortens.	Do not operate in wet or moist conditions, only a dry cloth is allowed for cleaning.

Part 2 : Nail Drill

Malfunction	Reasons	Solutions
Changing the nail drill bit when the power is on.	- 1. Motor burns out. 2. Bearing damages (Loud Noise).	Turn off the power when changing the nail drill bit.
When not in use, the speed is adjusted to the minimum, and the power is on.		Turn off the power when not in use.
Long time, large load work.	1. Motor burns out. 2. Device lifespan shortens. 3. Bearing damages (Loud noise).	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power cord.	Motor burns out.	According to the device voltage requirements, insert the matching power cord.
Put the power cord at random/Pull the power cord.	Damaged power cord. Poor connection.	Do not pull the power cord.
Replace the original cord randomly.	Motor burns out. Easy to cause short circuit.	Use the original specification cord.



Malfunction	Reasons	Solutions
Dust into device/device drops to the ground or other impacts.	Battery damages (Loud noise). Motor gets hot. Rotational speed slows down.	Clean dust, add the dust-proof protection of the dustproof-hood/Avoid device drops or by other impacts.
Insert nail drill bit into the device incorrectly.	1. Drill bit falls out. 2. High vibration. 3. Drill bit stucks.	Insert the nail drill bit into the device correctly/If the drill bit is stuck, please try to take it out harder.
The size of drill bit is not suitable.	Can not insert the drill bit into the device.	Use standard drill bit.
Water into the device/Operate in wet or moist conditions/Use a wet cloth clean the device.	Motor burns out. Device lifespan shortens.	Do not operate in wet or moist conditions, only a dry cloth is allowed for cleaning.

10 Specifications

Input voltage range: 100-240V 50/60Hz Output voltage: 5V/2A

E-mail: service@melodysusie.com E-mail: service.uk@melodysusie.com Website: www.melodysusie.com

11 Warranty and Customer Service

MelodySusie offers a 6 months limited warranty on quality related issues. Please apply for your extra 6 months warranty extension and download the instruction manual in other languages by registering on www.melodysusie.com if needed.

Thank you for purchasing from MelodySusie. You are welcome to share your experience after receiving the product. Please contact us for any technical support if needed.



05 Service: service@melodysusie.com

UK Service: service.uk@melodysusie.com

FR Service: service.fr@melodysusie.com

DE Service: service.de@melodysusie.com

Whipple Rd, Union City, CA 94578

ELL DED AMZLAB GmbH

Laubenhof 23, 45326 Essen, Germany

UK REP THEMIS AR support ltd. 85 Great Portland St. London, United Kingdom, W1W 7LT